



ProMix® PD2K Proportioner for Automatic Spray Applications

332709H
EN


Electronic positive displacement proportioner for fast-setting two-component materials. System for automatic dispense, with Advanced Display Modules. For professional use only.



Important Safety Instructions

Read all warnings and instructions in this manual and in your installation, operation, and associated component manuals. Save these instructions.

See page 3 for model part numbers and approvals information.

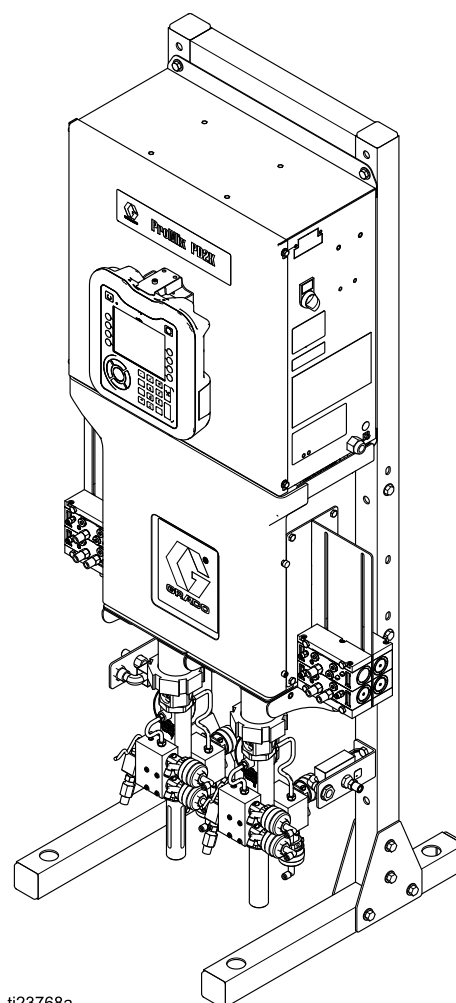


Contents

| | | | |
|---|----|---|----|
| Models..... | 3 | Optional Cables and Modules | 43 |
| Related Manuals | 5 | Communications Options (for PLC and AWI) | 44 |
| Warnings | 6 | Repair..... | 45 |
| Important Isocyanate (ISO) Information | 9 | Before Servicing | 45 |
| Material Self-ignition..... | 9 | Pressure Relief Procedure..... | 46 |
| Troubleshooting..... | 11 | Repairing the Advanced Display Module (ADM)..... | 47 |
| System Troubleshooting..... | 11 | Servicing the Control Box | 48 |
| Error Code Troubleshooting..... | 12 | Servicing the Fluid Section | 57 |
| Power Barrier Board Diagnostics | 25 | Parts..... | 61 |
| Isolation Board Diagnostics | 26 | Proportioner Parts (Standard Models) | 61 |
| Enhanced Fluid Control Module (EFCM) Diagnostics | 27 | Proportioner Parts (Dual Panel Models)..... | 64 |
| Pump Module Diagnostics | 28 | Control Box Parts..... | 67 |
| Advanced Display Module Diagnostics | 29 | Control Box Parts (Dual Panel Models) | 70 |
| Electrical Schematics..... | 30 | Solenoid Manifold Parts..... | 73 |
| Standard Models (AC1000 and AC2000) | 30 | Technical Specifications..... | 74 |
| Dual Panel Models (AC1002 and AC2002) | 37 | California Proposition 65 | 75 |

Models

See Figs. 1–7 for component identification labels, including approval information and certification.
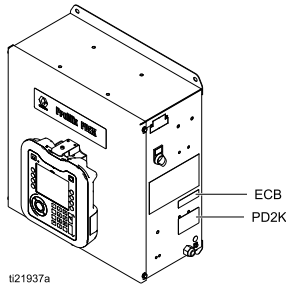
| Part No. | Series | Maximum Air Working Pressure | Maximum Fluid Working Pressure | Location of PD2K and Electrical Control Box (ECB) Labels |
|------------------|--------|------------------------------|---------------------------------|--|
| AC0500 AC0502 | A | 100 psi (0.7 MPa, 7.0 bar) | 300 psi (2.068 MPa, 20.68 bar) |  <p>t21937a</p> |
| AC1000 AC1002 | A | 100 psi (0.7 MPa, 7.0 bar) | 300 psi (2.068 MPa, 20.68 bar) | |
| AC2000 AC2002 | A | 100 psi (0.7 MPa, 7.0 bar) | 1500 psi (10.34 MPa, 103.4 bar) | |



ProMix® PD
Electronic Proportioner

CE 2575 **Ex II 2 G**
Ex ia IIA T3 Gb
FM13ATEX0026
FM21UKEX0122
IECEX FMG 13.0011

UK CA 0359

FM US APPROVED
FM16US0241
FM16CA0129
Intrinsically safe
equipment for Class I,
Div 1, Group D, T3
Ta = 2°C to 50°C

EAC

MAX AIR WPR

| | | |
|-----|-----|-----|
| .7 | 7 | 100 |
| MPa | bar | PSI |

MAX FLUID WPR

| | | |
|-------|-------|-----|
| 2.068 | 20.68 | 300 |
| MPa | bar | PSI |

MAX TEMP 50°C (122°F)

Artwork No. 294021 Rev. L

Intrinsically Safe (IS) System. Install per IS Control Drawing No. 16P577. Control Box IS Associated Apparatus for use in non hazardous location, with IS Connection to color change and booth control modules Apparatus for use in: Class I, Division 1, Group D T3 Hazardous Locations

Read Instruction Manual
Warning: Substitution of components may impair intrinsic safety.

| PART NO. | SERIES | SERIAL |
|----------|--------|--------|
| | | |

MFG. YR.

| | |
|--|--|
| | |
|--|--|

GRACO INC.
P.O. Box 1441
Minneapolis, MN
55440 U.S.A.
www.graco.com/patent

Figure 1 Model AC1000 and AC1002 Identification Label

| ProMix® PD | | | POWER REQUIREMENTS | | |
|---|------------|----------|--|-----------------------|--|
| PART NO. | SERIES NO. | MFG. YR. | VOLTS | AMPS | |
| | | | 90-250 ~ | 7 AMPS MAX 50/60 Hz | |
| <p>GRACO INC. P.O. Box 1441 Minneapolis, MN 55440 U.S.A.</p> <p>FM US APPROVED FM16US0241 FM16CA0129 Intrinsically safe connections for Class I, Div 1, Group D Ta = 2°C to 50°C Install per 16P577</p> | | | <p>CE 2575 Ex II (2) G [Ex ia Gb] IIA FM13ATEX0026 FM21UKEX0122 IECEX FMG 13.0011</p> <p>Um: 250 V 294024h</p> <p>UK CA 0359</p> | | |

Figure 2 24M672 and 26A188 Control Box Identification Label

Continued on the next page.

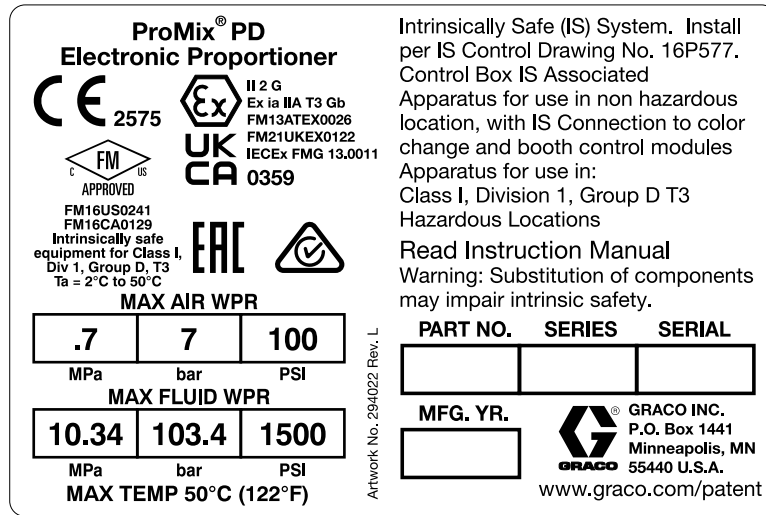


Figure 3 Model AC2000 and AC2002 Identification Label

Figure 4 Model AC0500 and AC0502 Identification Label

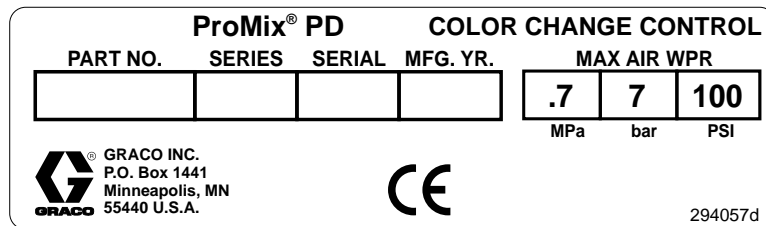


Figure 5 Non-Intrinsically Safe Color Change Control (Accessory) Identification Label

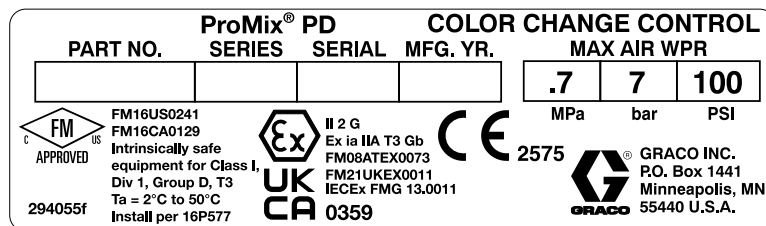


Figure 6 Intrinsically Safe Color Change Control (Accessory) Identification Label

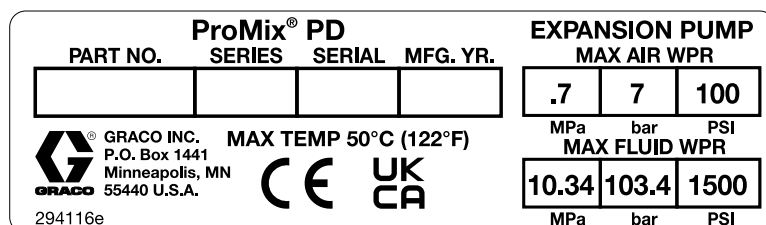


Figure 7 Pump Expansion Kit (Accessory) Identification Label

Related Manuals




Current manuals are available at www.graco.com.

| Manual No. | Description |
|------------|--|
| 332458 | PD2K Proportioner Installation Manual, Automatic Systems |
| 332564 | PD2K Proportioner Operation Manual, Automatic Systems |
| 3A4486 | PD2K Dual Panel Proportioner Operation Manual, Automatic Systems |
| 3A6287 | PD3K+ Operation Manual, Automatic Systems |
| 332339 | Pump Repair-Parts Manual |
| 332454 | Color Change Valve Repair-Parts Manual |

| Manual No. | Description |
|------------|---|
| 332455 | Color Change Kits Instructions-Parts Manual |
| 333282 | Remote Mix Manifold Instructions-Parts Manual |
| 332456 | Pump Expansion Kits Instructions-Parts Manual |
| 334183 | Modbus TCP Gateway Module Instructions-Parts Manual |
| 334494 | ProMix PD2K CGM Installation Kits Instructions-Parts Manual |
| 334512 | Isolated Pump Expansion Kits Instructions-Parts Manual |





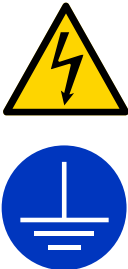







Warnings

The following warnings are for the setup, use, grounding, maintenance and repair of this equipment. The exclamation point symbol alerts you to a general warning and the hazard symbol refers to procedure-specific risks. When these symbols appear in the body of this manual or on warning labels, refer back to these Warnings. Product-specific hazard symbols and warnings not covered in this section may appear throughout the body of this manual where applicable.

|  <h2 style="margin: 0;">WARNING</h2> | |
|---|---|
|  | <p>FIRE AND EXPLOSION HAZARD</p> <p>Flammable fumes, such as solvent and paint fumes, in work area can ignite or explode. To help prevent fire and explosion:</p> <ul style="list-style-type: none"> • Use equipment only in well ventilated area. • Eliminate all ignition sources; such as pilot lights, cigarettes, portable electric lamps, and plastic drop cloths (potential static arc). • Keep work area free of debris, including solvent, rags and gasoline. • Do not plug or unplug power cords, or turn power or light switches on or off when flammable fumes are present. • Ground all equipment in the work area. See Grounding instructions. • Use only grounded hoses. • Hold gun firmly to side of grounded pail when triggering into pail. Do not use pail liners unless they are antistatic or conductive. • Stop operation immediately if static sparking occurs or you feel a shock, Do not use equipment until you identify and correct the problem. • Keep a working fire extinguisher in the work area. |
|  | <p>ELECTRIC SHOCK HAZARD</p> <p>This equipment must be grounded. Improper grounding, setup, or usage of the system can cause electric shock.</p> <ul style="list-style-type: none"> • Turn off and disconnect power at main switch before disconnecting any cables and before servicing or installing equipment. • Connect only to grounded power source. • All electrical wiring must be done by a qualified electrician and comply with all local codes and regulations. |



WARNING

| | |
|--|---|
|    | <p>INTRINSIC SAFETY</p> <p>Intrinsically safe equipment that is installed improperly or connected to non-intrinsically safe equipment will create a hazardous condition and can cause fire, explosion, or electric shock. Follow local regulations and the following safety requirements.</p> <ul style="list-style-type: none"> • Be sure your installation complies with national, state, and local codes for the installation of electrical apparatus in a Class I, Group D, Division 1 (North America) or Class I, Zones 1 and 2 (Europe) Hazardous Location, including all of the local safety fire codes (for example, NFPA 33, NEC 500 and 516, OSHA 1910.107, etc.). • To help prevent fire and explosion: <ul style="list-style-type: none"> • Do not install equipment approved only for a non-hazardous location in a hazardous location. See model ID label for the intrinsic safety rating of your model. • Do not substitute system components as this may impair intrinsic safety. • Equipment that comes in contact with the intrinsically safe terminals must be rated for Intrinsic Safety. This includes DC voltage meters, ohmmeters, cables, and connections. Remove the unit from the hazardous area when troubleshooting. |
|      | <p>SKIN INJECTION HAZARD</p> <p>High-pressure fluid from dispensing device, hose leaks, or ruptured components will pierce skin. This may look like just a cut, but it is a serious injury that can result in amputation. Get immediate surgical treatment.</p> <ul style="list-style-type: none"> • Do not point dispensing device at anyone or at any part of the body. • Do not put your hand over the fluid outlet. • Do not stop or deflect leaks with your hand, body, glove, or rag. • Follow the Pressure Relief Procedure when you stop dispensing and before cleaning, checking, or servicing equipment. • Tighten all fluid connections before operating the equipment. • Check hoses and couplings daily. Replace worn or damaged parts immediately. |
|   | <p>MOVING PARTS HAZARD</p> <p>Moving parts can pinch, cut or amputate fingers and other body parts.</p> <ul style="list-style-type: none"> • Keep clear of moving parts. • Do not operate equipment with protective guards or covers removed. • Pressurized equipment can start without warning. Before checking, moving, or servicing equipment, follow the Pressure Relief Procedure and disconnect all power sources. |
|   | <p>TOXIC FLUID OR FUMES</p> <p>Toxic fluids or fumes can cause serious injury or death if splashed in the eyes or on skin, inhaled, or swallowed.</p> <ul style="list-style-type: none"> • Read MSDSs to know the specific hazards of the fluids you are using. • Store hazardous fluid in approved containers, and dispose of it according to applicable guidelines. • Always wear chemically impermeable gloves when spraying, dispensing, or cleaning equipment. |



WARNING



PERSONAL PROTECTIVE EQUIPMENT

Wear appropriate protective equipment when in the work area to help prevent serious injury, including eye injury, hearing loss, inhalation of toxic fumes, and burns. This protective equipment includes but is not limited to:

- Protective eyewear, and hearing protection.
- Respirators, protective clothing, and gloves as recommended by the fluid and solvent manufacturer.



EQUIPMENT MISUSE HAZARD





Misuse can cause death or serious injury.

- Do not operate the unit when fatigued or under the influence of drugs or alcohol.
- Do not exceed the maximum working pressure or temperature rating of the lowest rated system component. See **Technical Specifications** in all equipment manuals.
- Use fluids and solvents that are compatible with equipment wetted parts. See **Technical Specifications** in all equipment manuals. Read fluid and solvent manufacturer's warnings. For complete information about your material, request MSDS from distributor or retailer.
- Do not leave the work area while equipment is energized or under pressure.
- Turn off all equipment and follow the **Pressure Relief Procedure** when equipment is not in use.
- Check equipment daily. Repair or replace worn or damaged parts immediately with genuine manufacturer's replacement parts only.
- Do not alter or modify equipment. Alterations or modifications may void agency approvals and create safety hazards.
- Make sure all equipment is rated and approved for the environment in which you are using it.
- Use equipment only for its intended purpose. Call your distributor for information.
- Route hoses and cables away from traffic areas, sharp edges, moving parts, and hot surfaces.
- Do not kink or over bend hoses or use hoses to pull equipment.
- Keep children and animals away from work area.
- Comply with all applicable safety regulations.

Important Isocyanate (ISO) Information

Isocyanates (ISO) are catalysts used in two component materials.



Isocyanate Conditions

| | | | | |
|---|---|---|---|--|
|  |  |  |  | |
|---|---|---|---|--|

Spraying or dispensing fluids that contain isocyanates creates potentially harmful mists, vapors, and atomized particulates




- Read and understand the fluid manufacturer's warnings and Safety Data Sheet (SDS) to know specific hazards and precautions related to isocyanates.
- Use of isocyanates involves potentially hazardous procedures. Do not spray with the equipment unless you are trained, qualified, and have read and understood the information in this manual and in the fluid manufacturer's application instructions and SDS.
- Use of incorrectly maintained or mis-adjusted equipment may result in improperly cured material. Equipment must be carefully maintained and adjusted according to instructions in the manual.
- To prevent inhalation of isocyanate mists, vapors, and atomized particulates, everyone in the work area must wear appropriate respiratory protection. Always wear a properly fitting respirator, which may include a supplied-air respirator. Ventilate the work area according to instructions in the fluid manufacturer's SDS.
- Avoid all skin contact with isocyanates. Everyone in the work area must wear chemically impermeable gloves, protective clothing and foot coverings as recommended by the fluid manufacturer and local regulatory authority. Follow all fluid manufacturer recommendations, including those regarding handling of contaminated clothing. After spraying, wash hands and face before eating or drinking.

Material Self-ignition

| | | | | |
|---|--|--|--|--|
|  |  | | | |
|---|--|--|--|--|

Some materials may become self-igniting if applied too thick. Read material manufacturer's warnings and Safety Data Sheet (SDS).

Keep Components A and B Separate

| | | | | |
|---|--|---|--|--|
|  |  |  | | |
|---|--|---|--|--|

Cross-contamination can result in cured material in fluid lines which could cause serious injury or damage equipment. To prevent cross-contamination:

- **Never** interchange component A and component B wetted parts.
- Never use solvent on one side if it has been contaminated from the other side.

Moisture Sensitivity of Isocyanates

Exposure to moisture (such as humidity) will cause ISO to partially cure; forming small, hard, abrasive crystals, which become suspended in the fluid. Eventually a film will form on the surface and the ISO will begin to gel, increasing in viscosity.

NOTICE

Partially cured ISO will reduce performance and the life of all wetted parts.

- Always use a sealed container with a desiccant dryer in the vent, or a nitrogen atmosphere. **Never** store ISO in an open container.
- Keep the ISO pump wet cup or reservoir (if installed) filled with appropriate lubricant. The lubricant creates a barrier between the ISO and the atmosphere.
- Use only moisture-proof hoses compatible with ISO.
- Never use reclaimed solvents, which may contain moisture. Always keep solvent containers closed when not in use.
- Always lubricate threaded parts with an appropriate lubricant when reassembling.

NOTE: The amount of film formation and rate of crystallization varies depending on the blend of ISO, the humidity, and the temperature.

Changing Materials

NOTICE

Changing the material types used in your equipment requires special attention to avoid equipment damage and downtime.

- When changing materials, flush the equipment multiple times to ensure it is thoroughly clean.
- Always clean the fluid inlet strainers after flushing.
- Check with your material manufacturer for chemical compatibility.
- When changing between epoxies and urethanes or polyureas, disassemble and clean all fluid components and change hoses. Epoxies often have amines on the B (hardener) side. Polyureas often have amines on the A (resin) side.

Troubleshooting



NOTE: Check all possible remedies before disassembling the system.

System Troubleshooting

| Problem | Cause | Solution |
|-------------------------------------|---|--|
| Unit will not operate. | Inadequate power supply. | See Technical Specifications, page 74. |
| | Power switch is off. | Turn switch on. |
| | Main power is shut off. | Turn main power switch on. |
| | Exhausted fluid supply. | Refill and reprime pump. |
| | Clogged fluid outlet line, valves, etc. | Clear. |
| | Fluid dried on piston rod. | Disassemble and clean pump. See pump manual. In future, stop pump at bottom of stroke. |
| Pump output low on both strokes. | Inadequate power supply. | See Technical Specifications, page 74. |
| | Exhausted fluid supply. | Refill and reprime pump. |
| | Clogged fluid outlet line, valves, etc. | Clear. |
| | Worn piston packings. | Replace. See pump manual. |
| Pump output low on only one stroke. | Held open or worn dosing valves. | Check and repair. See pump manual. |
| | Worn piston packing. | Replace. See pump manual. |
| No output. | Improperly installed dosing valves. | Check solenoid connections to valves. See pump manual. |
| Pump operates erratically. | Exhausted fluid supply. | Refill and reprime pump. |
| | Held open or worn dosing valves. | Check and repair. See pump manual. |
| | Worn piston packing. | Replace. See pump manual. |

Error Code Troubleshooting

System errors alert you of a problem and help prevent off-ratio spraying. There are three types: Advisory, Deviation, and Alarm.

NOTE: ProMix Dual Mix Systems (AC0502, AC1002, AC2002, AC3002, and AC4002) as well as ProMix PD3K+ Systems, have most of the same error codes as the ProMix PD2K. However, there are some unique codes that apply to each system, and in the case of Dual Mix, codes are specific to one of two mix units. Refer to the ProMix Dual Mix Operation Manual or PD3K+ Operation Manual for a complete list of error codes. See [Related Manuals, page 5](#).

An **Advisory** records an event in the system, and will clear itself after 60 seconds. The four-digit error code will be followed by “-V”.

A **Deviation** records an error in the system but does not shut down the equipment. The deviation must be acknowledged by the user. The four-digit error code will be followed by “-D”.

If an **Alarm** occurs, operation stops. The four-digit error code will be followed by “-A”.

If any of the three system error types occur:

- Alarm buzzer sounds (unless in silent mode).
- Alarm popup screen shows the active alarm code.
- Status bar on the Advanced Display Module shows the active alarm code.
- Alarm is saved in the date/time stamped log.


NOTE: A **Record** saves relevant system events in the background. These are informational only and can be reviewed on the Events screen, which displays the 200 most recent events, with date, time, and description.

NOTE: When an error occurs be sure to determine the code before resetting it. If you forget which code occurred, the Errors screen displays the 200 most recent errors, with date, time, and description.

NOTE: In some error codes listed below, a # symbol is shown as the last digit. This symbol represents the applicable pump number, which can vary. The unit’s display will show the applicable pump number as the last digit in the code.

On-Screen Help

When a system alarm occurs, a help screen is available to provide timely and relevant troubleshooting information for the user. On the

alarm popup screen, press  to access the help screens. The help screens may also be accessed at any time by going to the Errors Screen and selecting an alarm in the log.

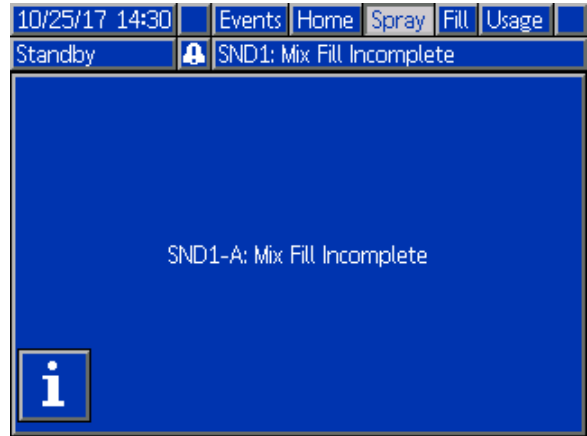



Figure 8 Alarm Popup Screen

All alarms have a QR code screen. A mobile device with internet access and a QR reader may use the QR code to access additional information on a webpage hosted by help.graco.com.



Figure 9 Error QR Code Screen

A number of the alarms that are most likely to be encountered during typical operation have detailed troubleshooting information screens. The troubleshooting screens will replace the QR code screen, though the QR code may still be accessed by

pressing .

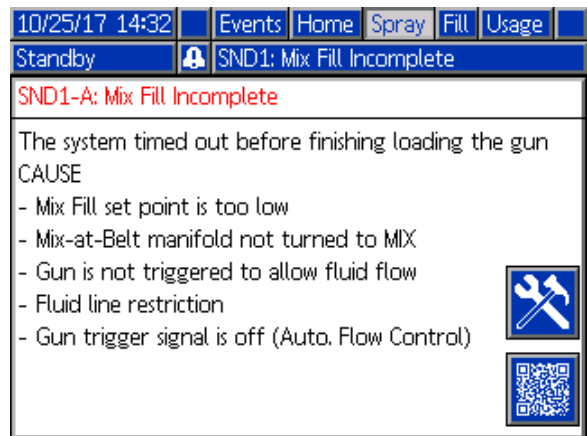


Figure 10 Error Troubleshooting Screen

Purge Errors

| Code | Type | Description | Problem | Cause | Solution |
|------|--------|----------------------|---|---|--|
| ETE0 | Record | Purge Not Complete | The system was unable to complete a purge sequence. | An indication that the system either could not complete or was interrupted before completing a gun purge. | No action required. |
| SPD1 | Alarm | Gun Purge Incomplete | The system timed out without reaching the user-specified volume of solvent for a purge. | Solvent flow switch not working. | Replace switch. |
| | | | | Solvent flow is too low to actuate the solvent switch. | Increase solvent pressure to drive a high purge flow rate |
| | | | | Gun is not triggered. | Operator must continue flushing for configured time, until the booth control indicates purge is completed. |
| | | | | Mix manifold was not set to flush position, blocking solvent flow to the spray gun. | Set manifold to flush position. |

Mix Errors

| Code | Type | Description | Problem | Cause | Solution |
|------|-----------------------|---------------------------|--|---|--|
| F7S1 | Alarm | Flow Detected Solvent Gun | The solvent flow switch is indicating unexpected solvent flow. | Solvent flow switch is stuck in flow position. | Clean or replace switch. |
| | | | | There is a leak through the solvent cutoff valve. | Check for leaks and repair valve. |
| F7S2 | Alarm | Flow Detected Solvent Mix | The solvent flow switches indicate that both are flowing solvent at the same time. *This only applies to systems with mix-at-wall. | One or both solvent flow switches are stuck in flow position. | Clean or replace the switch(es). |
| | | | | There is a leak through one or both of the solvent cutoff valves. | Check for leaks and repair valve(s). |
| QPD1 | Alarm, then Deviation | Potlife Expired | Potlife time has expired before the system has moved the required amount of material (potlife volume) through the mixed material line. | Purge process was not completed. | Make sure purge process is completed. |
| | | | | Solvent supply shut off or empty. | Verify solvent supply is available and on, supply valves are open. |
| QP## | Deviation | Potlife Expired Recipe ## | Potlife time has expired before the system has moved the required amount of material (potlife volume) through the mixed material line in an inactive gun loaded with recipe ##. *This only applies to systems with multiple guns. | An inactive gun has mixed material for recipe ## loaded and has not dispensed enough material in the required amount of time. | Purge the inactive gun. |
| SND1 | Alarm | Mix Fill Incomplete | The system timed out before the mix fill cycle loaded the gun with mixed material. | Mix manifold not set to spray position. | Set manifold to spray. |
| | | | | Spray gun was not triggered. | Allow flow through gun during fill process until the fill complete LED stops flashing. |
| | | | | Restrictions in mixer, manifold, or spray gun. | Fix restrictions. |

Pumping Errors

NOTE: In some error codes listed below, a # symbol is shown as the last digit. This symbol represents the applicable component number, which can vary. The unit's display will show the applicable number as the last digit in the code. For example, the F1S# code listed in this table will be displayed as F1S1 if the affected component is pump 1, F1S2 for pump 2, and so on.

| Code | Type | Description | Problem | Cause | Solution |
|------|-------|------------------------------|---|---|---|
| DA0# | Alarm | Exceeded Maximum Flow Pump # | Pump was driven to its maximum allowed speed. | System has a leak or open valve that is allowing unrestricted flow. | Inspect system for leaks. |
| | | | | Pump is cavitating, cycling without restriction. | Verify that the pump is being supplied with material. |
| | | | | Viscosity of material is too thin for nozzle size. | Reduce nozzle size to create more restriction. Reduce paint pressure to lower the flow rate. |
| | | | | System pressure or Flow Setpoint is too high (causing the pump to work too hard). | Reduce the pressure or the Flow Setpoint. |
| DE0# | Alarm | Leak Detected Pump # | This is a manual stall test failure when the pump cannot build pressure to the target "Stall Test Pressure." Will fault after 30 seconds. | No material in the pump or line. | Make sure the pump and down stream color line are loaded with material. |
| | | | | Leak in the system. | Determine if leak is external or internal by visually inspecting the system for fluid leakage. Fix all loose or worn hoses, fittings, and seals. Inspect all valve seats and needles for wear, and replace worn piston or throat seals. |
| DF0# | Alarm | No Stall Up Pump # | Pump failed the stall test; did not stall on the upstroke. | Valve failure, seal failure, worn rod or cylinder. | Replace inlet and outlet valve and seal for up stroke. Replace piston and throat seals. Replace rod and cylinder as necessary. |
| DG0# | Alarm | No Stall Down Pump # | Pump failed the stall test; did not stall on the downstroke. | Valve failure, seal failure, worn rod or cylinder. | Replace inlet and outlet valve and seal for down stroke. Replace piston and throat seals. Replace rod and cylinder as necessary. |
| DH0# | Alarm | No Stall Pump # | Pump failed the stall test; did not stall on either the upstroke or the downstroke. | Valve failure, seal failure, worn rod or cylinder. | Replace inlet and outlet valve and seal for up and down strokes. Replace piston and throat seals. Replace rod and cylinder as necessary. |

Troubleshooting

| Code | Type | Description | Problem | Cause | Solution |
|------|--------|-----------------------------|---|---|---|
| DKD# | Alarm | Position Failed Pump # | Pump was unable to reach it's drive position. | Not enough air is supplied to the dosing valves. | Ensure that at least 85 PSI is being supplied to the dosing valves. |
| | | | | The pressure at the pump outlet is too high. | Check for an obstruction downstream of the pump that would increase pressure. Ensure the feed pressure is within 1/2 – 1/3 of the target pressure. |
| DKF# | Alarm | Position Overspeed Pump # | Pump moved beyond it's drive position. | The pump was knocked out of position. | There is no fluid pressure at the outlet of the pump, run the pump at a lower pressure to fill the lines. Check that the feed pressure is not more than 1/2 – 1/3 greater than the target pressure. |
| EBH# | Record | Home Complete Pump # | Record of pump homing is complete. | An indication on the display that the pump completed the home function | No action required. |
| EF0# | Alarm | Timeout Startup Pump # | Pump tried but was not able to move to the home position within a specified amount of time. | Pump dose valves did not actuate. | Verify air pressure to solenoid valves. Verify the valves are actuating. |
| | | | | Motor could not drive pumps and linear actuator. | Verify motor is driving the pump. |
| | | | | Pump stroke length is shortened by mechanical system tolerance. | Verify correct assembly of linear actuator and pump piston rods. See pump manual. |
| EF1# | Alarm | Timeout Shutdown Pump # | Pump tried but was not able to move to the park position within a specified amount of time. | Pump dose valves did not actuate. | Visually inspect valves to ensure they are operating properly; verify they have air pressure above 85 psi (0.6 MPa, 6.0 bar). |
| | | | | Pump is filled with thick paint and could not drive piston to end of stroke. Motor or drive is worn or damaged. | Observe motor and drive assembly to verify that the motor is generating force. |
| ETD# | Record | Auto Pressure Relief Pump # | Record of pump completing an auto pressure relief. | Pump outlet pressure exceeded relief threshold. | No action required. |
| F1A# | Alarm | Flow Low Dispense Pump # | The pump was unable to maintain its target flow rate. | There is a restriction in the hose or gun that is preventing the pump from dispensing at its target rate. | Check that the gun is triggered and for restrictions in the hose. |
| F1D# | Alarm | Flow Low Mix Pump # | The Mix Unit was unable to maintain it's target flow rate. | There is a restriction in the hose or gun that is preventing the pump from dispensing at it's target rate. | Check for restrictions in the hose along the entire fluid path after the pump and also that the gun is triggered. |

| Code | Type | Description | Problem | Cause | Solution |
|------|-------|-----------------------|---|--|---|
| F1F# | Alarm | Flow Low Fill Pump # | There has been no flow or low flow during a pump fill operation. | There is a restriction on the outlet side of the pump or color stack. | Make sure there are no restrictions in the color stack and that the dump valve is actuating. |
| | | | | Thick viscosity paint requires more pressure to pump. | Increase non-mix pressure if necessary to create flow during the fill function. |
| | | | | The pumps do not have to move for the system to build enough pressure to meet the setpoint. | Increase non-mix pressure if necessary to create flow during the fill function. |
| F1S# | Alarm | Flow Low Purge Pump # | There has been no flow or low flow during a pump purge operation. | Restriction in the outlet side of the pump or color stack resulting in the solvent flow being too low. | Make sure there are no restrictions in the system. Increase non-mix pressure if necessary to create flow during the purge function. |
| F7D# | Alarm | Flow Detected Pump # | The pump flow exceeded 20 cc/min flow coming into Idle mode. | There is a leak in the system or the gun was open when the system went into Idle mode. | Verify there are no leaks in the system. Make sure the air flow switch is actuating properly. Do not trigger the gun without atomizing air. |
| F8D1 | Alarm | Flow Not Detected | No flow while mixing. | Restriction in the outlet side of the pump or color stack. | Make sure there are no restrictions in the system. |
| F9D# | Alarm | Flow Unstable Pump # | The pump flow rate did not stabilize while entering Idle mode. | Potential leak in the system. | Check the system for leaks and run manual stall test. |

Pressure Errors

NOTE: In some error codes listed below, a # symbol is shown as the last digit. This symbol represents the applicable component number, which can vary. The unit's display will show the applicable number as the last digit in the code. For example, the P6F# code listed in this table will be displayed as P6F1 if the affected component is pump 1, P6F2 for pump 2, and so on.

| Code | Type | Description | Problem | Cause | Solution |
|------|-----------|-------------------------------|---|--|---|
| P1D# | Alarm | Pressure Low Outlet Pump # | The outlet pressure on pump # is less than the user-entered alarm limit. * This alarm is only enabled with Flow Control. | There is no fluid pressure or pump is cavitating. | Check the supply for pump #, increase feed pressure if necessary. |
| P1F# | Alarm | Pressure Low Inlet Pump # | The inlet pressure on pump # is less than the user-entered alarm limit. | | Increase inlet pressure. |
| P2F# | Deviation | Pressure Low Inlet Pump # | The inlet pressure on pump # is less than the user-entered deviation limit. | | Increase inlet pressure. |
| P3D# | Deviation | Pressure High Outlet Pump # | The outlet pressure on pump # is greater than the user entered deviation limit. | | Relieve system pressure. |
| P3F# | Deviation | Pressure High Inlet Pump # | The inlet pressure on pump # is greater than the user-entered deviation limit. | | Decrease inlet pressure. |
| P4D# | Alarm | Pressure High Outlet Pump # | The outlet pressure on pump # is greater than the user entered alarm limit. | | Relieve system pressure. |
| P4F# | Alarm | Pressure High Inlet Pump # | The inlet pressure on pump # is greater than the user-entered alarm limit. | | Decrease inlet pressure. |
| P4P# | Alarm | Pressure High Supply Pump # | The supply pump fluid pressure for pump # is greater than 90% of the user-entered Stall Test Pressure. | The supply pump pressure is too high. | Check supply for pump #, decrease supply pressure. |
| P6D# | Alarm | Press. Sens. Removed Outlet # | No outlet pressure transducer is detected when the system is expecting one. | Disconnected transducer. | Verify transducer is connected properly. Replace if reconnecting does not eliminate the alarm. |
| P6F# | Alarm | Press. Sens. Removed Inlet # | No inlet pressure transducer is detected when the system is expecting one. | Disconnected transducer. | Verify transducer is connected properly. Replace if reconnecting does not eliminate the alarm. |
| P9D# | Alarm | Press. Sens. Failed Outlet # | Outlet pressure transducer has failed. | Outlet pressure transducer has failed or the pressure is above the readable range. | Relieve system pressure. Verify connections, or replace if reconnecting does not eliminate the alarm. |

| Code | Type | Description | Problem | Cause | Solution |
|------|-------|--------------------------------|--|---|---|
| P9F# | Alarm | Press. Sens. Failed Inlet # | Inlet pressure transducer has failed. | Inlet pressure transducer has failed or the pressure is above the readable range. | Relieve system pressure. Verify connections, or replace if reconnecting does not eliminate the alarm. |
| QADX | Alarm | Differential Pressure A Over B | Low differential pressure. This alarm is active only during Mix mode. | There is a leak on the B side. | Check the system for internal and external leaks on all catalyst manifolds and plumbing. |
| | | | | The B side pump is cavitating. | Check paint supply on the B side, increase paint supply pressure. |
| QBDX | Alarm | Differential Pressure B Over A | High differential pressure. This alarm is active only during Mix mode. | There is a leak on the A side. | Check the system for internal and external leaks on all color manifolds and plumbing. |
| | | | | The A side pump is cavitating. | Check paint supply on the A side, increase paint supply pressure. |

System Errors

| Code | Type | Description | Problem | Cause | Solution |
|------|----------|--------------------------|---|--|---|
| EB00 | Record | Stop Button Pressed | Record of a stop button press. | Indicates system stop key on ADM was pressed. | n/a |
| EBIX | Record | Pumps Off Button Pressed | Record of a pump power off button press. | Indicates pump power key o ADM pressed to power down pumps. | n/a |
| EBCX | Record | Pumps Off PLC Command | Record of a pump power off PLC command. | Indicates a system command to power off pumps was sent by the PLC. | n/a |
| EC00 | Record | Setup Value(s) Changed | Record of changing setup variables. | Indicates date and time when setup values were changed. | n/a |
| EL00 | Record | System Power On | Record of power cycle (ON). | Indicates date and time when system was started. | n/a |
| EM00 | Record | System Power Off | Record of power cycle (OFF). | Indicates date and time when system was turned off. | n/a |
| EMIX | Advisory | Pump Off | The pumps are not powered and are unable to move. | Pump power was turned off or an error occurred. | Start pumps by pressing pump start key on Advanced Display module. |
| EP0X | Record | Auto Pump Parked | Record of pumps being auto parked. | The auto park operation was completed. | No action required. |
| ES00 | Advisory | Factory Defaults | Record of defaults being loaded. | | n/a |
| WSN1 | Alarm | Config Error Color | A color defined for the system is not assigned to any gun. *This only applies to systems with multiple guns. | One or more colors is missing a valid gun assignment. | Ensure all colors for all color pumps have a gun assigned to them on Pump Screen 4. |
| WSN2 | Alarm | Config Error Catalyst | A catalyst defined for the system has an invalid gun assignment. *This only applies to systems with multiple guns. | One or more catalyst is missing a valid gun assignment. | Ensure all catalysts for all catalyst pumps have a gun assigned to them on Pump Screen 4. |
| | | | | Too many catalyst gun assignments exist. | The total number of catalyst gun assignments for the system may not exceed four. |

Communication Errors

NOTE: In some error codes listed below, a # symbol is shown as the last digit. This symbol represents the applicable component number, which can vary. The unit's display will show the applicable number as the last digit in the code. For example, the CAC# code listed in this table will be displayed as CAC1 if the affected component is color change board 1, CAC2 for board 2, and so on.

| Code | Type | Description | Problem | Cause | Solution |
|------|-------|----------------------------|---|--|---|
| CA0X | Alarm | Comm. Error ADM | System does not detect the Advanced Display Module (ADM). | This communication error indicates that the Network has lost communication with the Advanced Display Module. | Check CAN cable connecting ADM to the EFCM. |
| CAC# | Alarm | Comm. Error Color Change # | System does not detect the Color Change Module #. | This communication error indicates that the network has lost communication with the Color Change Module #. | Check CAN cable connections to the Color Change Module # and any interconnected modules. |
| CADX | Alarm | Comm. Error Fluid Module | System does not see the Enhanced Fluid Control Module (EFCM). | This communication error indicates that the Network has lost communication with the EFCM. | Check CAN cables connecting ADM to the EFCM. Replace Cable or EFCM as necessary. |
| CAGX | Alarm | Comm. Error Gateway | System does not detect a CGM that was registered as being connected at power up. | | |
| CAG# | Alarm | Comm. Error Modbus Gateway | System does not detect a Modbus CGM that was registered as being connected at power up. | The Modbus CGM address dial was changed while the system was powered up. | Unplug the Modbus CGM from the CAN network and re-plug it back in so that it re-registers with the new address. |
| | | | | The Modbus CGM is not connected/failed. | Check that the Modbus CGM is properly connected to the CAN network and it's LEDs indicate it is powered. |
| CANX | Alarm | Comm. Error Booth Control | System does not detect the Booth Control Module. | This communication error indicates that the network has lost communication with the Booth Control. | Check CAN cable connecting the Booth Control to the network. |
| CDC# | Alarm | Duplicate Color Change # | System detects two or more identical Color Change Modules. | More than one Color Change Module with the same address is connected in the system . | Check the system and remove the extra color change module. |
| CDDX | Alarm | Duplicate Fluid Module | System sees two or more identical Enhanced Fluid Control Modules (EFCM). | More than one EFCM is connected in the system. | Check the system and remove the extra EFCM. |
| CDNX | Alarm | Duplicate Booth Control | System detects two or more identical Booth Control Modules. | More than one Booth Control Module is connected in the system. | Remove the extra Booth Control Module. |

USB Errors

| Code | Type | Description | Problem | Cause | Solution |
|------|----------|------------------------------|---|--|---|
| EAUX | Advisory | USB Busy | USB drive is inserted, download is in progress. | Indicates USB port is uploading or downloading data. | Wait for USB Idle. |
| EBUX | Record | USB Drive Removed | USB drive was removed while downloading or uploading. | Downloading/uploading data on USB was interrupted by the USB device being removed. | Replace the USB device and begin process again. |
| EQU0 | Advisory | USB Idle | USB download completed, drive may be removed. | Data transfer is completed to the USB device. | Remove USB device from ADM. |
| EQU1 | Record | USB Sys. Settings Downloaded | Settings were downloaded to USB drive. | User installed USB device in ADM USB port. | n/a |
| EQU2 | Record | USB Sys. Settings Uploaded | Settings were uploaded from USB drive. | User installed USB device in ADM USB port. | n/a |
| EQU3 | Record | USB Custom Lang. Downloaded | Custom language was downloaded to USB drive. | User installed USB device in ADM USB port. | n/a |
| EQU4 | Record | USB Custom Lang. Uploaded | Custom language was uploaded from USB drive. | User installed USB device in ADM USB port. | n/a |
| EQU5 | Record | USB Logs Downloaded | Data logs were downloaded to USB drive. | User installed USB device in ADM USB port. | n/a |
| EVUX | Advisory | USB Disabled | USB drive has been inserted, downloading is disabled. | Configuration of system is blocking data transfer. | Change configuration to enable USB download function. |
| MMUX | Advisory | Maint. USB Logs Full | USB memory is more than 90% full. | Configuration parameter on system is enabled to generate this advisory. | Complete download to ensure no data is lost. |
| WSUX | Advisory | USB Config. Err. | USB configuration file does not match expected; checked on startup. | A software update was not completed successfully. | Reinstall software. |
| WXUD | Advisory | USB Download Err. | An error occurred while downloading to the USB drive. | User installed incompatible USB device in ADM USB port. | Repeat process with compatible USB device. |
| WXUU | Advisory | USB Upload Err. | An error occurred while uploading from the USB drive. | User installed incompatible USB device in ADM USB port. | Repeat process with compatible USB device. |

Miscellaneous Errors

NOTE: In some error codes listed below, a # symbol is shown as the last digit. This symbol represents the applicable component number, which can vary. The unit's display will show the applicable number as the last digit in the code. For example, the B9D# code listed in this table will be displayed as B9D1 if the affected component is pump 1, B9D2 for pump 2, and so on.

| Code | Type | Description | Problem | Cause | Solution |
|------|----------|----------------------------------|---|---|-------------------------------|
| B9A0 | Advisory | Volume Rollover A Current | Batch counter for material A rolled over. | The totalizer has reached maximum capable value and started over at zero. | n/a |
| B9AX | Advisory | Volume Rollover A Lifetime | Grand total counter for material A rolled over. | The totalizer has reached maximum capable value and started over at zero. | n/a |
| B9B0 | Advisory | Volume Rollover B Current | Batch counter for material B rolled over. | The totalizer has reached maximum capable value and started over at zero. | n/a |
| B9BX | Advisory | Volume Rollover B Lifetime | Grand total counter for material B rolled over. | The totalizer has reached maximum capable value and started over at zero. | n/a |
| B9D# | Advisory | Volume Rollover Pump # | Grand total counter for pump # rolled over. | The totalizer has reached maximum capable value and started over at zero. | n/a |
| B9S0 | Advisory | Volume Rollover Solvent Current | Batch counter for solvent rolled over. | The totalizer has reached maximum capable value and started over at zero. | n/a |
| B9SX | Advisory | Volume Rollover Solvent Lifetime | Grand total counter for solvent rolled over. | The totalizer has reached maximum capable value and started over at zero. | n/a |
| WX00 | Alarm | Software Errors | An unexpected software error has occurred. | | Call Graco technical support. |

Calibration Errors

NOTE: In some error codes listed below, a # symbol is shown as the last digit. This symbol represents the applicable component number, which can vary. The unit's display will show the applicable number as the last digit in the code. For example, the ENT# code listed in this table will be displayed as ENT1 if the affected component is pump 1, ENT2 for pump 2, and so on.

| Code | Type | Name | Description |
|------|--------|-------------------------------|--|
| END# | Record | Calibration Pump # | A calibration test was run on the pump. |
| ENS0 | Record | Calibration Solvent Meter | A calibration test was run on the solvent meter. |
| ENT# | Record | Calibration Stall Test Pump # | A stall test was completed successfully on pump #. |

Maintenance Errors

NOTE: In some error codes listed below, a # symbol is shown as the last digit. This symbol represents the applicable component number, which can vary. For example, the MAD# code listed in this table will be displayed as MAD1 if the affected component is pump 1, MAD2 for pump 2, and so on.

Because some components are assigned a 2-digit number, the last digit of the code is displayed as an alphanumeric character. The second table below correlates the alphanumeric digit to its component number. For example, code MEDZ represents outlet valve 30.

| Code | Type | Name | Description |
|------|----------|-----------------------------|---|
| MAD# | Advisory | Maint. Outlet Pump # | Maintenance is due on pump. |
| MAT# | Advisory | Maint. Stall Test Pump # | Maintenance stall test is due on pump. |
| MEB# | Advisory | Maint. Valve Catalyst (B) # | Maintenance is due on catalyst valve. |
| MED# | Advisory | Maint. Valve Outlet # | Maintenance is due on outlet valve. |
| MEF# | Advisory | Maint. Valve Inlet # | Maintenance is due on inlet valve. |
| MEG# | Advisory | Maint. Valve Gun # | Maintenance is due on gun valve. |
| MEN# | Advisory | Maint. Valve Auxiliary | Maintenance is due on auxiliary valve. |
| MES# | Advisory | Maint. Valve Solvent # | Maintenance is due on solvent valve. |
| MFF# | Advisory | Maint. Meter Flow # | Maintenance is due on flow meter. |
| MFS0 | Advisory | Maint. Meter Solvent | Maintenance stall test is due on solvent meter. |
| MGH0 | Advisory | Maint. Filter Fluid | Maintenance is due on fluid filter. |
| MGP0 | Advisory | Maint. Filter Air | Maintenance is due on air filter. |
| MJP# | Advisory | Maint. Valve Air | Maintenance is due on air valve. |

Alphanumeric Last Digits

| Alphanumeric Digit | Component Number |
|--------------------|------------------|
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| A | 10 |
| B | 11 |
| C | 12 |
| D | 13 |
| E | 14 |
| F | 15 |

| Alphanumeric Digit | Component Number |
|--------------------|------------------|
| G | 16 |
| H | 17 |
| J | 18 |
| K | 19 |
| L | 20 |
| M | 21 |
| N | 22 |
| P | 23 |
| R | 24 |
| T | 25 |
| U | 26 |
| V | 27 |
| W | 28 |
| Y | 29 |
| Z | 30 |

Power Barrier Board Diagnostics

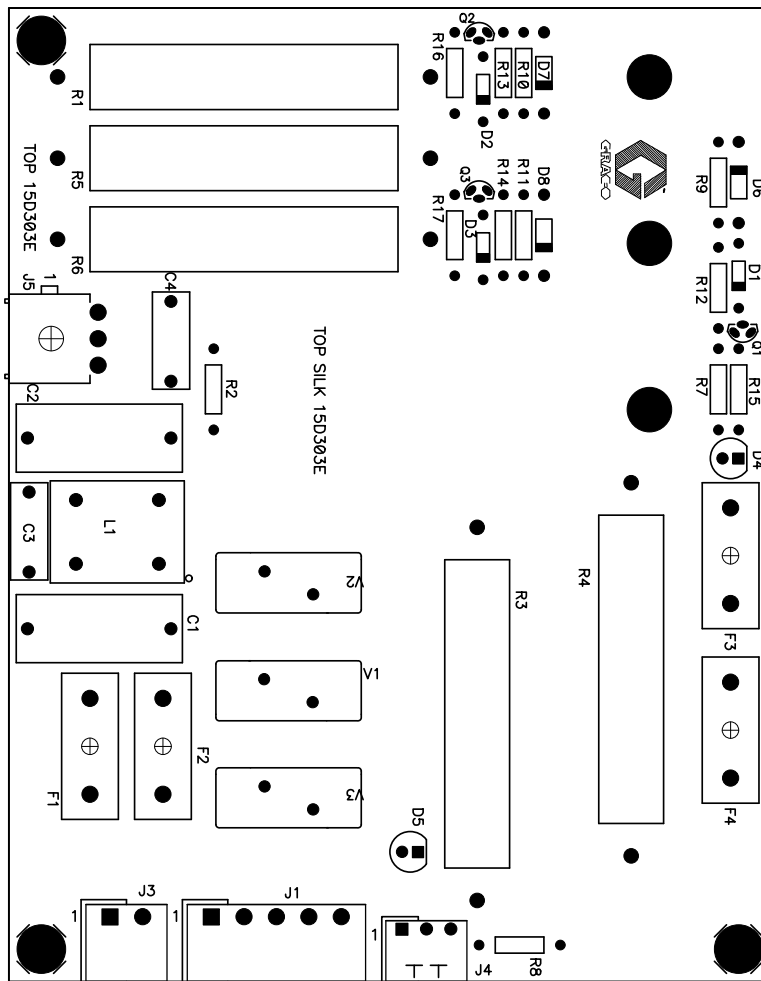


Figure 11 Power Barrier Board

Table 1 . Power Barrier Board Diagnostics

| ID | Component or Indicator | Function |
|----|------------------------|---|
| D4 | LED (green) | IS Power |
| D5 | LED (green) | Power |
| F3 | Fuse, 400 mA, 250 V | If either F3 or F4 is blown, there is no power to the IS location. D4 is out. |
| F4 | Fuse, 400 mA, 250 V | |
| J4 | Connector | 24 Vdc power input |
| J5 | Connector | +12 Vdc intrinsically safe power output |

Isolation Board Diagnostics


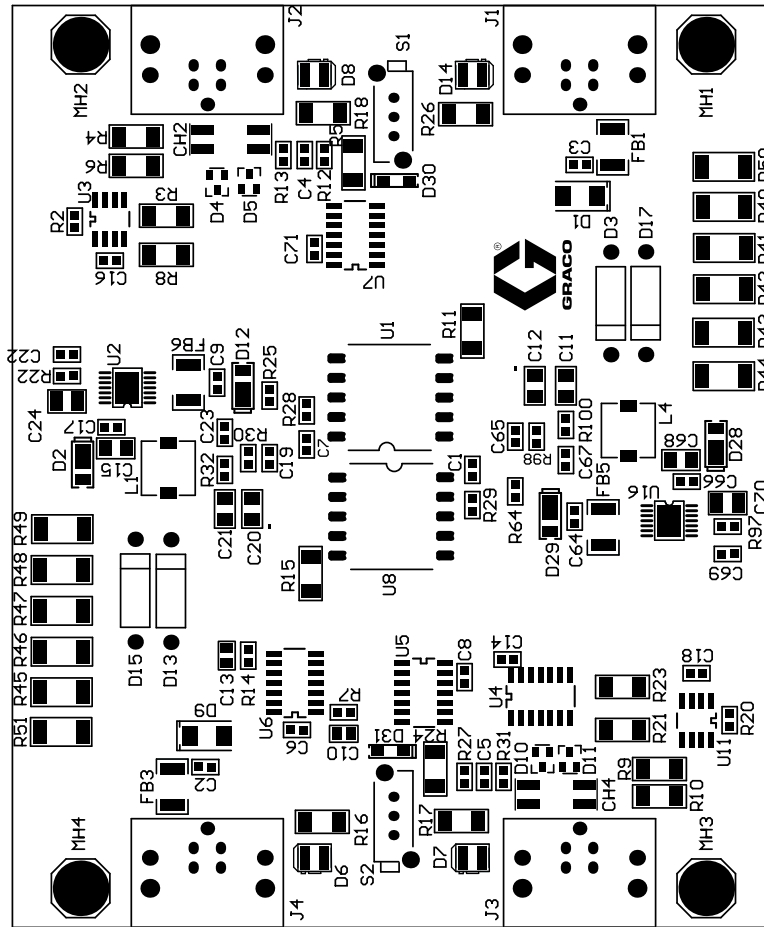


Figure 12 Isolation Board

Table 2 . Isolation Board Diagnostics

| ID | Component or Indicator | Function |
|-----|------------------------|--|
| D6 | LED (yellow) | IS Communication |
| D7 | LED (green) | IS Power |
| D8 | LED (green) | Non-IS Power |
| D14 | LED (yellow) | Non-IS Communication |
| J1 | Connector | Non-IS, Gateway |
| J2 | Connector | Non-IS, Optional Color Change Module |
| J3 | Connector | Intrinsically Safe, Barrier Board |
| J4 | Connector | Intrinsically Safe, Optional Color Change Module |
| S1 | Pushbutton Switch | For Non IS connectors. If switch S1 is off, yellow LED (D14) is steady on. Push switch to turn switch on. |
| S2 | Pushbutton Switch | For Intrinsically Safe connectors. If switch S2 is off, yellow LED (D6) is steady on. Push switch to turn switch on. |

Enhanced Fluid Control Module (EFCM) Diagnostics

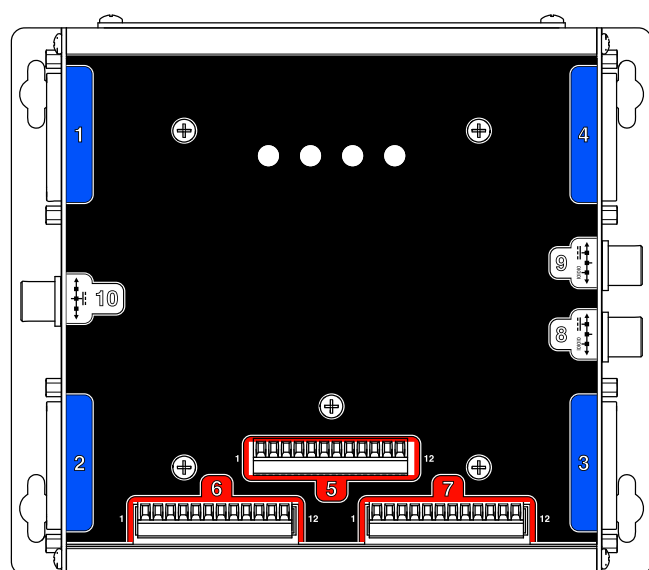

ti21742a

Figure 13 Enhanced Fluid Control Module

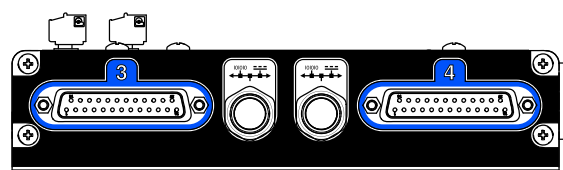
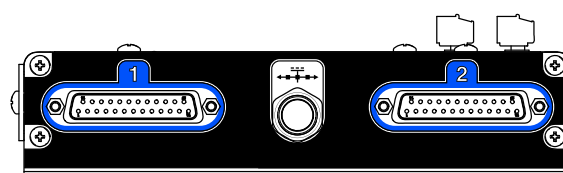


Table 3 . Enhanced Fluid Control Module Diagnostics

| ID | Component or Indicator | Function |
|------------|------------------------|---|
| 1 | 25 pin connector | Pump 1 Module |
| 2 | 25 pin connector | Pump 2 Module |
| 3 | 25 pin connector | Pump 3 Module (accessory) |
| 4 | 25 pin connector | Pump 4 Module (accessory) |
| 5 | 12 pin connector | Multiple purpose I/O |
| 6 | 12 pin connector | Multiple purpose I/O |
| 7 | 12 pin connector | Multiple purpose I/O |
| 8 | 5 pin connector | 24 Vdc Power/CAN (Communication Barrier) |
| 9 | 5 pin connector | Advanced Display Module |
| 10 | 5 pin connector | 24 Vdc Input |
| CPLD (D37) | LED (orange) | Heartbeat |
| POW (D19) | LED (green) | Power |
| CAN (D69) | LED (yellow) | Communication. |
| ERR (D38) | LED (red) | Blinks an error code. If the LED is on steady, the system is down. Cycle power. |

Pump Module Diagnostics


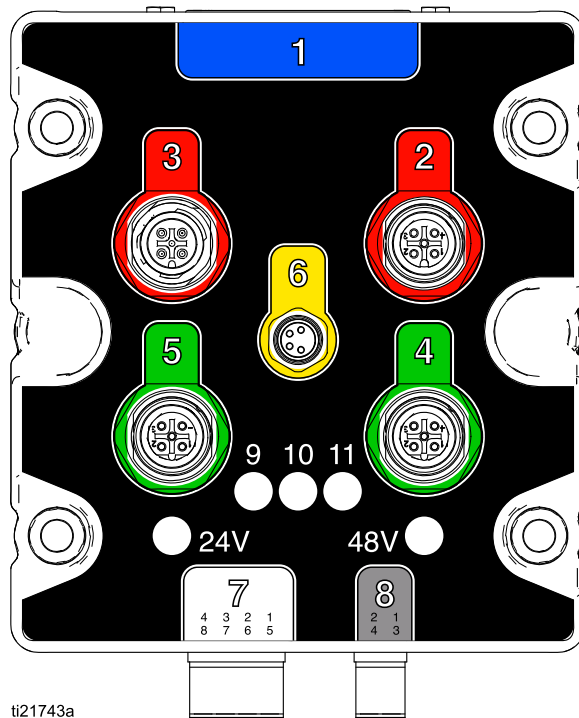


Figure 14 Pump Module

Table 4 . Pump Module Diagnostics

| ID | Component or Indicator | Function |
|-----|------------------------|---------------------------------------|
| 1 | 25 pin connector | Input from EFCM |
| 2 | 5 pin connector | Pump connection |
| 3 | 5 pin connector | Motor encoder connection |
| 4 | 5 pin connector | Pump Inlet Transducer |
| 5 | 5 pin connector | Pump Outlet Transducer |
| 6 | 4 pin connector | Motor Power Control (PD2K Dual Panel) |
| 7 | 8 pin connector | Dose Valve Solenoids |
| 8 | 4 pin connector | 48 Vdc Input Power and fan connection |
| 9 | LED (red) | Pump Up Valve Output |
| 10 | LED (red) | Pump Down Valve Output |
| 11 | LED (red) | Not used |
| 24V | LED (green) | 24 VDC power supplied |
| 48V | LED (green) | 48 VDC power supplied |

Advanced Display Module Diagnostics

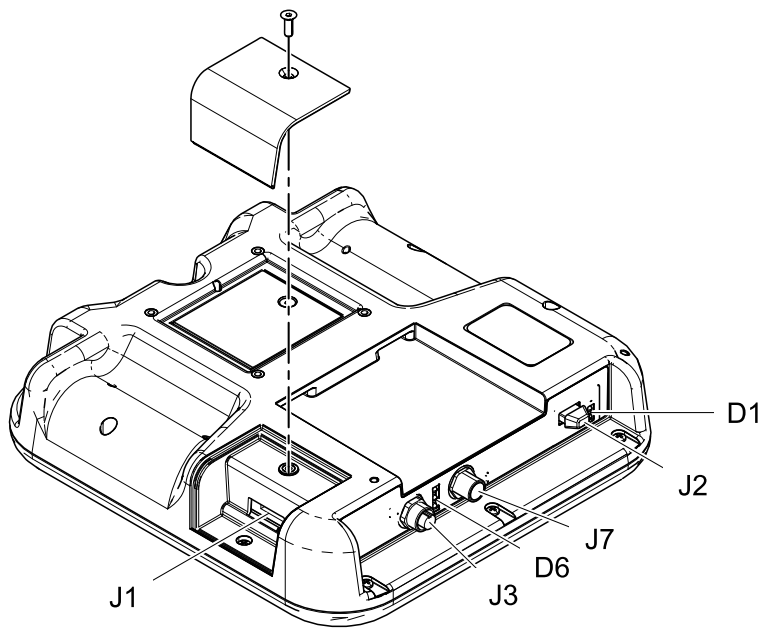

ti21939a

Figure 15 Advanced Display Module

Table 5 . Advanced Display Module Diagnostics

| ID | Component or Indicator | Function |
|----|------------------------|---|
| D1 | LED (yellow/green) | Green: USB inserted Yellow: USB communication |
| D6 | LED (red/yellow/green) | Green: Power Yellow: Communication Red: Error |
| J1 | 8 pin connector | Token port |
| J2 | 8 pin connector | USB port |
| J3 | 5 pin connector | Light tower (accessory) |
| J7 | 5 pin connector | CAN power/communication port |

Electrical Schematics

Standard Models (AC1000 and AC2000)

NOTE: The electrical schematic illustrates all possible wiring expansions in a ProMix PD2K system; models AC1000 and AC2000. Some components shown are not included with all systems.

NOTE: See [Optional Cables and Modules](#), page 43 for a list of cable options.

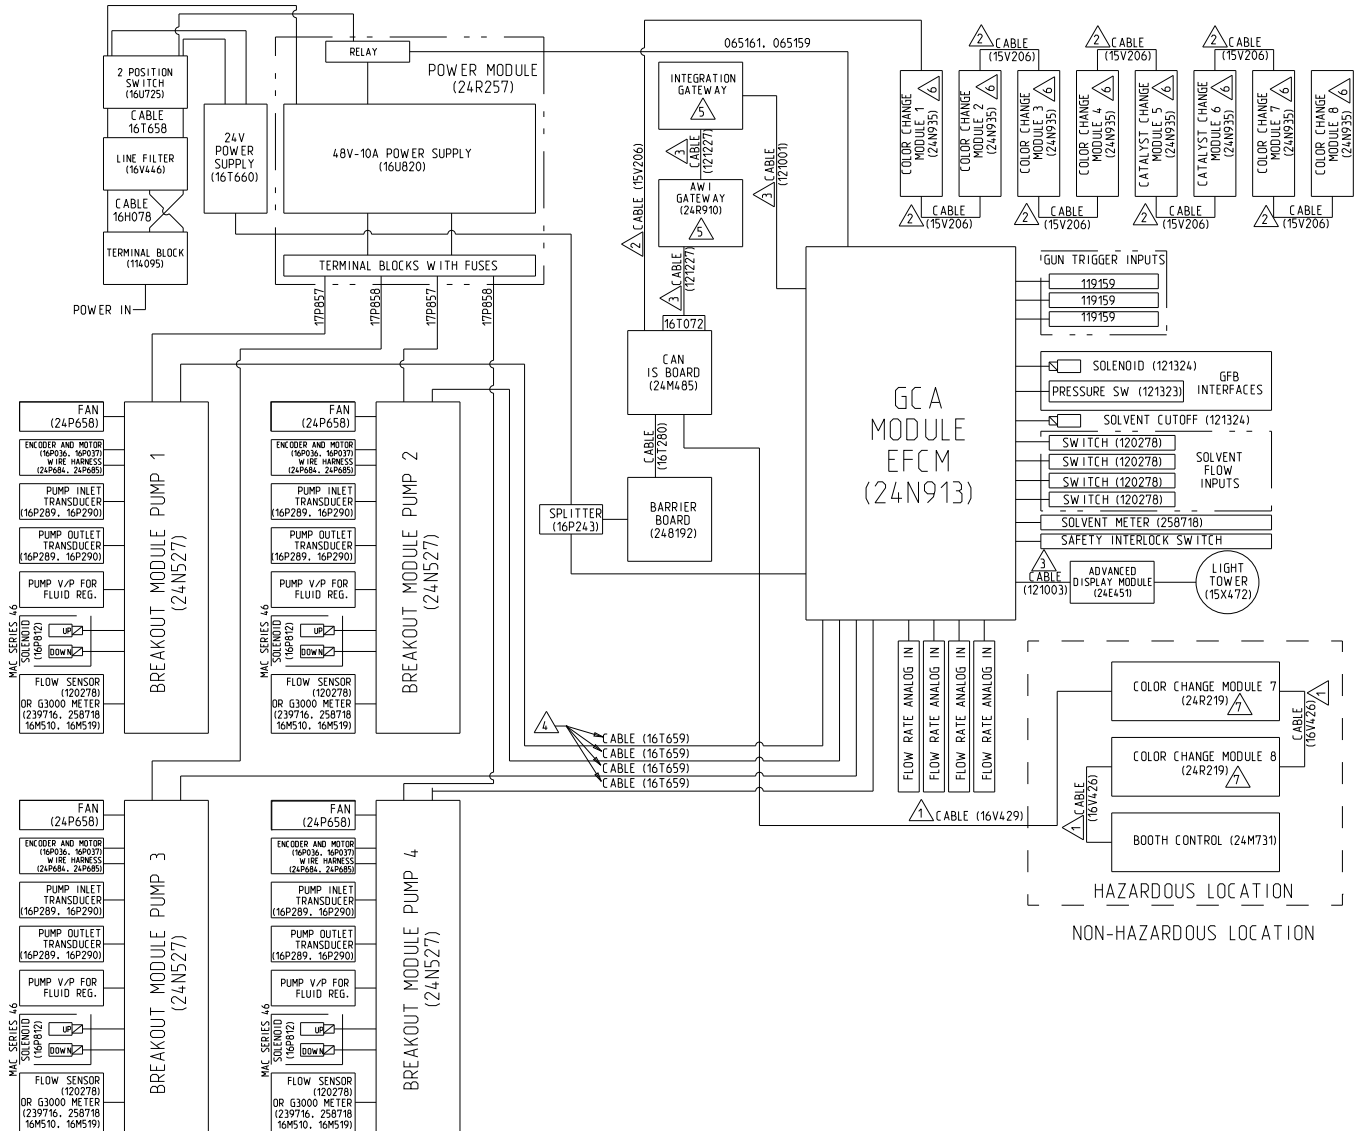


Figure 16 Electrical Schematic, Sheet 1

CONTINUED ON THE NEXT PAGE

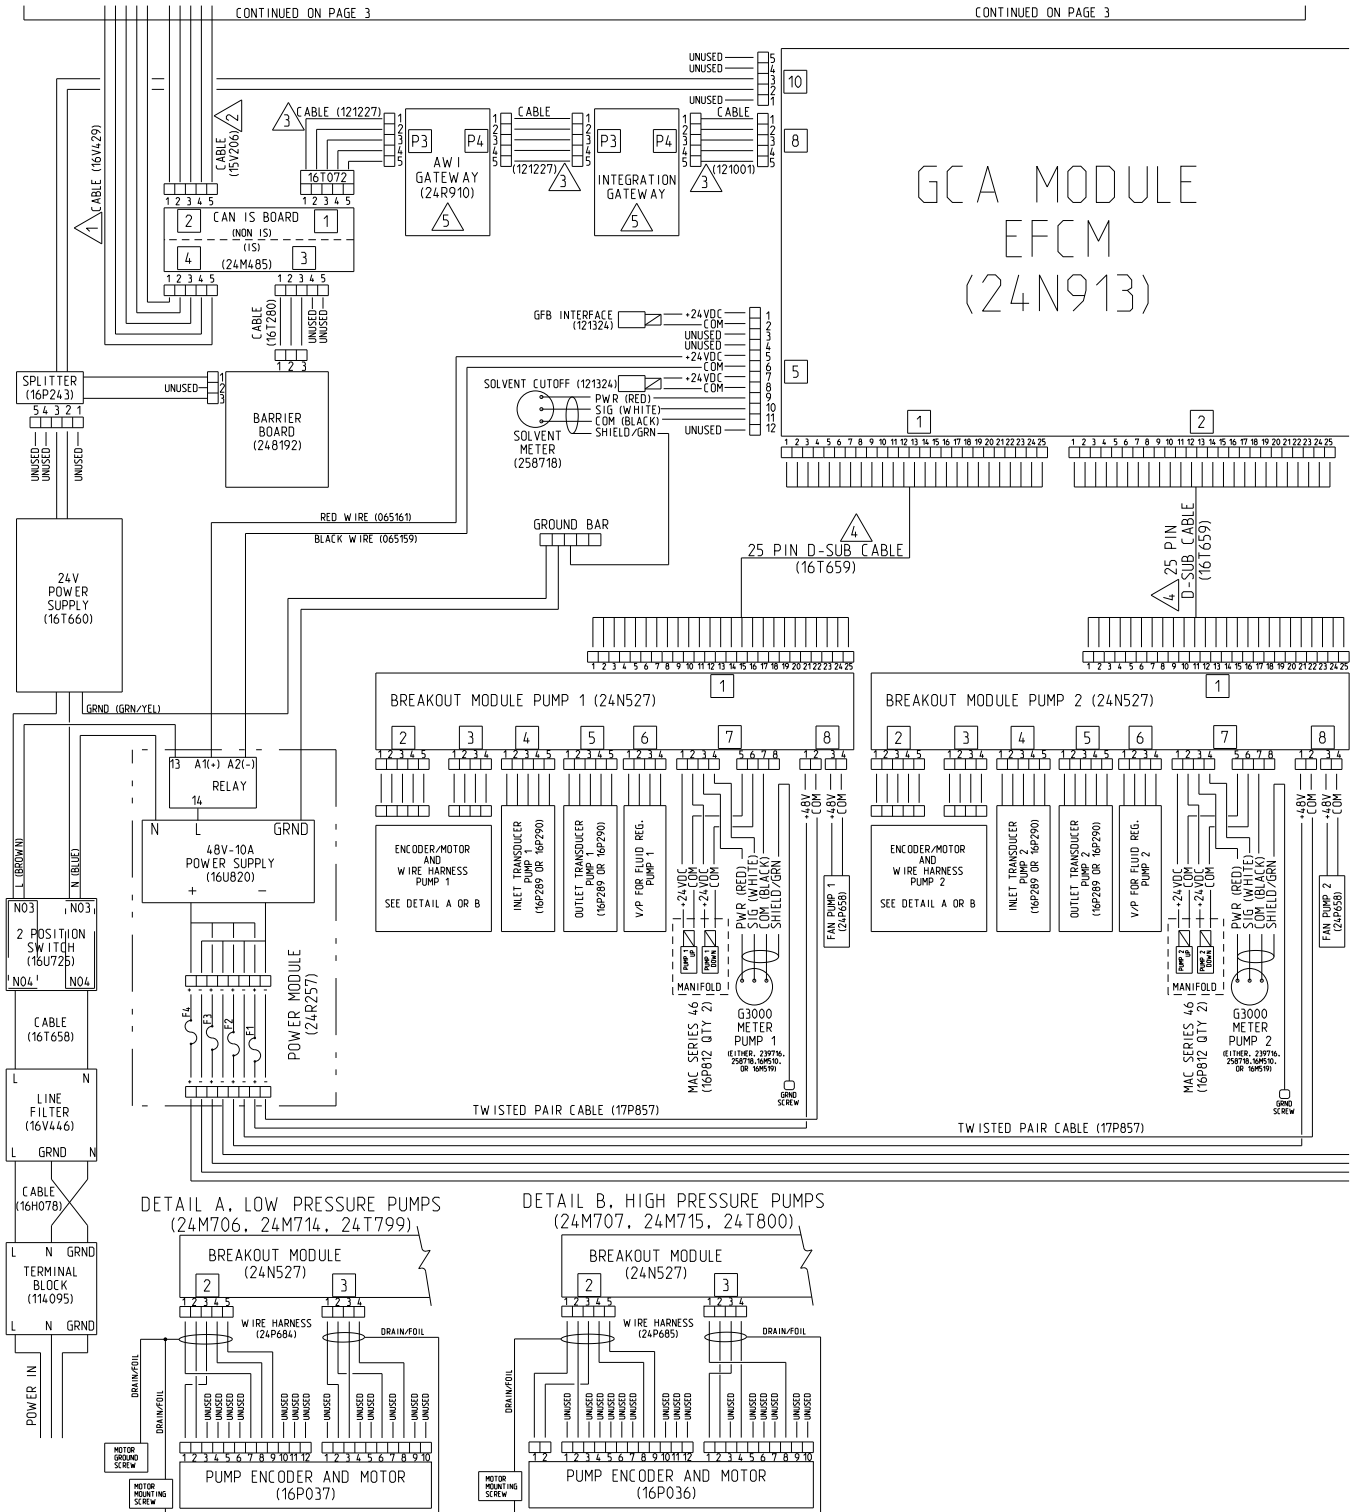


Figure 17 Electrical Schematic, Sheet 2, Part 1

CONTINUED ON THE NEXT PAGE

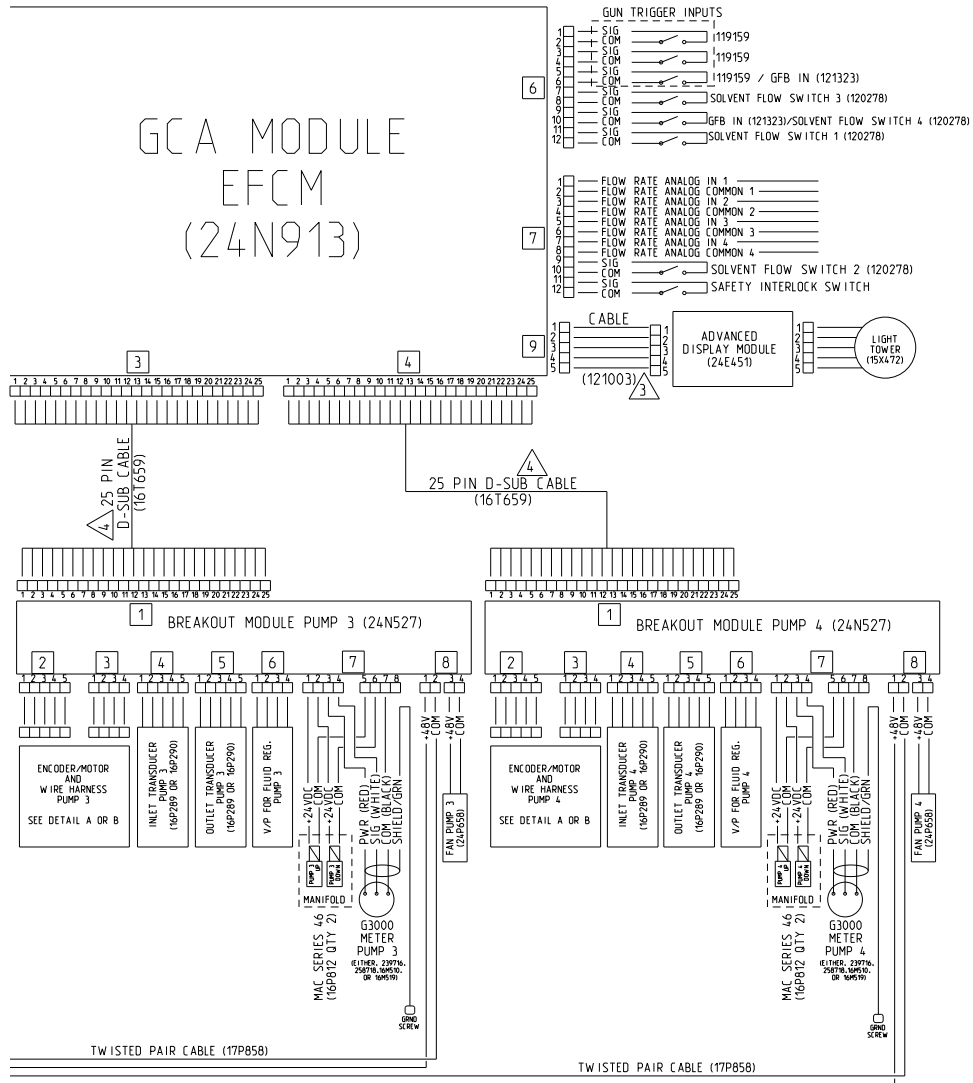


Figure 18 Electrical Schematic, Sheet 2, Part 2
 CONTINUED ON THE NEXT PAGE


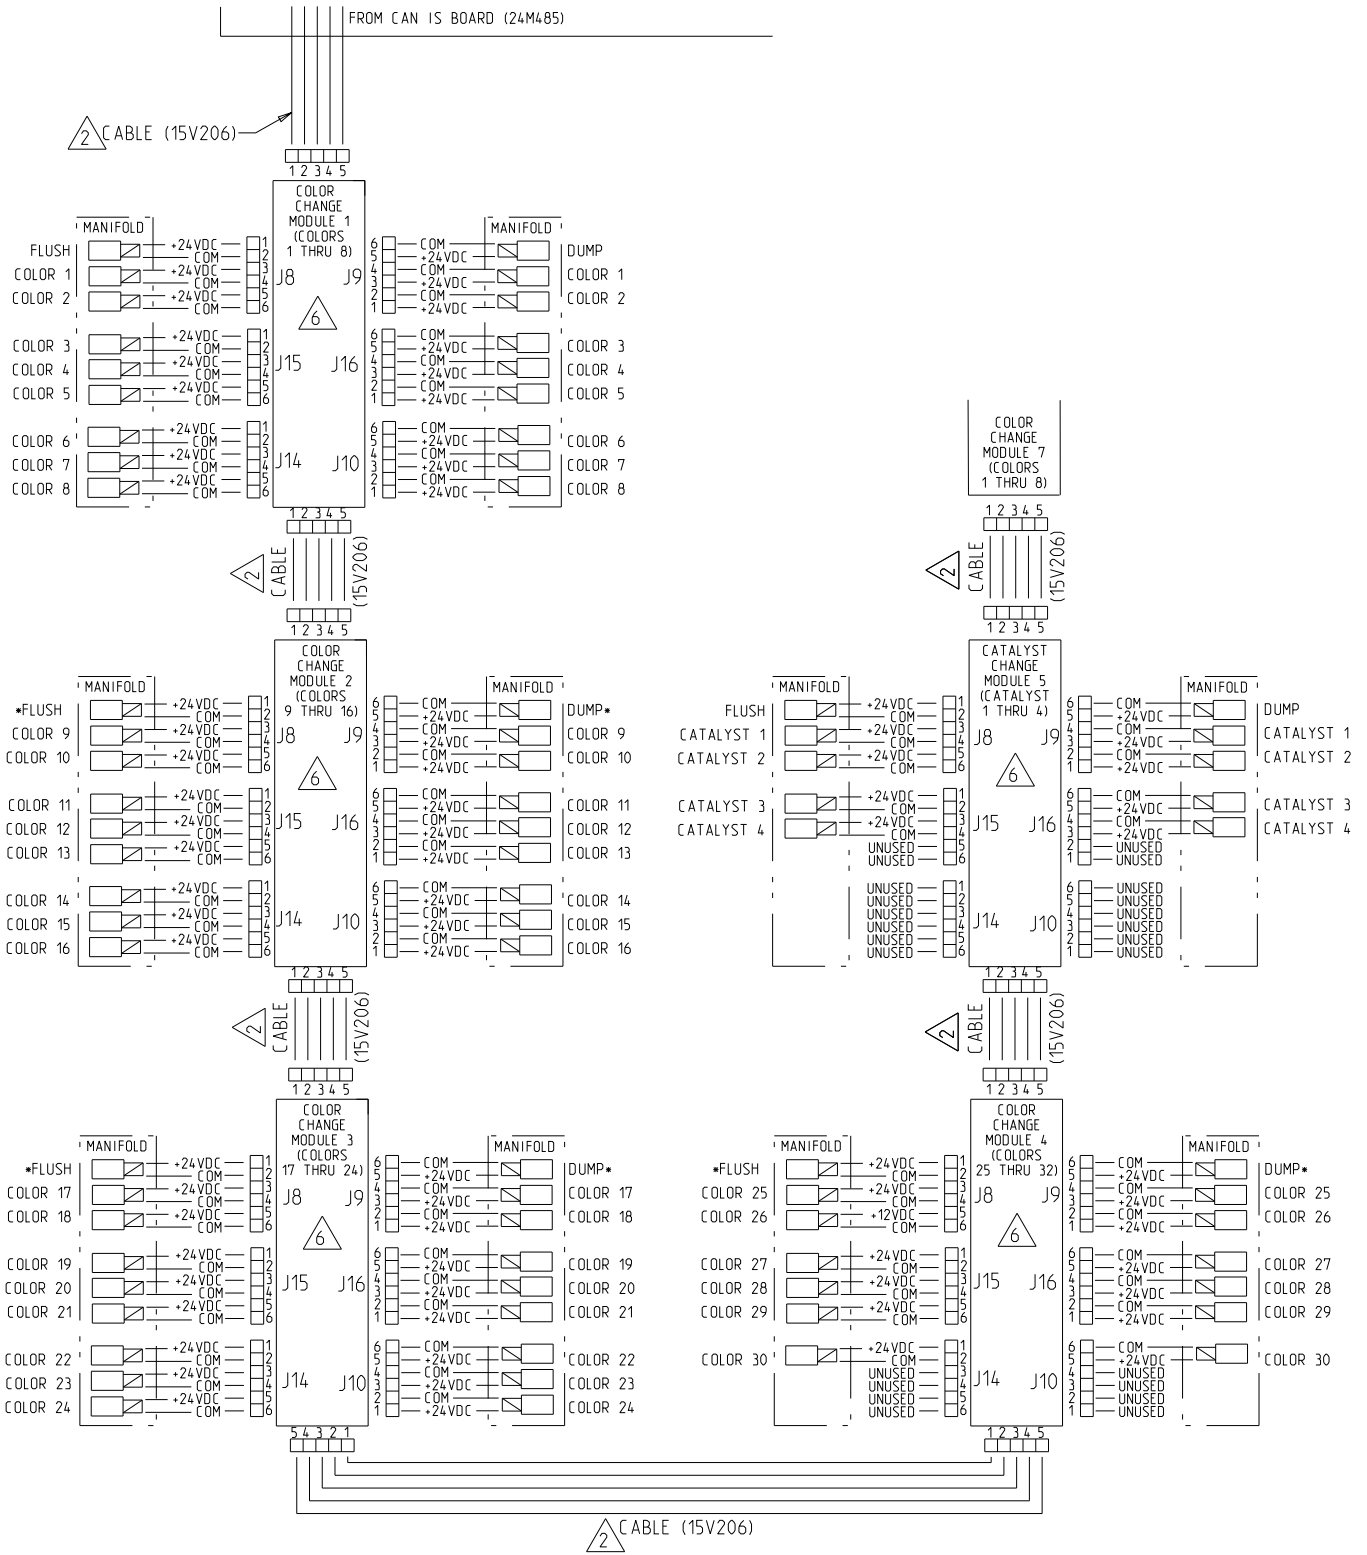


Figure 19 Electrical Schematic, Sheet 3

* May be unused in some configurations.

CONTINUED ON THE NEXT PAGE

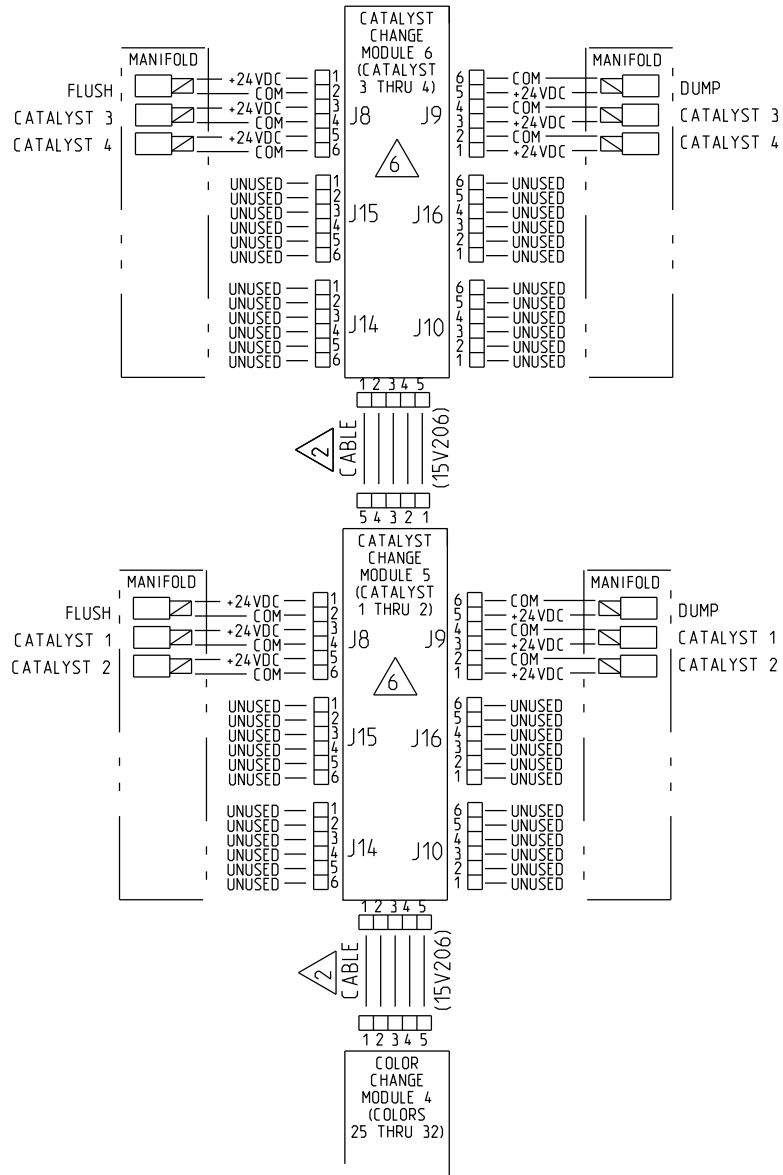

ALTERNATE CONFIGURATION
FOR CATALYST CHANGE CONTROL

Figure 20 Electrical Schematic, Sheet 3, Alternate Configuration for Catalyst Change Control

CONTINUED ON THE NEXT PAGE

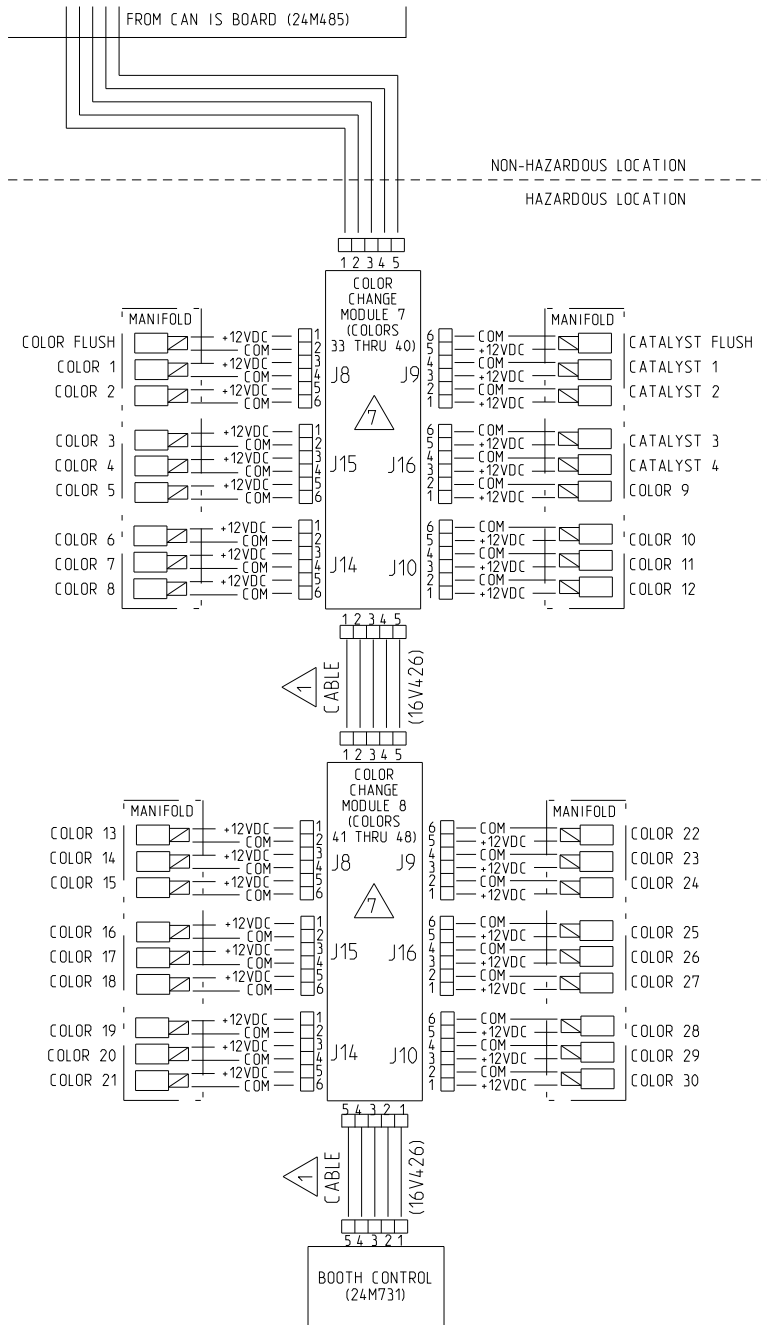


Figure 21 Electrical Schematic, Sheet 3, Hazardous Location

CONTINUED ON THE NEXT PAGE

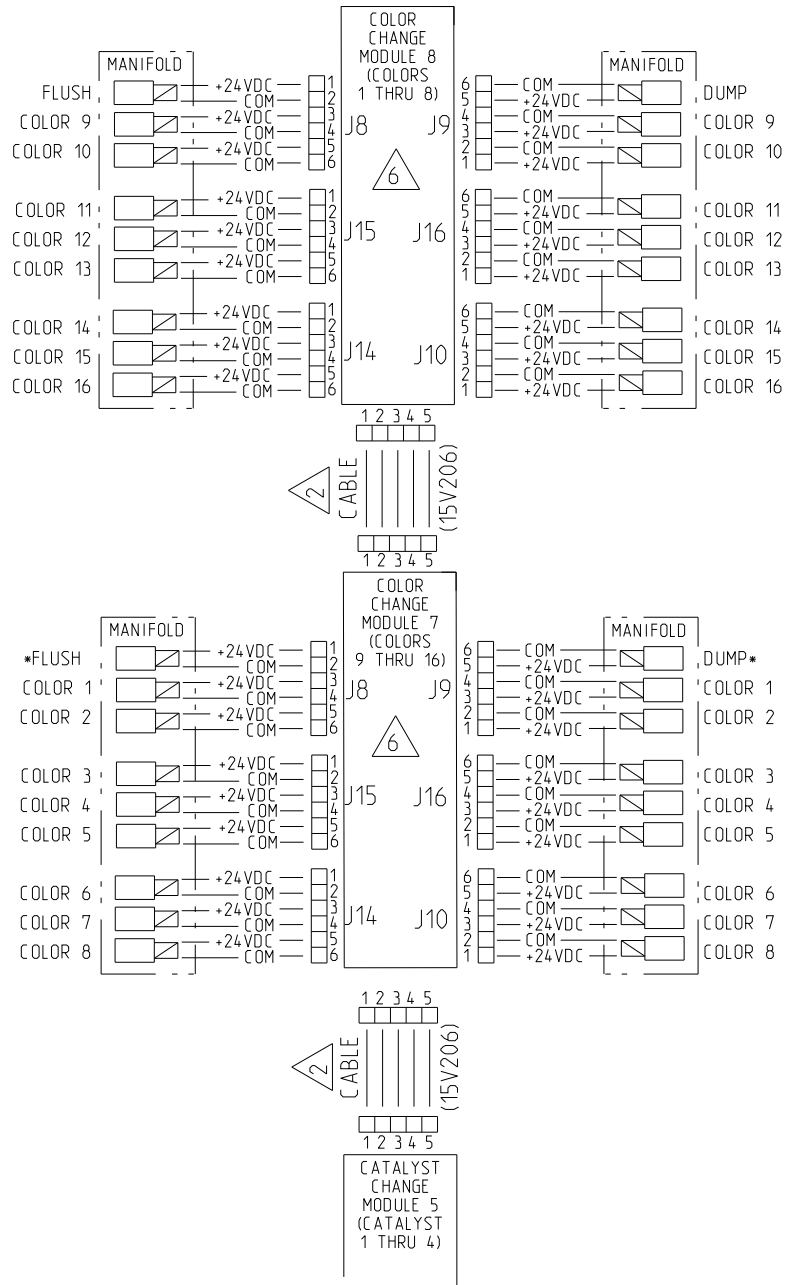


Figure 22 Electrical Schematic, Sheet 4

Dual Panel Models (AC1002 and AC2002)

NOTE:The electrical schematic illustrates all possible wiring expansions in a ProMix PD2K system; models AC1002 and AC2002. Some components shown are not included with all systems.

NOTE: See [Optional Cables and Modules, page 43](#) for a list of cable options.

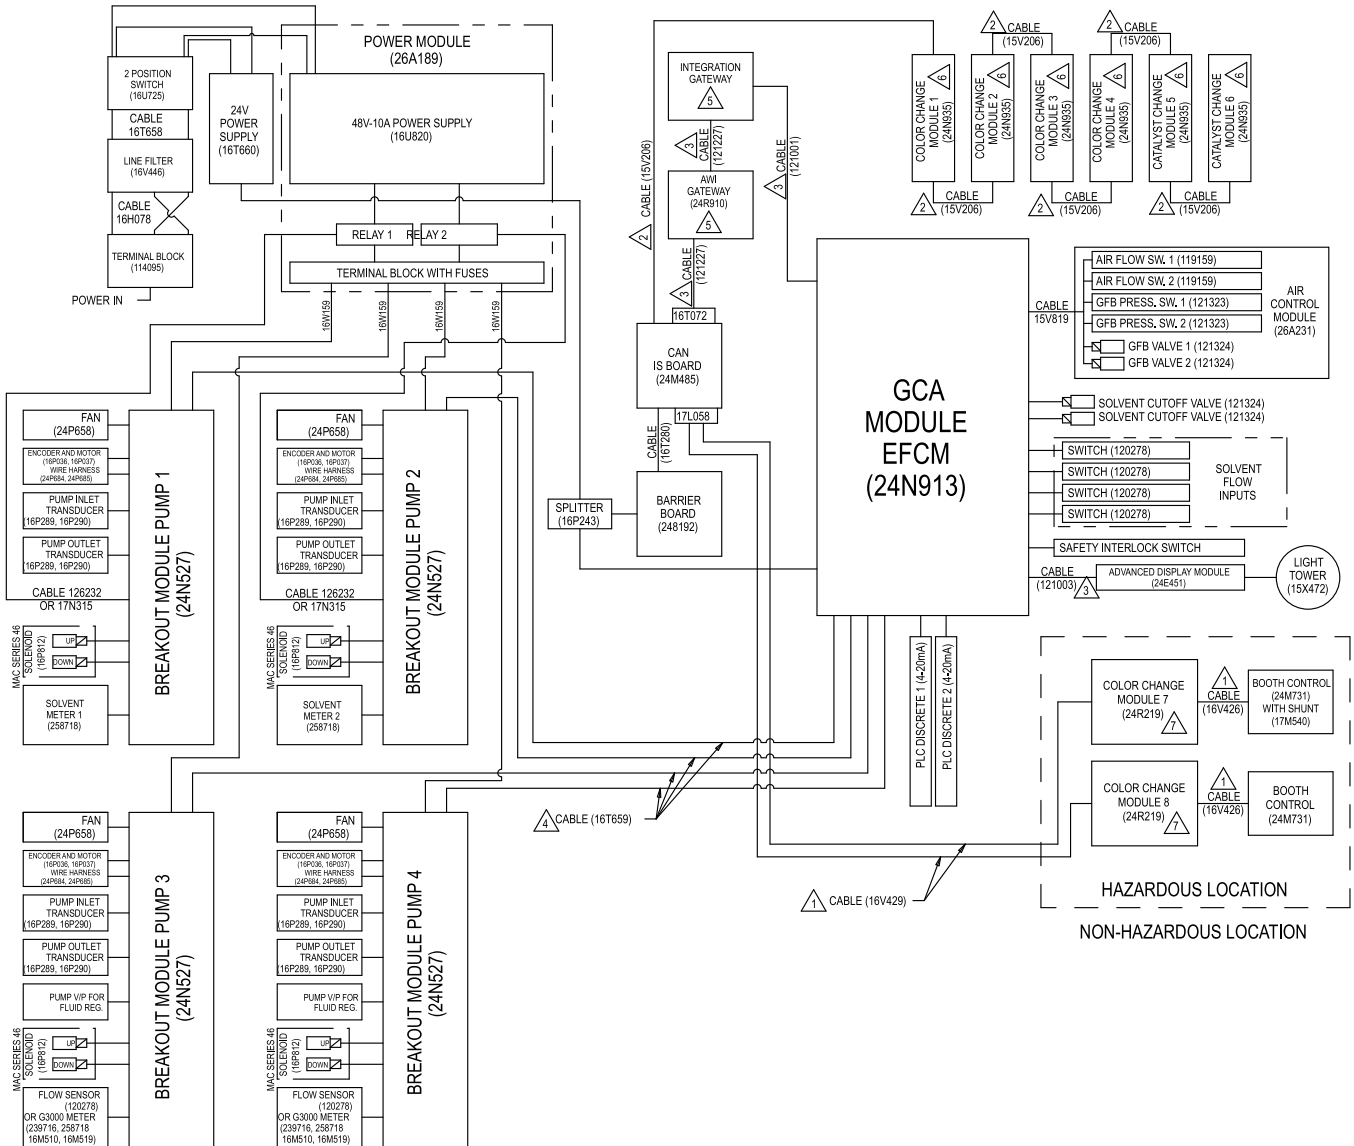


Figure 23 Electrical Schematic, Sheet 1

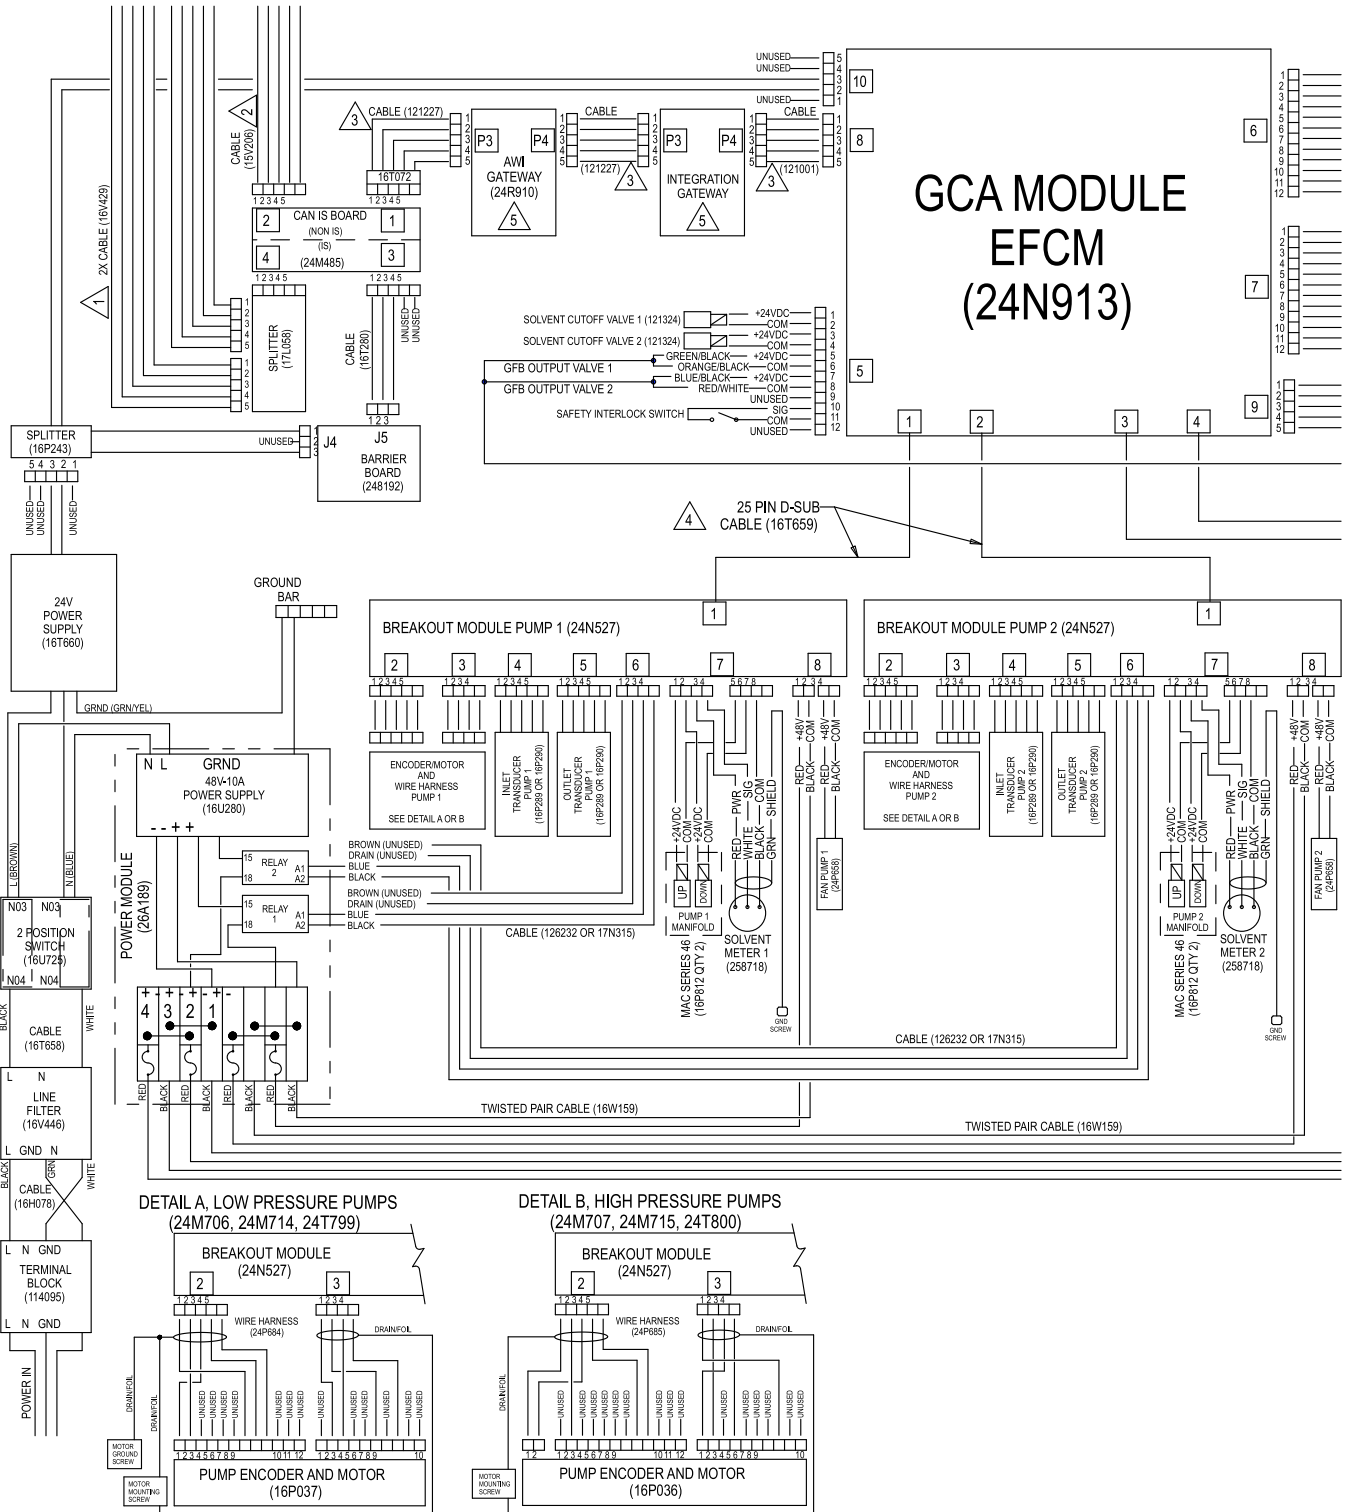


Figure 24 Electrical Schematic, Sheet 2, Part 1
 CONTINUED ON THE NEXT PAGE

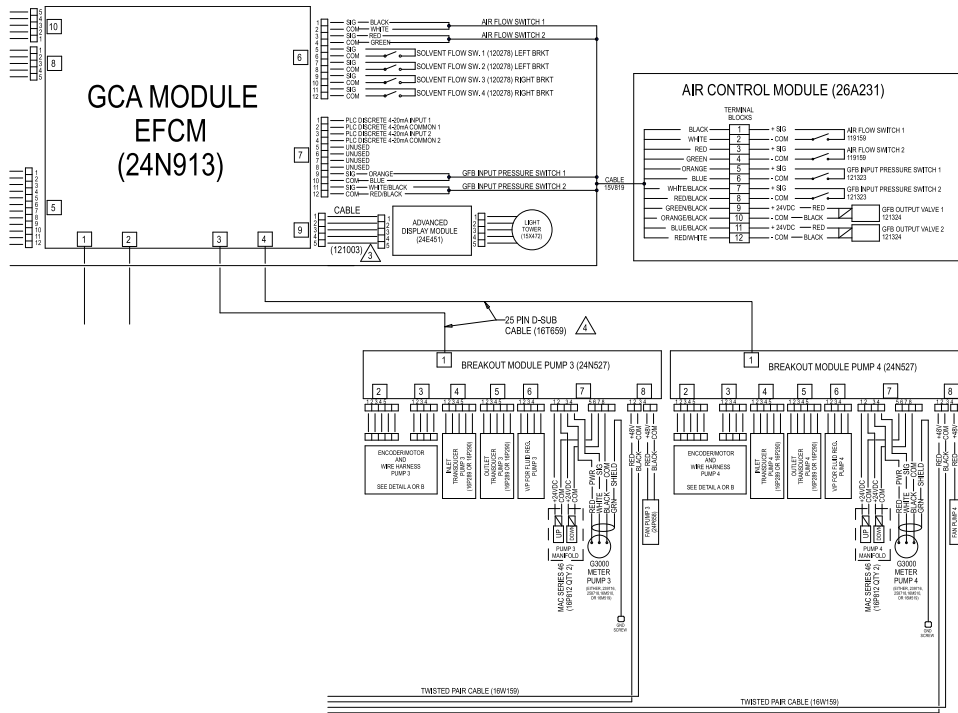


Figure 25 Electrical Schematic, Sheet 2, Part 2

CONTINUED ON THE NEXT PAGE

Electrical Schematics

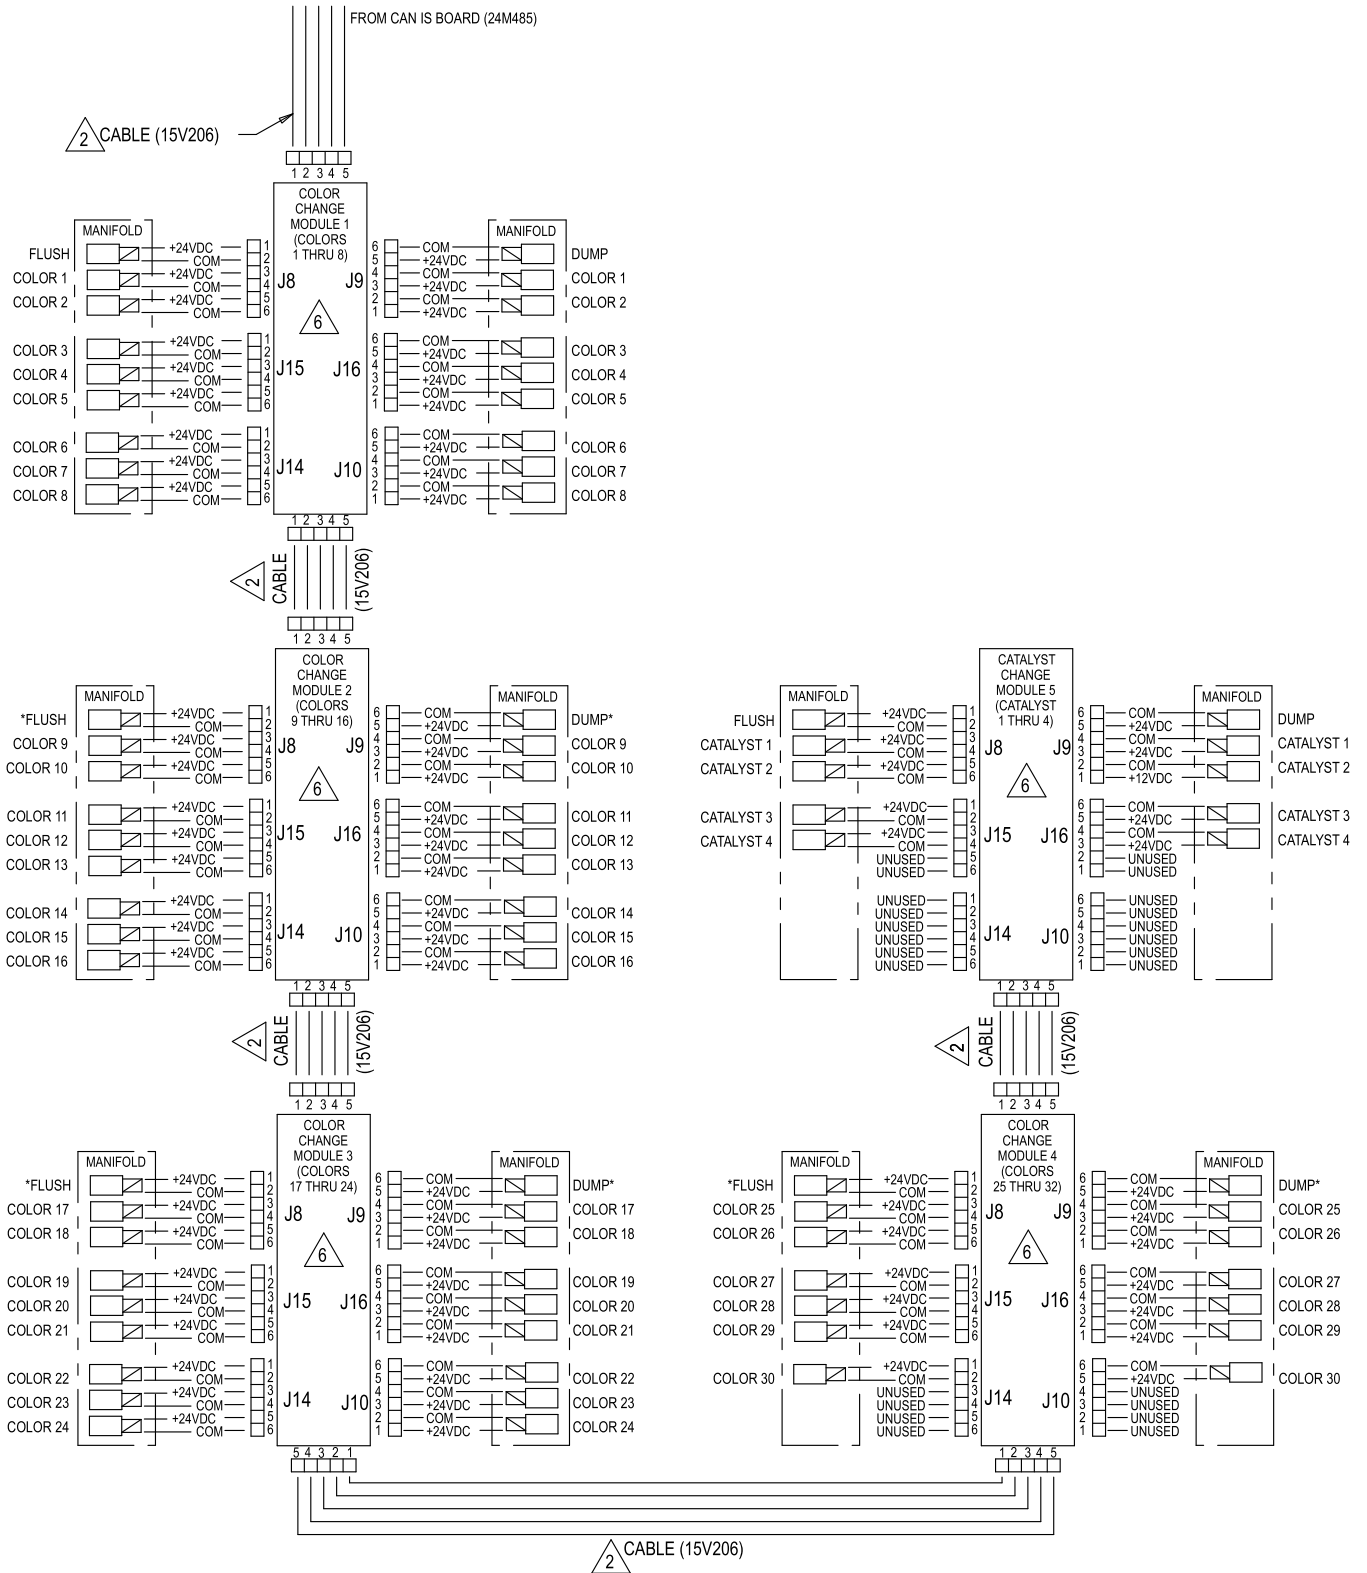


Figure 26 Electrical Schematic, Sheet 3, Part 1

* May be unused in some configurations.

CONTINUED ON THE NEXT PAGE


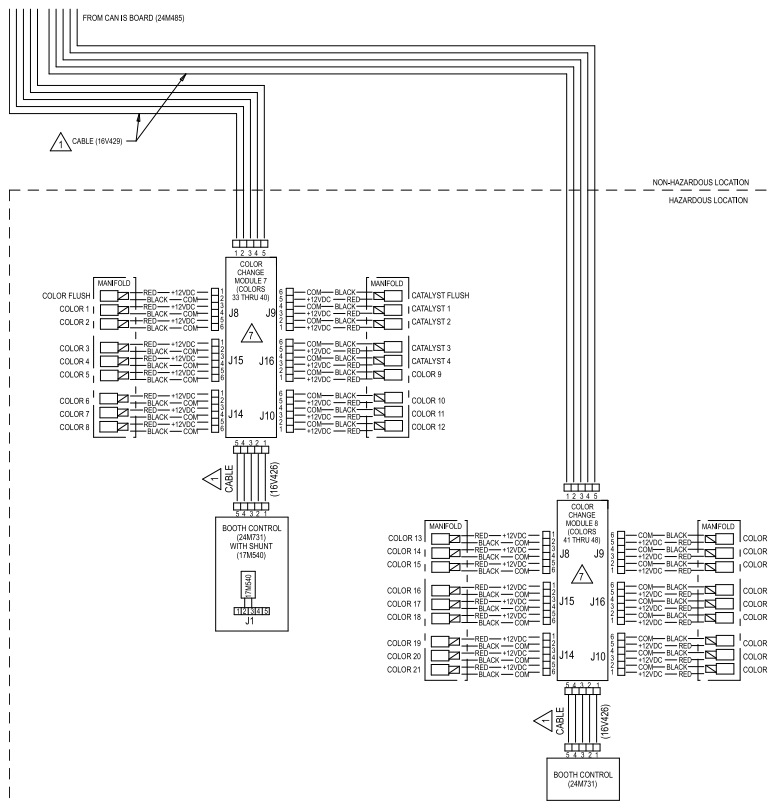


Figure 27 Electrical Schematic, Sheet 3, Part 2
 CONTINUED ON THE NEXT PAGE

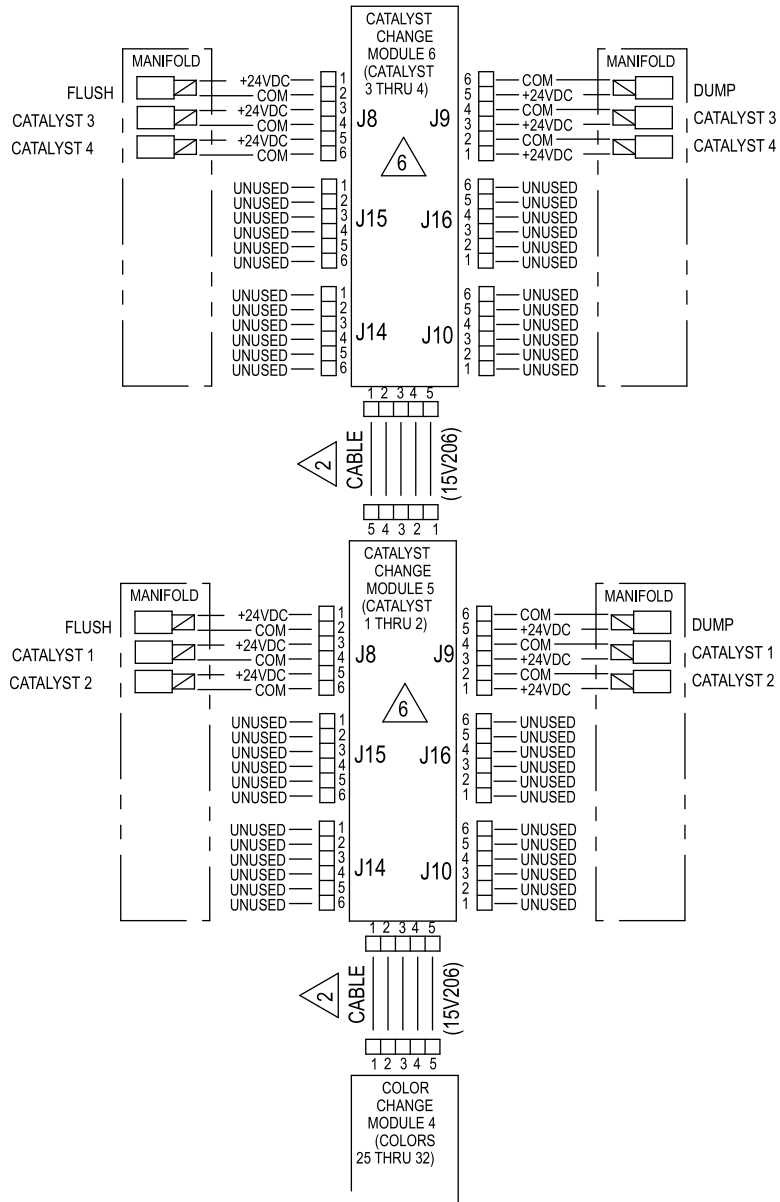

ALTERNATE CONFIGURATION
FOR CATALYST CHANGE CONTROL
IN NON-HAZARDOUS LOCATION

Figure 28 Electrical Schematic, Sheet 4, Alternate Configuration for Catalyst Change Control

Optional Cables and Modules

NOTE: The total length of all cable used in the system must not exceed 150 ft (45 m). See the [Electrical Schematics, page 30](#).

| 1 M12 CAN Cables, for Hazardous Locations | |
|--|---------------|
| NOTE: The total length of cable used in the hazardous location must not exceed 120 ft (36 m). | |
| Cable Part No. | Length ft (m) |
| 16V423 | 2.0 (0.6) |
| 16V424 | 3.0 (1.0) |
| 16V425 | 6.0 (2.0) |
| 16V426 | 10.0 (3.0) |
| 16V427 | 15.0 (5.0) |
| 16V428 | 25.0 (8.0) |
| 16V429 | 50.0 (16.0) |
| 16V430 | 100.0 (32.0) |
| 2 M12 CAN Cables, for Non-Hazardous Locations Only | |
| 15U531 | 2.0 (0.6) |
| 15U532 | 3.0 (1.0) |
| 15V205 | 6.0 (2.0) |
| 15V206 | 10.0 (3.0) |
| 15V207 | 15.0 (5.0) |
| 15V208 | 25.0 (8.0) |
| 15U533 | 50.0 (16.0) |
| 15V213 | 100.0 (32.0) |

| 3 CAN Cables, for Non-Hazardous Locations Only | |
|---|---------------|
| Cable Part No. | Length ft (m) |
| 125306 | 1.0 (0.3) |
| 123422 | 1.3 (0.4) |
| 121000 | 1.6 (0.5) |
| 121227 | 2.0 (0.6) |
| 121001 | 3.0 (1.0) |
| 121002 | 5.0 (1.5) |
| 121003 | 10.0 (3.0) |
| 120952 | 13.0 (4.0) |
| 121201 | 20.0 (6.0) |
| 121004 | 25.0 (8.0) |
| 121228 | 50.0 (15.0) |

| 4 25 Pin D-SUB Cables, for Non-Hazardous Locations Only | |
|--|-----------|
| 16T659 | 2.5 (0.8) |
| 16V659 | 6.0 (1.8) |
| 5 Communication Options (for PLC and AWI) | |
| See Communications Options (for PLC and AWI) , page 44 | |

| 6 Alternates for Color Change Modules by Part Number (Factory Configuration), for Non-Hazardous Locations Only | |
|---|----------------------------------|
| Module Part No. | Description |
| 24T557 | 2 color/2 catalyst |
| 24T558 | 4 color/4 catalyst |
| 24T559 | 6 color |
| 24T560 | 8 color |
| 7 Alternates for Color Change Modules by Part Number (Factory Configuration), for Hazardous Locations Only | |
| 24T571 | 2 color/2 catalyst |
| 24T572 | 4 color/2 catalyst |
| 24T573 | 6 color/2 catalyst |
| 24T574 | 8 color/2 catalyst, 13–24 color |
| 24T774 | 12 color/2 catalyst |
| 24T775 | 4 color/4 catalyst |
| 24T776 | 6 color/4 catalyst |
| 24T777 | 8 color/4 catalyst |
| 24T778 | 12 color/4 catalyst, 13–30 color |
| 24T779 | 13–18 color |

| Accessory Tool Kit | |
|---------------------------|--------------------|
| Part No. | Description |
| 25D980 | ProMix PD Tool Kit |

| Upgrade Kits | |
|---------------------|-------------------|
| Kit Part No. | Kit Description |
| 26C416 | PD3K+ Upgrade Kit |

Communications Options (for PLC and AWI)

1. If your application requires integration with a PLC:
 - a. 24W829, CGM Kit for ProMix PD2K
26C284, CGM Kit for ProMix PD3K+
26A303, CGM Kit for ProMix PD Dual Mix
25D997, CGM Kit for ProMix PD Dual Mix with ProfiNet (includes two CGM modules)
 - b. CGMEP0, Ethernet IP
CGMDN0, Device Net
CGMPN0, ProfiNet
24W462, Modbus TCP




2. If your application requires AWI:
 - a. 24W829, CGM Kit for PD2K
 - b. 24W462, Modbus TCP*
 - c. 15V337, AWI Module

NOTE: AWI is not currently available for Dual Panel systems.

* AWI requires its own Modbus TCP module. If the PLC is also communicating over Modbus TCP, then two 24W462 modules are necessary.

Repair

Before Servicing

| | | | | |
|---|---|---|--|--|
|  |  |  | | |
|---|---|---|--|--|

Servicing the electrical control box exposes you to high voltage. To avoid electric shock;

- Turn off power at the main circuit breaker before opening the enclosure.
- All electrical wiring must be done by a qualified electrician and comply with all local codes and regulations.
- Do not substitute or modify system components as this may impair intrinsic safety.

NOTICE

To avoid damaging the circuit boards when servicing the control box, wear Part No. 112190 grounding strap on your wrist and ground appropriately.

To avoid electrical component damage, remove all system power before plugging any connectors.

1. Flush the system as explained in your PD2K Operation Manual if service time may exceed pot life time. Follow the [Pressure Relief Procedure, page 46](#) before servicing fluid components.
2. Close the main air shutoff valve on the air supply line.
3. Shut off the power switch (P) at the electrical control box.
4. If servicing the electrical control box, shut off power at the main circuit breaker before opening the enclosure.

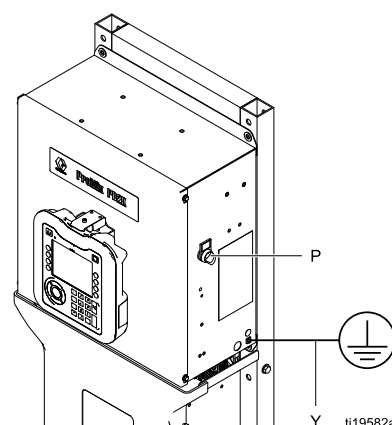


Figure 29 Control Box Power Switch

Pressure Relief Procedure



Follow the **Pressure Relief Procedure** whenever you see this symbol.

| | | | | |
|--|--|--|--|--|
| | | | | |
| | | | | |

This equipment stays pressurized until pressure is manually relieved. To help prevent serious injury from pressurized fluid, such as skin injection, splashing fluid and moving parts, follow the **Pressure Relief Procedure** when you stop spraying and before cleaning, checking, or servicing the equipment.

Without Color Change

NOTE: The following procedure relieves all fluid and air pressure in the system. Use your control interface to issue the necessary commands to your system.

1. Turn off the supply pumps. Open the drain valve on the supply line fluid filter to relieve pressure in the supply line.

NOTE: If your system does not include a drain valve on the supply line, command the system to Mix. Cycle the dosing pumps a couple of times to drain the pumps through the spray device.
2. Command the system to Standby. Trigger the spray device to relieve pressure.
3. Flush the remote mix manifold and spray device.
4. Shut off the solvent supply pump. To relieve pressure, command the system to Purge and trigger the spray device. When the pressure is relieved, command the system to Standby to avoid getting a Purge Incomplete alarm.
5. If pressure remains in the solvent line between the solvent supply pump and the solvent valve:
 - VERY SLOWLY loosen a fitting to relieve pressure gradually.
 - Loosen the fitting completely.

6. **Dual Panel Systems:** Repeat for Mix Unit #2.

With Color Change

NOTE: The following procedure relieves all fluid and air pressure in the system.

1. Turn off the supply pumps. Open the drain valve on the supply line fluid filter to relieve pressure in the supply lines. Do this for each color.

2.

| | | | | |
|--|--|--|--|--|
| | | | | |
|--|--|--|--|--|

To help prevent fire and explosion, shut off electrostatics before flushing.


If using an electrostatic gun, shut off the electrostatics before flushing the gun.

3. Trigger the gun to relieve pressure. From Maintenance Screen 5 on the ADM, check the box in the field labeled Gun for each color in the system to manually open each color valve.
4. Set the system to Recipe 0 to flush the pumps and to purge to the spray device. Hold the gun trigger open after the solvent valve shuts off to relieve all pressure. When flushing is complete the system will go to Standby.
5. Shut off the solvent supply pump. Set the system to Recipe 0 to flush solvent from the pumps and to purge to the spray device. Command the system to Standby after just a couple of seconds, to avoid getting a Purge Incomplete alarm.
6. If pressure remains in the solvent line between the solvent supply pump and the solvent valve:
 - VERY SLOWLY loosen a fitting to relieve pressure gradually.
 - Loosen the fitting completely.
7. Verify on the ADM Home Screen that neither pump is showing any pressure.
8. **Dual Panel Systems:** Repeat for Mix Unit #2.

Repairing the Advanced Display Module (ADM)

Replace the ADM


To replace the Advanced Display Module, disconnect the cable from the module and remove the module from the bracket. Install the new module on the bracket and attach the cable.

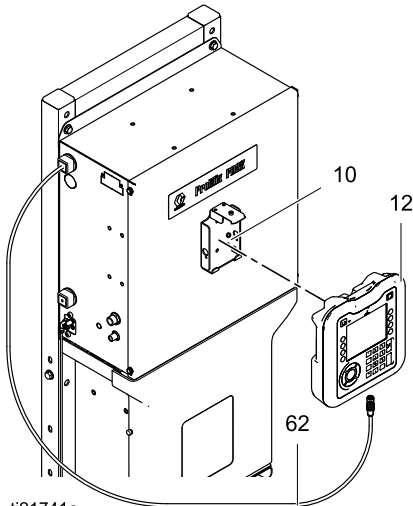

ti21741a
Figure 30 Replace the Advanced Display Module


Install Key Token or Upgrade Token

1. Shut off the ProMix PD power switch.
2. Remove the token access panel.

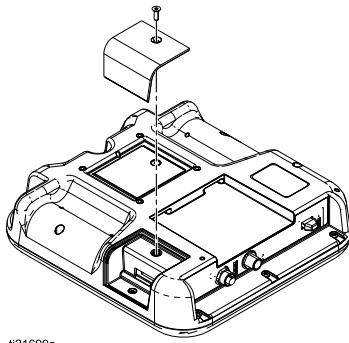

- ti21699a
- Figure 31 Remove Token Access Panel
3. Remove blue key token.
 4. Insert and press black upgrade token (T) firmly into slot.

NOTE: There is no preferred orientation of the token.

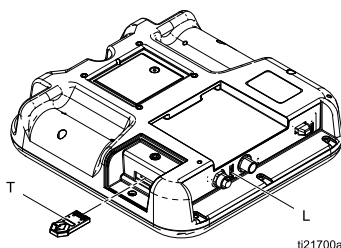


ti21700a
Figure 32 Insert Token


5. Turn the power switch back on. The red indicator light (L) will flash until the new firmware is completely loaded.
 6. Remove the token (T).
 7. Replace the blue key token.
- NOTE:** The blue key token is required for proper operation.
8. Replace the token access panel.

Replace the Battery

A lithium battery maintains the ADM clock when the power is not connected.

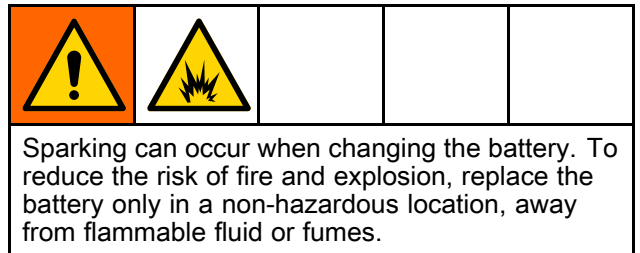


1. Turn off the ProMix PD power switch.
2. Remove the rear access panel.

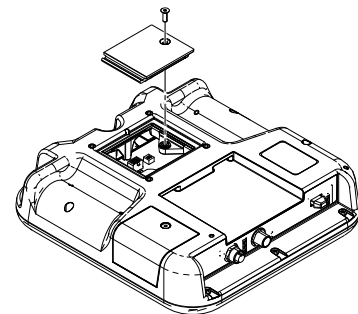

- ti21698a
- Figure 33 Remove Battery Panel
3. Remove the old battery and replace with a new CR2032 battery.
 4. Replace the rear access panel.
 5. Turn the power switch on.
 6. Dispose of the old battery according to your federal, state, and local waste regulations.

Servicing the Control Box

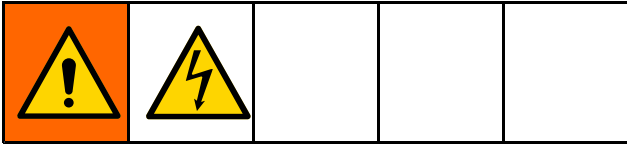

Replacing the Isolation Board


NOTICE

To avoid damaging the circuit boards when servicing the control box, wear Part No. 112190 grounding strap on your wrist and ground appropriately.

To avoid electrical component damage, remove all system power before plugging any connectors.

1. Follow the steps in [Before Servicing, page 45](#).
2. Loosen the screws (124) and remove the enclosure cover (117).
3. Note the position of the isolation board cables. See the following table, [Electrical Schematics, page 30](#), and Figure 24. Disconnect the cables from the isolation board (111). Remove the brackets (110).

| Isolation Board Connector | Cable Destination |
|-----------------------------|-------------------------------------|
| J1 (non-intrinsically safe) | Gateway Module |
| J2 (non-intrinsically safe) | Optional Non-IS Color Change Module |
| J3 (intrinsically safe) | Barrier Board |
| J4 (intrinsically safe) | Optional IS Color Change Module |

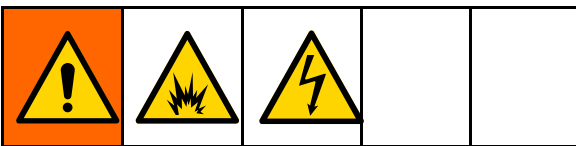

To reduce the risk of fire or explosion, be certain that the barrier board is connected to J3, on the IS side of the isolation board. If connected incorrectly, the intrinsic safety of your system is compromised.

4. Remove the screws (128) holding the isolation board (111) to the barrier cover (107). Remove the isolation board.
5. Install the new isolation board, using the screws (128).
6. Install the brackets (110). Reconnect the cables to the isolation board (111).
7. Turn on power at the main circuit breaker.

8. Turn on the control box power switch. Check that the two green LEDs (D7, D8) and two yellow LEDs (D6, D14) are on. See Figure 24.
9. Reinstall the cover (117) and tighten the screws (124).

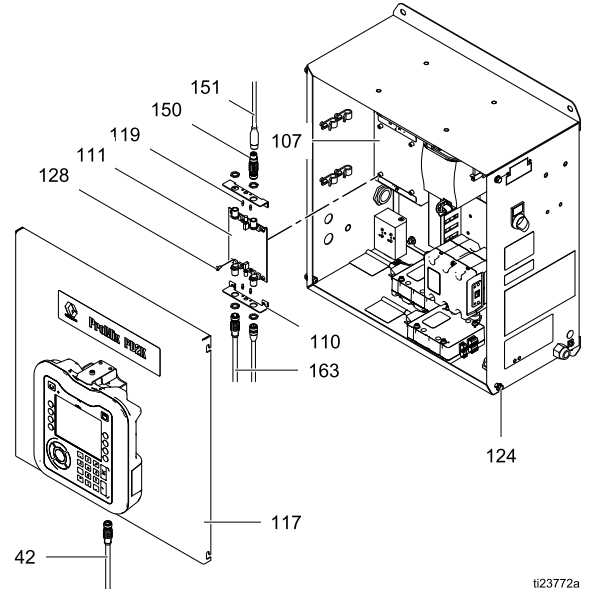


Figure 34 Replacing the Isolation Board

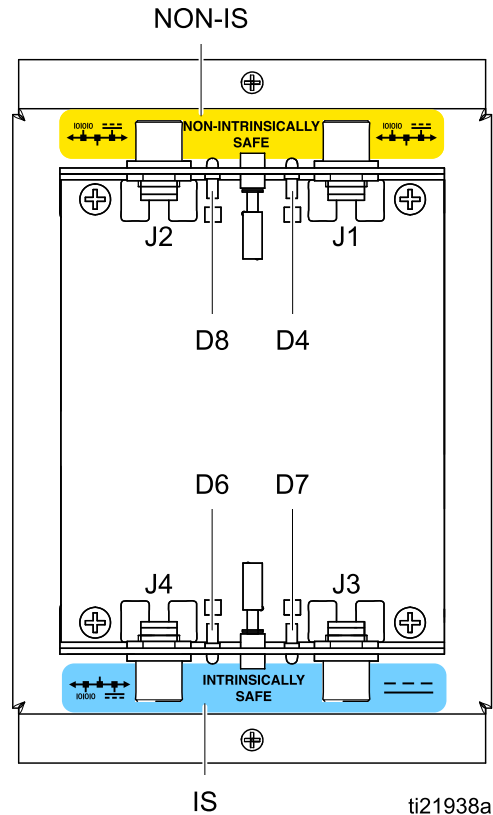


Figure 35 Detail of Isolation Board Cable Connections

Replacing the Barrier Board

NOTICE


To avoid damaging the circuit boards when servicing the control box, wear Part No. 112190 grounding strap on your wrist and ground appropriately.

To avoid electrical component damage, remove all system power before plugging any connectors.

1. Follow the steps in [Before Servicing, page 45](#).
2. Loosen the screws (124) and remove the enclosure cover (117).
3. Loosen the screws (125) and remove the barrier cover (107), leaving the isolation board (111) attached to the cover.
4. Note the position of the barrier board input and output cables. See [Electrical Schematics, page 30](#). Disconnect the cables from the barrier board (106).
5. Remove the two screws (108), and the three screws (109), spacers (105), and lockwashers (104). Remove the barrier board (106).
6. Install the new barrier board, using the screws, spacers, and lockwashers.
7. Reconnect the cables to the barrier board, as noted above.
8. Install the barrier cover (107) and isolation board (111).
9. Turn on power at the main circuit breaker.

10. Turn on the control box power switch. Check that the system is operating.

NOTE: The two green LEDs (D4, D5) on the barrier board will light if the board has power.

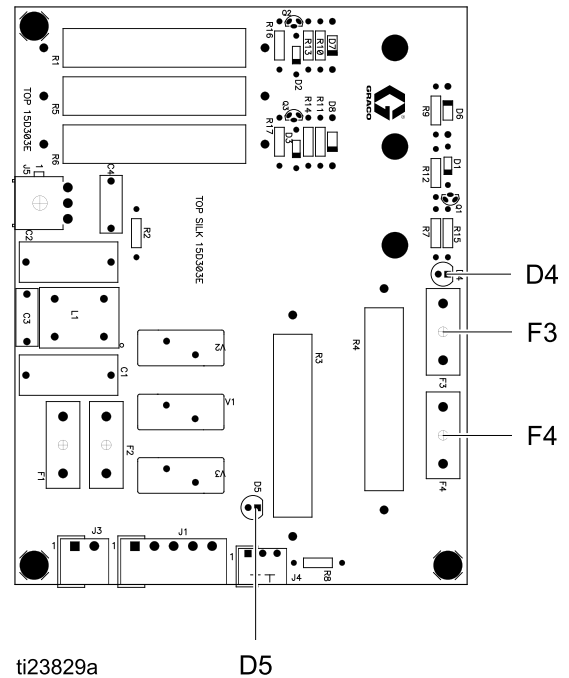

11. Reinstall the cover (117) and tighten the screws (124).

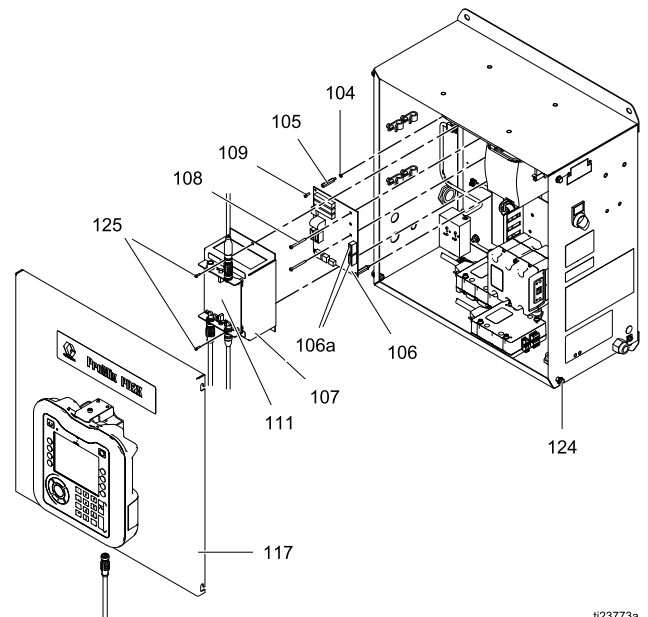


Figure 36 Replacing the Barrier Board

Replacing the Barrier Board Fuses

NOTICE

To avoid damaging the circuit boards when servicing the control box, wear Part No. 112190 grounding strap on your wrist and ground appropriately.

To avoid electrical component damage, remove all system power before plugging any connectors.

1. Follow steps 1–4 under [Replacing the Barrier Board, page 49](#).
2. Remove the fuse (F3 or F4) from its fuseholder.
3. Snap the new fuse (Graco PN 15D979) into the fuseholder.
4. Follow steps 7–11 under [Replacing the Barrier Board, page 49](#).


Replacing the Enhanced Fluid Control Module (EFCM)

NOTICE

To avoid damaging the circuit boards when servicing the control box, wear Part No. 112190 grounding strap on your wrist and ground appropriately.


To avoid electrical component damage, remove all system power before plugging any connectors.

1. Follow the steps in [Before Servicing, page 45](#).
2. Loosen the screws (124) and remove the enclosure cover (117, not shown).
3. Note the position of the EFCM input and output cables. See [Electrical Schematics, page 30](#). Disconnect the cables from the EFCM (139).
4. Loosen the screws (142) holding the EFCM to the enclosure. Remove the module.
5. Install the new EFCM, using the screws (142).
6. Reconnect the cables to the positions as noted above.
7. Turn on power at the main circuit breaker.
8. Load the software to the ADM. See [Install Key Token or Upgrade Token, page 47](#).
9. Turn on the control box power switch. Check that the green is on, the orange and yellow LEDs are blinking, and the red LED is off.

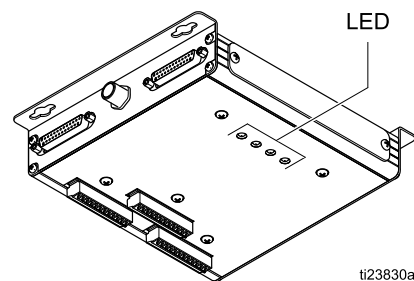

ti23830a

10. Reinstall the cover (117) and tighten the screws (124).

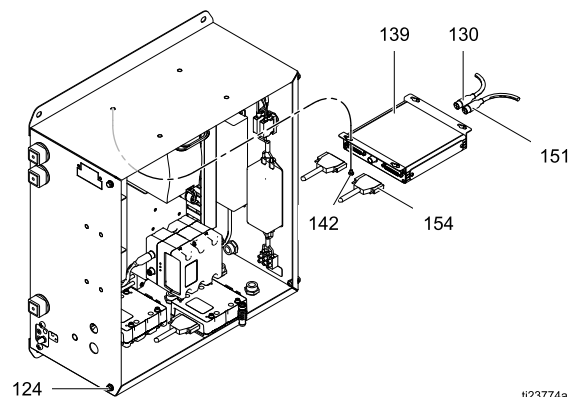

ti23774a

Figure 37 Replacing the EFCM Control Module

Replacing the 24 VDC Power Supply

NOTICE

To avoid damaging the circuit boards when servicing the control box, wear Part No. 112190 grounding strap on your wrist and ground appropriately.

To avoid electrical component damage, remove all system power before plugging any connectors.

1. Follow the steps in [Before Servicing, page 45](#).
2. Loosen the screws (124) and remove the enclosure cover (117, not shown).
3. Note the position of the power supply input and output wires. See [Electrical Schematics, page 30](#). Disconnect the wires from the power supply (120).
4. Remove the screws (129) holding the power supply to the side of the enclosure. Remove the power supply.
5. Install the new power supply, using the screws (129).
6. Reconnect the wires to the power supply.

NOTICE

Failure to follow the electrical schematic could result in damage to the electrical components.

7. Reinstall the cover (117) and tighten the screws (124).

8. Turn on power at the main circuit breaker.
9. Turn on the control box power switch.

NOTE: The green LED on the barrier board (106), the green power LED on the EFCM module (139), and the 24V green LED on each of the pump control modules (132) will light when operating.

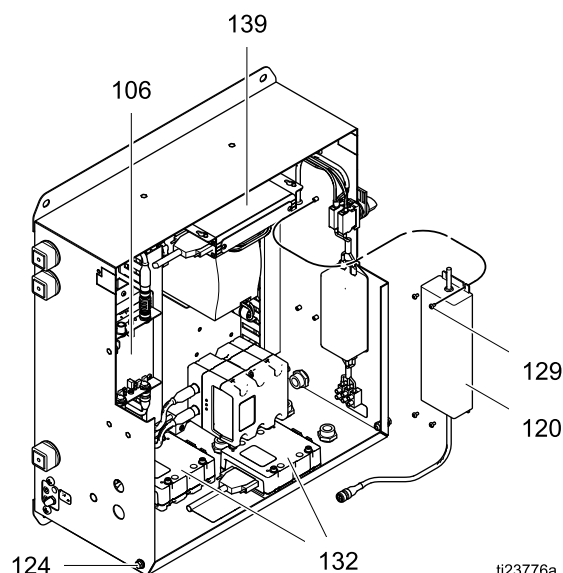


Figure 38 Replacing the 24 Vdc Power Supply

Replacing the 48 VDC Pump Power Supply

NOTICE

To avoid damaging the circuit boards when servicing the control box, wear Part No. 112190 grounding strap on your wrist and ground appropriately.

To avoid electrical component damage, remove all system power before plugging any connectors.

1. Follow the steps in [Before Servicing, page 45](#).
2. Loosen the screws (124) and remove the enclosure cover (117).
3. Note the position of the power supply input and output wires. See [Electrical Schematics, page 30](#). Disconnect the wires from the power supply (103).
4. Remove the screws (128) and washers (176) holding the power supply din rail to the enclosure. Remove the entire assembly, mounted to the din rail.
5. Install the new power supply assembly, using the screws (128) and washers (176).
6. Reconnect the wires to the power supply.

NOTICE

Failure to follow the electrical schematic could result in damage to the electrical components.

7. Reinstall the cover (117) and tighten the screws (124).

8. Turn on power at the main circuit breaker.
9. Turn on the control box power switch. Press



to turn pump power on.

NOTE: The 48V green LED on each of the pump control modules (132) will light when operating.

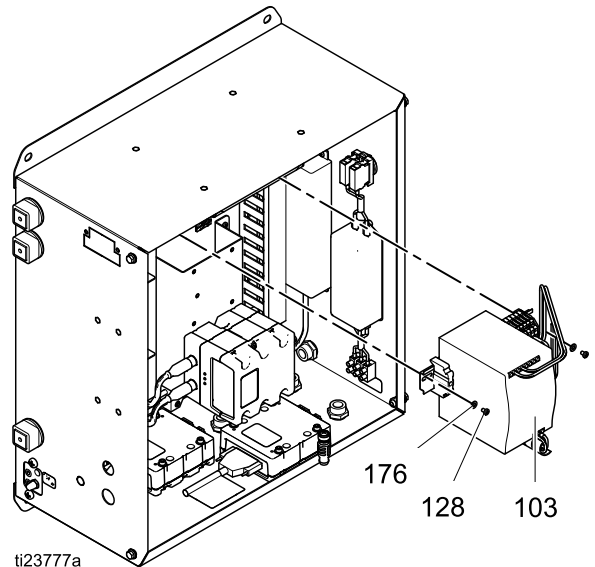


Figure 39 Replacing the 48 Vdc Power Supply

Replacing a Pump Control Module

NOTICE

To avoid damaging the circuit boards when servicing the control box, wear Part No. 112190 grounding strap on your wrist and ground appropriately.

To avoid electrical component damage, remove all system power before plugging any connectors.

1. Follow the steps in [Before Servicing, page 45](#).
2. Loosen the screws (124) and remove the enclosure cover (117).
3. Note the position of the pump control module cables. See [Electrical Schematics, page 30](#). Disconnect the cables from the pump control module (132).
4. Remove the screws (143) and washers (177) holding the pump control module to the enclosure. Remove the pump control module.
5. Install the new pump control module, using the screws (143) and washers (177).
6. Reconnect the cables to the pump control module (132).
7. Turn on power at the main circuit breaker.
8. Turn on the control box power switch. Check that the 48V green LED and the 24V green LED on each of the pump control modules (132) are on.

NOTE: If the pumps do not work, recheck the wiring.

9. Reinstall the cover (117) and tighten the screws (124).

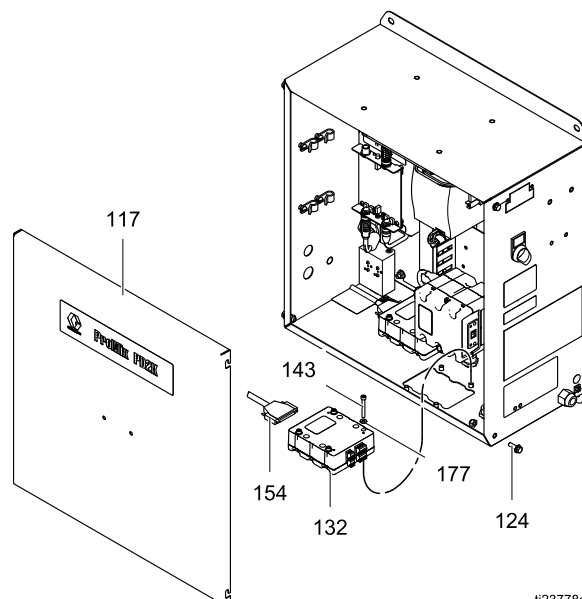


Figure 40 Replacing a Pump Control Module


Replacing a Communication Gateway Module

NOTICE

To avoid damaging the circuit boards when servicing the control box, wear Part No. 112190 grounding strap on your wrist and ground appropriately.

To avoid electrical component damage, remove all system power before plugging any connectors.

1. Follow the steps in [Before Servicing, page 45](#).
2. Loosen the screws (124) and remove the enclosure cover (117).
3. Remove the screws (182b) holding the communication gateway module (CGM) to the module base. Remove the CGM. You do not have to disconnect the cables.
4. Install the new CGM (182a), using the screws (182b).
5. Turn on power at the main circuit breaker.
6. Turn on the control box power switch. Check that the three status indicator lights are green.
7. Reinstall the cover (117) and tighten the screws (124).

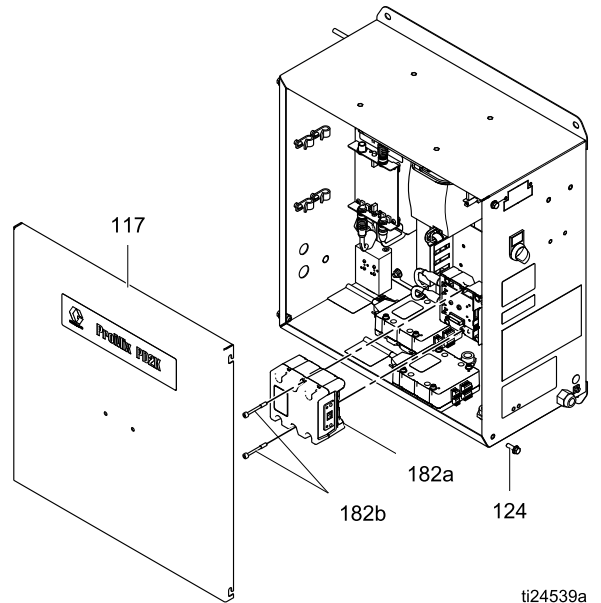

ti24539a

Figure 41 Replacing a Communication Gateway Module

Replacing the Line Filter

NOTICE

To avoid damaging the circuit boards when servicing the control box, wear Part No. 112190 grounding strap on your wrist and ground appropriately.

To avoid electrical component damage, remove all system power before plugging any connectors.

1. Follow the steps in [Before Servicing, page 45](#).
2. Loosen the screws (124) and remove the enclosure cover (117).
3. Note the position of the line filter input and output wires. See [Electrical Schematics, page 30](#). Disconnect the wires from the line filter (115).
4. Remove the screws (142) holding the line filter to the enclosure. Remove the line filter.
5. Install the new line filter, using the screws (142).
6. Reconnect the wires to the line filter.

NOTICE

Failure to follow the electrical schematic could result in damage to the electrical components.

7. Reinstall the cover (117) and tighten the screws (124).
8. Turn on power at the main circuit breaker.

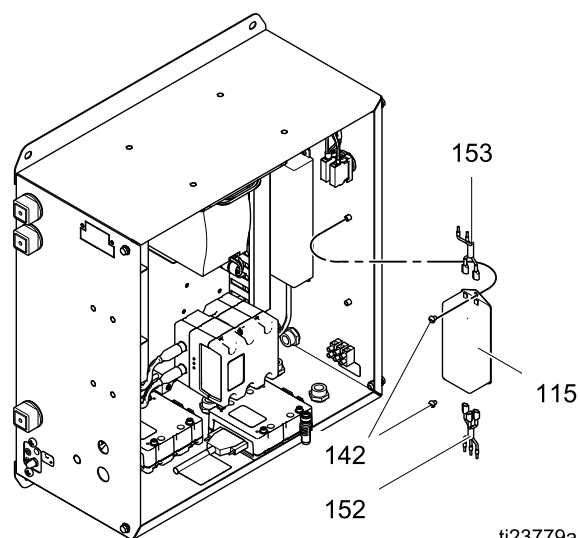


Figure 42 Replacing the Line Filter

Replacing the Power Switch

NOTICE

To avoid damaging the circuit boards when servicing the control box, wear Part No. 112190 grounding strap on your wrist and ground appropriately.

To avoid electrical component damage, remove all system power before plugging any connectors.

1. Follow the steps in [Before Servicing, page 45](#).
2. Loosen the screws (124) and remove the enclosure cover (117).
3. Note the position of the power switch input and output wires. See [Electrical Schematics, page 30](#). Disconnect the wires from the power switch (112).
4. Remove the switch terminal blocks (T), unscrew the retaining nut (N), and remove the switch.
5. Install the new switch.
6. Reconnect the wires to the power switch (112).

NOTICE

Failure to follow the electrical schematic could result in damage to the electrical components.

7. Reinstall the cover (117) and tighten the screws (124).
8. Turn on power at the main circuit breaker.


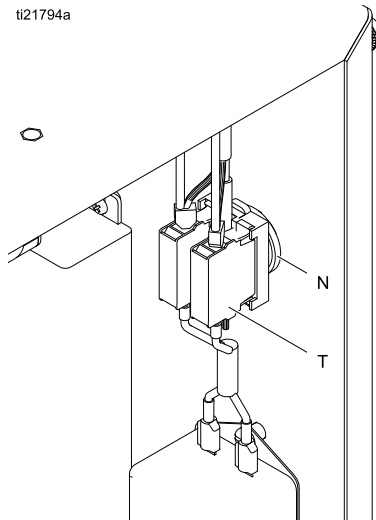


Figure 43 Replacing the Power Switch

Servicing the Fluid Section

Removing a Pump

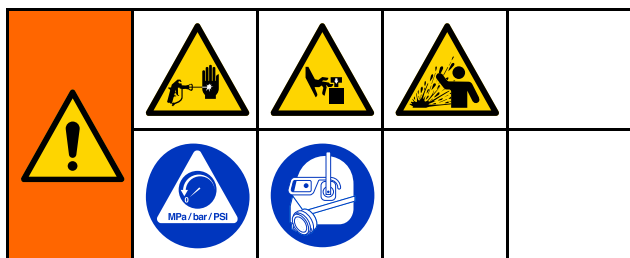

1. Follow the steps in [Before Servicing, page 45](#).
2. Remove the screws (56) holding the cover (8) to the front of the unit.
3. Disconnect the cable from the pump driver (101).
4. Disconnect the air lines from the dosing valves (V).
5. Disconnect the fluid inlet and outlet lines from the pump manifolds (IN, OUT).
6. Remove the screws (15) and pump bracket (7).

7. Loosen the jam nuts holding the pump to the mounting bracket (4). Remove the pump.
8. See manual 332339 to repair the pump.

Installing a Pump

1. Slide the pump into the mounting bracket (4). Tighten the jam nuts to secure.
2. Install the pump bracket (7) and screws (15).
3. Connect the fluid inlet and outlet lines to the pump manifolds (IN, OUT).
4. Connect the air lines to the dosing valves (V).
5. Connect the cable to the pump driver (101).
6. Install the cover (8) to the front of the unit with the screws (56).
7. Open the main air shutoff valve on the air supply line.
8. Restore power to the unit. Turn on the power switch at the electrical control box.


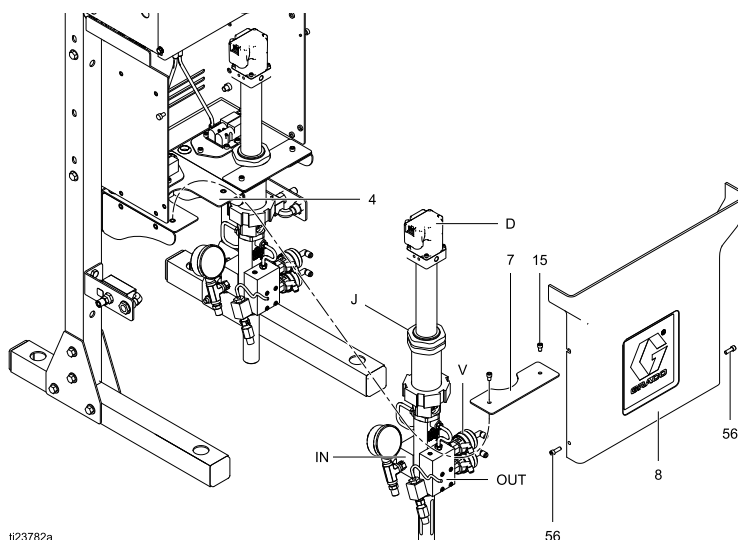


Figure 44 Installing a Pump

Replacing a Solenoid

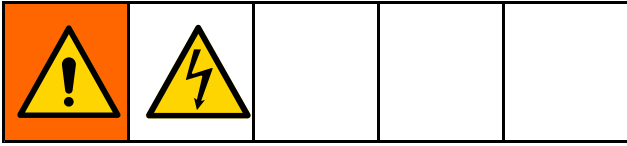

NOTICE

To avoid damaging the circuit boards when servicing the control box, wear Part No. 112190 grounding strap on your wrist and ground appropriately.

To avoid electrical component damage, remove all system power before plugging any connectors.

1. Follow the steps in [Before Servicing, page 45](#).
2. Remove the screws (56) holding the cover (8) to the front of the unit.
3. Loosen the screws (124) and remove the enclosure cover (117).
4. Disconnect the 2 solenoid wires from J1 on the pump control module. See [Electrical Schematics, page 30](#).
5. Remove 2 screws (303) and the solenoid (305).
6. Install the new solenoid (305) with the screws (303).
7. Connect the 2 solenoid wires to J1 on the pump control module. See [Electrical Schematics, page 30](#).
8. Replace the covers (8, 117).


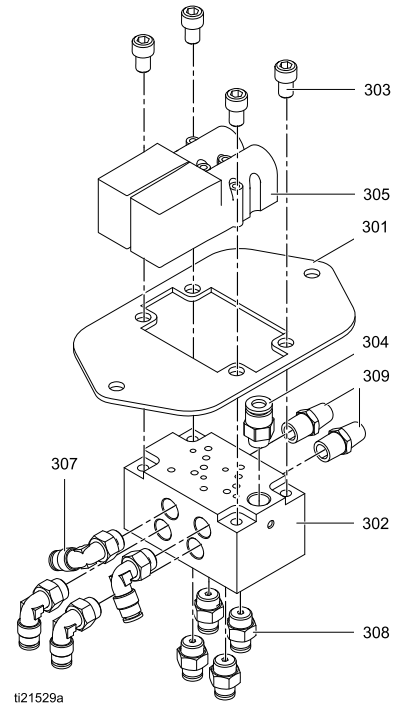


Figure 45 Solenoid Replacement

Replacing a Fan

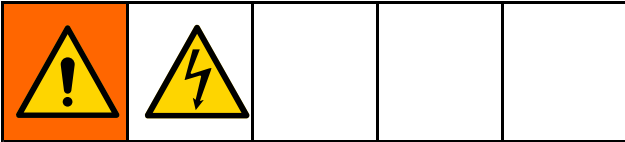


NOTICE

To avoid damaging the circuit boards when servicing the control box, wear Part No. 112190 grounding strap on your wrist and ground appropriately.

To avoid electrical component damage, remove all system power before plugging any connectors.

1. Follow the steps in [Before Servicing, page 45](#).
2. Remove the screws (56) holding the cover (8) to the front of the unit.
3. Loosen the screws (124) and remove the enclosure cover (117).
4. Disconnect the 2 fan wires from the pump control module. See [Electrical Schematics, page 30](#).
5. Remove the 4 screws, nuts, and washers to remove the fan (9).
6. Install the new fan (9) and attaching hardware.

7. Connect the 2 fan wires to the pump control module. Use terminal 8, pins 3 and 4. See [Electrical Schematics, page 30](#).

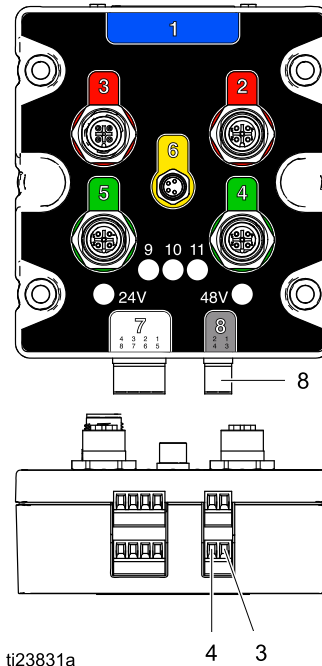

8. Replace the covers (8, 117).

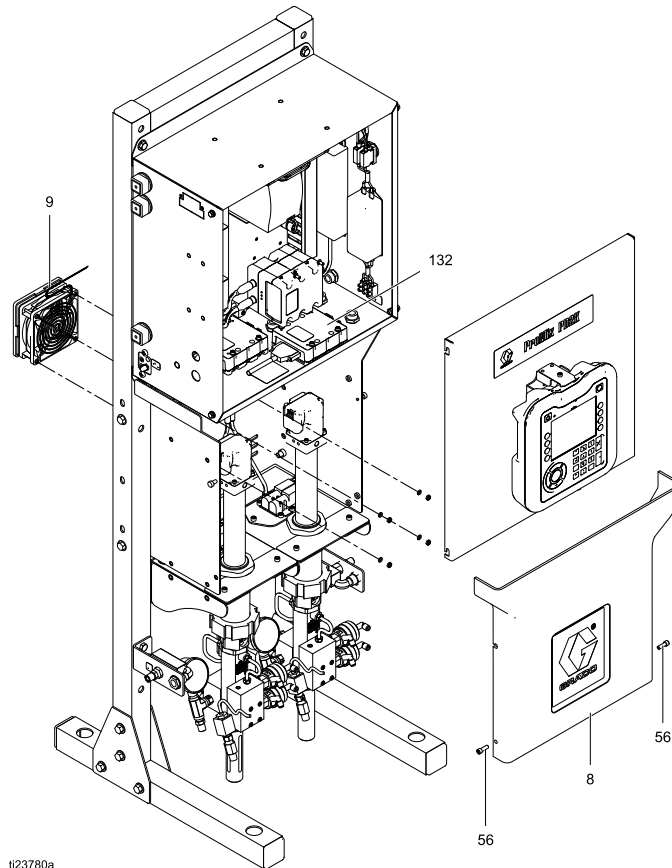


Figure 46 Replacing a Fan

Replacing a Solvent Flow Switch

1. Follow the steps in [Before Servicing, page 45](#).
2. Remove the screws (56) holding the cover (8) to the front of the unit.
3. Disconnect the solvent flow switch wires from J6 pins 11–12 (Switch 1) or J7 pins 9–10 (Switch 2) on the EFCM. See [Electrical Schematics, page 30](#).
4. Disconnect the solvent lines.
5. Unscrew the adapter (45) from the solvent flow switch (19).
6. Unscrew the solvent flow switch from the elbow (18).
7. Remove the solvent flow switch (159).
8. Screw the new solvent flow switch onto the elbow (18).
9. Screw the adapter (45) into the solvent flow switch (19).
10. Connect the wires to J6 pins 11–12 (Switch 1) or J7 pins 9–10 (Switch 2). Reconnect the solvent lines.
11. Install the cover (8) to the front of the unit with the screws (56).
12. Open the main air shutoff valve on the air supply line.
13. Restore power to the unit. Turn on the power switch (P) at the electrical control box.

NOTE: For an AC0500 system, the solvent flow switch should be mounted within 6 feet of the control box so the wires will reach the terminals on the EFCM.


Table 6 Dual Panel Systems Solvent Flow Switches

| | |
|---------------------------------------|---------------------------------|
| Solvent Flow Switch 1: Mix Unit #1 | EFCM Connector J6 Pins 5–6 |
| Solvent Flow Switch 2: Mix Unit #1 | EFCM Connector J6 Pins 7–8 |
| Solvent Flow Switch 3: Mix Unit #2 | EFCM Connector J6 Pins 9–10 |
| Solvent Flow Switch 4: Mix Unit #2 | EFCM Connector J6 Pins 11–12 |

NOTE: A ProMix PD3K+ system may have a combination of mix manifolds which require different solvent connections for each component. Solvent should be plumbed through a unique solvent flow switch and into the remote solvent valve for each component. See the table below for the appropriate wiring terminals on the EFCM of each remote solvent flow switch.

Table 7 PD3K+ Solvent Flow Switches

| | |
|---|---------------------------------|
| Solvent Flow Switch 1: Component A Remote Solvent | EFCM Connector J6 Pins 11–12 |
| Solvent Flow Switch 2: Component B Remote Solvent | EFCM Connector J7 Pins 9–10 |
| Solvent Flow Switch 3: Component C Remote Solvent | EFCM Connector J6 Pins 7–8 |
| Solvent Flow Switch 4: Component D Remote Solvent | EFCM Connector J6 Pins 9–10 |

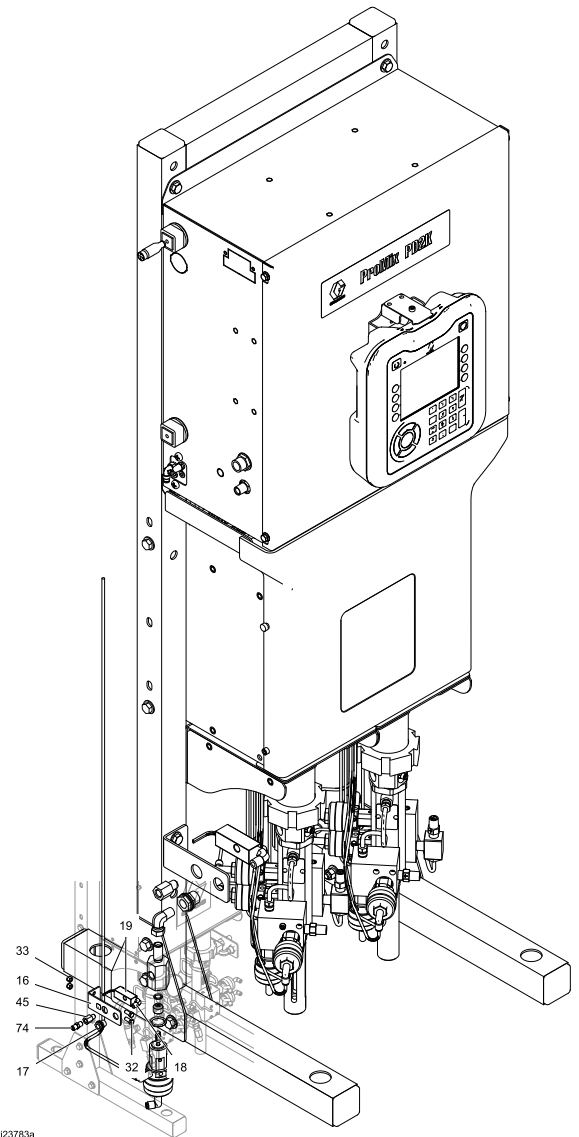


023783a

Parts

Proportioner Parts (Standard Models)

Part No. AC1000 Low Pressure Proportioner
Part No. AC2000 High Pressure Proportioner

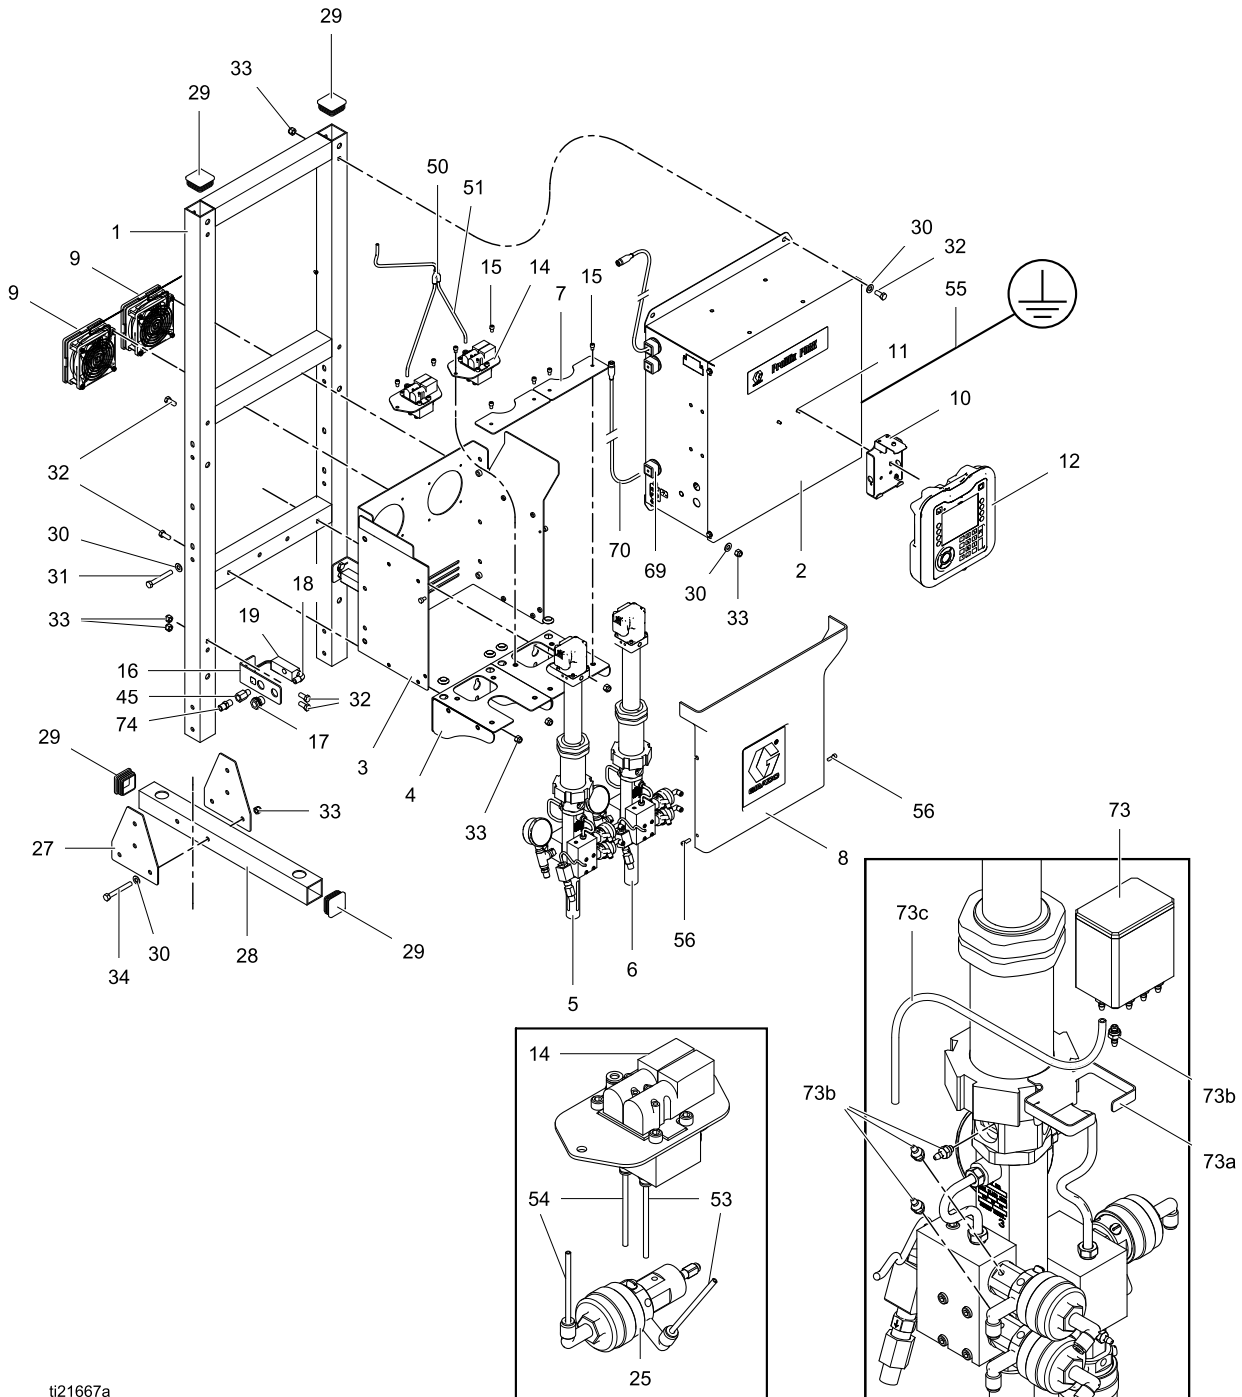

ti21667a

Parts

Part No. AC1000 Low Pressure Proportioner
 Part No. AC2000 High Pressure Proportioner

| Ref | Part | Description | Qty | Ref | Part | Description | Qty |
|-----|--------|---|-----|-----|--------|--|-----|
| 1 | — — — | FRAME | 1 | 12 | 24U602 | MODULE, display, advanced; includes item 12a | 1 |
| 2 | — — — | CONTROL BOX, electrical; see Control Box Parts, page 67 | 1 | 12a | 16X039 | TOKEN; latest version of software for the Advanced Display Module; not shown | 1 |
| 3 | — — — | PANEL, fluid | 1 | | 26C283 | TOKEN; latest version of software for PD3K+ | |
| 4 | — — — | BRACKET, mounting | 2 | | | | |
| 5 | 24T790 | PUMP, 70 cc, A side, low pressure; for Model AC1000; see manual 332339 | 1 | 14 | 24T772 | MANIFOLD, solenoid; see Solenoid Manifold Parts, page 73 | 2 |
| | 24T791 | PUMP, 70 cc, A side, high pressure; for Model AC2000; see manual 332339 | 1 | | | | |
| 6 | 24T788 | PUMP, 35 cc, B side, low pressure; for Model AC1000; see manual 332339 | 1 | 15 | C19798 | SCREW, cap, socket head; 1/4–20 x 3/8 in. (10 mm) | 8 |
| | 24T789 | PUMP, 35 cc, B side, high pressure; for Model AC2000; see manual 332339 | 1 | 16 | 16U655 | BRACKET, mounting, valve | 2 |
| 7 | — — — | BRACKET, mounting, pump | 2 | 17 | 104641 | FITTING, bulkhead | 2 |
| 8 | 24T771 | COVER; includes (2) of item 56 | 1 | 18 | 111763 | ELBOW; 1/4 npt (mbe) | 2 |
| 9 | 24T770 | KIT, fan | 2 | 19 | 24T787 | SWITCH, solvent flow; 1/4 npt(f) ports | 2 |
| 10 | 277853 | BRACKET, mounting | 1 | 27 | — — — | GUSSET | 4 |
| 11 | — — — | SCREW, machine, pan head; M5 x 0.8; 10 mm | 2 | 28 | — — — | LEG, floor stand | 2 |
| | | | | 29 | — — — | PLUG, tube, square | 6 |

| Ref | Part | Description | Qty |
|-----|--------|--|-----|
| 30 | — — — | WASHER; 3/8 | 16 |
| 31 | — — — | SCREW, cap, hex head; 3/8-16 x 2.75 in. (70 mm) | 4 |
| 32 | — — — | SCREW, cap, hex head; 3/8-16 x 7/8 in. (22 mm) | 12 |
| 33 | — — — | NUT, lock; 3/8-16 | 20 |
| 34 | — — — | SCREW, cap, hex head; 3/8-16 x 3 in. (76 mm) | 8 |
| 43 | — — — | WIRE HARNESS; for Model AC1000 (not shown) | 2 |
| | — — — | WIRE HARNESS; for Model AC2000 (not shown) | 2 |
| 45 | 15F741 | FITTING, adapter; 1/4 npt(m) x 1/4 npt(f) | 2 |
| 50 | 115287 | FITTING, Y-tube; for 1/4 in. (6 mm) OD tubing | 1 |
| 51 | — — — | TUBE, polyethylene; 1/4 in. (6 mm) OD x 3 ft | 3 |
| 53 | — — — | TUBE, nylon, green; for control air to turn valves on; 5/32 in. (4 mm) OD x 20 ft (cut to length required) | 12 |
| 54 | — — — | TUBE, nylon, red; for control air to turn valves off; 5/32 in. (4 mm) OD x 20 ft (cut to length required) | 12 |

| Ref | Part | Description | Qty |
|-----|--------|---|-----|
| 55 | 223547 | GROUND WIRE | 1 |
| 56 | — — — | SCREW, cap, socket head; 1/4-20 x 3/4 in. (19 mm) | 2 |
| 69 | — — — | GROMMET, cable | 2 |
| 70 | 16V429 | CABLE, CAN, intrinsically safe, 5 pin; for booth control; fbe; 50 ft (15 m) | 1 |
| 73 | 24T302 | KIT, cup, TSL; includes items 73a-73e | 2 |
| 73a | — — — | BRACKET | 2 |
| 73b | 24U617 | KIT, barbed fittings; includes o-rings; package of 12 | 2 |
| 73c | — — — | TUBE, polyurethane; 1/4 in. (6 mm) OD; 10 ft (3.05 m); cut to fit | 2 |
| 73d | — — — | PLUG, screw; 10-32; to replace unused item 73b at TSL cup; not shown | 8 |
| 73e | — — — | GASKET; for item 73d; not shown | 8 |
| 74 | 166421 | NIPPLE, pipe; 1/4 npt | 2 |

Items marked — — — are not available separately.

Part No. AC1002 Low Pressure Proportioner
 Part No. AC2002 High Pressure Proportioner

| Ref | Part | Description | Qty | Ref | Part | Description | Qty |
|-----|--------|---|-----|------|--------|--|-----|
| 201 | — — — | FRAME | 1 | 210 | 277853 | BRACKET, mounting | 1 |
| 202 | — — — | CONTROL BOX, electrical; see Control Box Parts (Dual Panel Models), page 70 | 1 | 211 | — — — | SCREW, machine, pan head; M5 x 0.8; 10 mm | 2 |
| 203 | — — — | PANEL, fluid | 1 | 212 | 24U602 | MODULE, display, advanced; includes item 212a | 1 |
| 204 | — — — | BRACKET, mounting | 2 | 212a | 17N631 | TOKEN; latest version of software for the Advanced Display Module; not shown | 1 |
| 205 | 24T790 | PUMP, 70 cc, A side, low pressure; for Model AC1002; see manual 332339 | 1 | 214 | 24T772 | MANIFOLD, solenoid; see Solenoid Manifold Parts, page 73 | 2 |
| | 24T791 | PUMP, 70 cc, A side, high pressure; for Models AC2002; see manual 332339 | 1 | 215 | C19798 | SCREW, cap, socket head; 1/4–20 x 3/8 in. (10 mm) | 8 |
| 206 | 24T788 | PUMP, 35 cc, B side, low pressure; for Model AC1002; see manual 332339 | 1 | 216 | 17M103 | BRACKET, mounting, valve | 2 |
| | 24T789 | PUMP, 35 cc, B side, high pressure; for Model AC2002; see manual 332339 | 1 | 217 | 104641 | FITTING, bulkhead | 4 |
| 207 | — — — | BRACKET, mounting, pump | 2 | 218 | 111763 | ELBOW; 1/4 npt (mbe) | 4 |
| 208 | 24T771 | COVER; includes (2) of item 256 | 1 | 219 | 24T787 | SWITCH, solvent flow; 1/4 npt(f) ports | 4 |
| 209 | 24T770 | KIT, fan | 2 | 227 | — — — | GUSSET | 4 |
| | | | | 228 | — — — | LEG, floor stand | 2 |
| | | | | 229 | — — — | PLUG, tube, square | 6 |


Parts

| Ref | Part | Description | Qty | Ref | Part | Description | Qty |
|-----|--------|--|-----|------|--------|---|-----|
| 230 | — — — | WASHER; 3/8 | 16 | 254 | — — — | TUBE, nylon, red; for control air to turn valves off; 5/32 in. (4 mm) OD x 20 ft (cut to length required) | 12 |
| 231 | — — — | SCREW, cap, hex head; 3/8-16 x 2.75 in. (70 mm) | 4 | | | | |
| 232 | — — — | SCREW, cap, hex head; 3/8-16 x 7/8 in. (22 mm) | 12 | 255 | 223547 | GROUND WIRE | 1 |
| 233 | — — — | NUT, lock; 3/8-16 | 20 | 256 | — — — | SCREW, cap, socket head; 1/4-20 x 3/4 in. (19 mm) | 2 |
| 234 | — — — | SCREW, cap, hex head; 3/8-16 x 3 in. (76 mm) | 8 | 269 | — — — | GROMMET, cable | 2 |
| 235 | — — — | WASHER, lock; 3/8 | 8 | 270 | 16V429 | CABLE, CAN, intrinsically safe, 5 pin; for booth control; fbe; 50 ft (15 m) | 1 |
| 236 | — — — | NUT, hex; 3/8-16 | 8 | | | | |
| 243 | — — — | WIRE HARNESS; for Model AC1000 (not shown) | 2 | 273 | 24T302 | KIT, cup, TSL; includes items 73a-73e | 2 |
| | — — — | WIRE HARNESS; for Model AC2000 (not shown) | 2 | 273a | — — — | BRACKET | 2 |
| 245 | 15F741 | FITTING, adapter; 1/4 npt(m) x 1/4 npt(f) | 4 | 273b | 24U617 | KIT, barbed fittings; includes o-rings; package of 12 | 2 |
| 250 | 115287 | FITTING, Y-tube; for 1/4 in. (6 mm) OD tubing | 1 | 273c | — — — | TUBE, polyurethane; 1/4 in. (6 mm) OD; 10 ft (3.05 m); cut to fit | 2 |
| 251 | — — — | TUBE, polyethylene; 1/4 in. (6 mm) OD x 3 ft | 3 | 273d | — — — | PLUG, screw; 10-32; to replace unused item 73b at TSL cup; not shown | 8 |
| 253 | — — — | TUBE, nylon, green; for control air to turn valves on; 5/32 in. (4 mm) OD x 20 ft (cut to length required) | 12 | 273e | — — — | GASKET; for item 73d; not shown | 8 |
| | | | | 274 | 121907 | NIPPLE, pipe; 1/4 npt | 1 |

Items marked — — — are not available separately.


Control Box Parts

Electrical Control Box

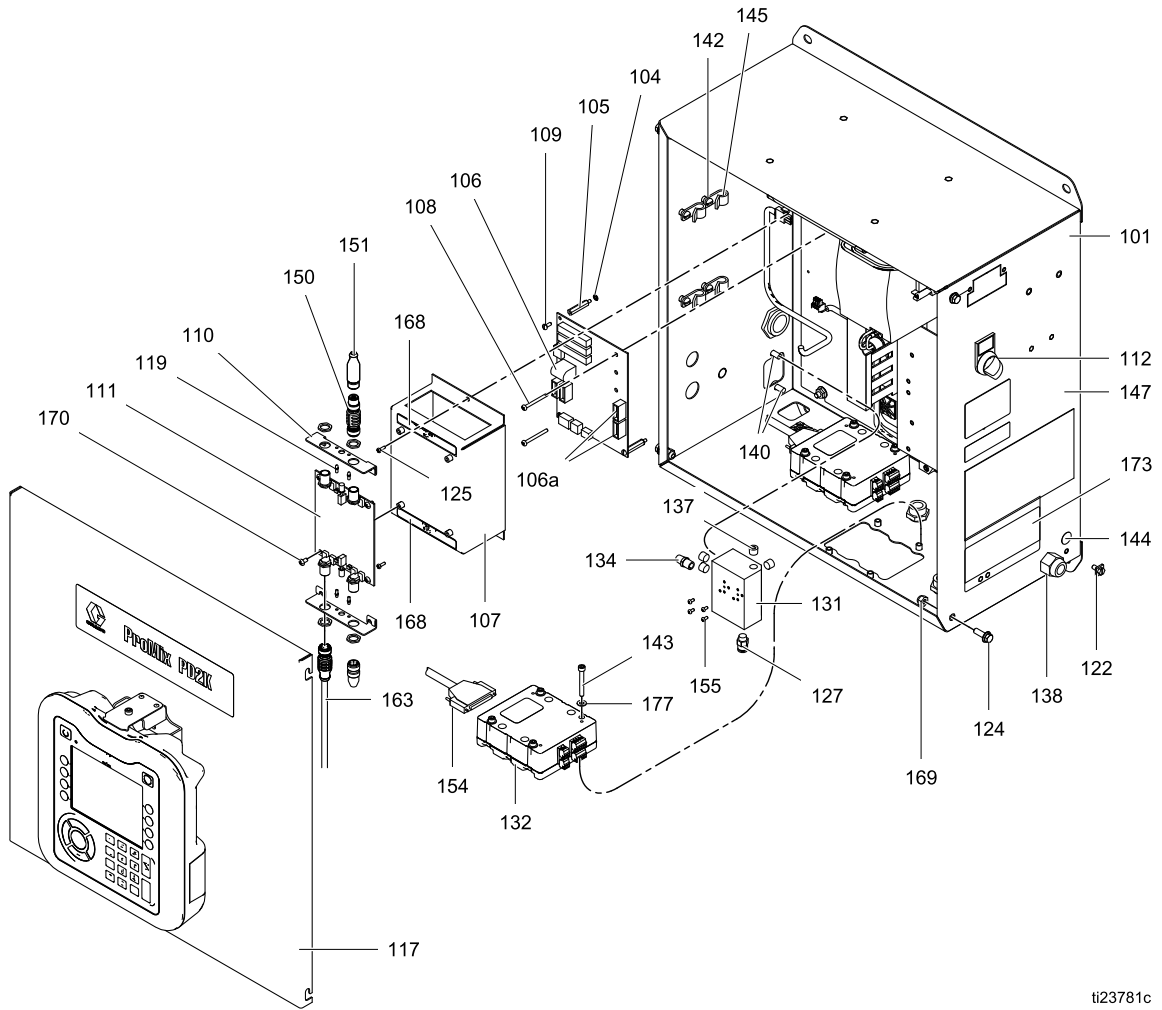

ti23781c

Electrical Control Box (continued)

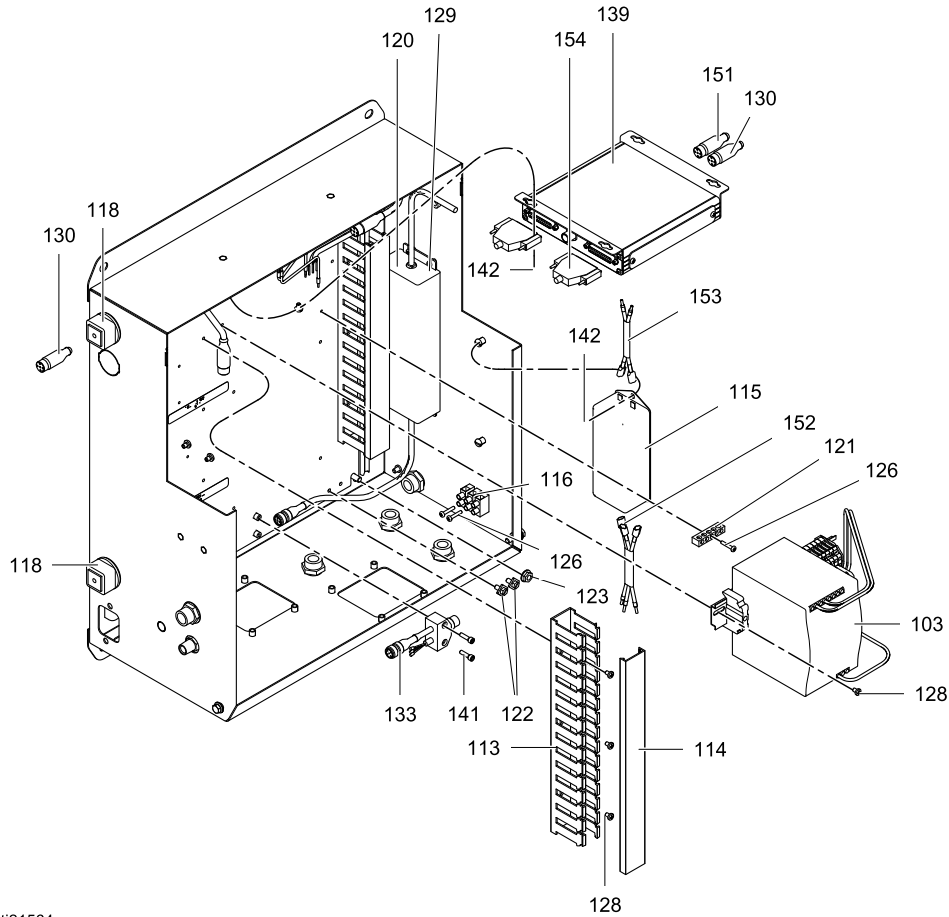

ti21564a

| Ref | Part | Description | Qty | Ref | Part | Description | Qty |
|------|--------|--|-----|-----|--------|---------------------------------|-----|
| 101 | --- | ENCLOSURE | 1 | 110 | --- | BRACKET, board | 2 |
| 102 | --- | PANEL, back | 1 | 111 | 24M485 | BOARD, isolation, IS | 1 |
| 103 | 24T769 | POWER SUPPLY; 48 Vdc; 10 A; 480 W | 1 | 112 | 16U725 | SWITCH, selector, 2 position | 1 |
| 104 | --- | WASHER, lock; no. 6 | 3 | 113 | --- | DUCT, wire | 1 |
| 105 | --- | SPACER, standoff | 3 | 114 | --- | COVER, duct | 2 |
| 106 | 255786 | BOARD, barrier; includes item 106a | 1 | 115 | 16V446 | FILTER, line; 10A | 1 |
| 106a | 15D979 | FUSE; 400 mA, quick acting | 2 | 116 | --- | BLOCK, terminal | 1 |
| 107 | --- | COVER, barrier | 1 | 117 | --- | COVER, enclosure | 1 |
| 108 | --- | SCREW, machine, pan head; 6-32 x 1.5 in. (38 mm) | 2 | 118 | --- | GROMMET | 2 |
| 109 | --- | SCREW, machine, pan head; 6-32 x 0.375 in. (10 mm) | 3 | 119 | --- | LIGHT | 4 |
| | | | | 120 | 16T660 | POWER SUPPLY; 24 Vdc, 4 A, 96 W | 1 |


| Ref | Part | Description | Qty | Ref | Part | Description | Qty |
|------|--------|---|-----|------|--------|--|-----|
| 121 | — — — | CONNECTOR, bar, ground | 1 | 140 | — — — | SCREW, machine, pan head; 1/4–20 x 0.5 in. (13 mm) | 2 |
| 122 | — — — | SCREW, ground; M5 x 0.8 | 3 | 141 | — — — | SCREW, cap, socket head; 8–32 x 0.625 in. (16 mm) | 2 |
| 123 | — — — | NUT, hex, flange head; 1/4–20 | 4 | 142 | — — — | SCREW, machine, pan head; 10–32 x 0.25 in. (6 mm) | 10 |
| 124 | — — — | SCREW, flanged, hex head; 1/4–20 x 0.75 in. (19 mm) | 4 | 143 | — — — | SCREW, machine, pan head; 10–32 x 1.5 in. (38 mm) | 8 |
| 125 | — — — | SCREW, machine, pan head; 10–24 x 0.375 in. (10 mm) | 2 | 144▲ | 172953 | LABEL, ground symbol | 1 |
| 126 | — — — | SCREW, machine, pan head; 10–32 x 0.75 in. (19 mm) | 3 | 145 | — — — | CLAMP; for 3/8 in. (10 mm) OD cable | 4 |
| 127 | — — — | FITTING, connector; 1/8 npt(m) x 1/4 in. (6 mm) OD tube | 1 | 147▲ | 15W598 | LABEL, warning | 1 |
| 128 | — — — | SCREW, machine, pan head; 8–32 x 0.25 in. (6 mm) | 8 | 148 | — — — | HARNESS, CAN isolation, power (not shown) | 1 |
| 129 | — — — | SCREW, machine, binding head; 6–32 x 0.25 in. (6 mm) | 4 | 150 | 16T072 | ADAPTER, CAN cable, IS to non-IS | 1 |
| 130 | 121003 | CABLE, CAN; fbe; 3.0 m | 1 | 151 | 121227 | CABLE, CAN; fbe; 0.6 m | 1 |
| 131 | — — — | MANIFOLD, air | 1 | 152 | — — — | HARNESS, 3–wire | 1 |
| 132 | 24N527 | MODULE, control, pump | 2 | 153 | — — — | HARNESS, 2–wire | 1 |
| 133 | 16P243 | CABLE, splitter | 1 | 154 | 16T659 | CABLE, D-SUB, 25 pin, 2.5 ft | 2 |
| 134 | — — — | MUFFLER | 1 | 155 | — — — | SCREW, self sealing | 2 |
| 137 | — — — | PLUG, pipe; 1/8 npt(f) | 4 | 163 | 16V429 | CABLE, CAN, I.S.; fbe; 50 ft. 15.25 m) | 1 |
| 138 | — — — | STRAIN RELIEF, cord | 4 | 168 | 16U600 | LABEL, isolation board | 1 |
| 139a | 24U601 | MODULE, control, enhanced fluid includes 16X039 TOKEN; latest version of software | 1 | 169 | — — — | NUT, hex, self-locking; 1/4–20 | 4 |
| 139b | 26A298 | MODULE, control enhanced fluid includes 17N631 TOKEN; latest version of software | 1 | 170 | — — — | SCREW, machine, pan head; 8–32 x 0.312 in. (8 mm) | 4 |
| 139c | 26D119 | MODULE, control enhanced fluid includes 25C283 TOKEN; latest version of software | 1 | 173▲ | 15W776 | LABEL, warning, electrical shock | 1 |
| | | | | 176 | — — — | WASHER, flat | 2 |
| | | | | 177 | — — — | WASHER, #10, sst | 1 |

Items marked — — — are not available separately.

▲ Replacement Danger and Warning labels, tags, and cards are available at no cost.


Control Box Parts (Dual Panel Models)

Electrical Control Box

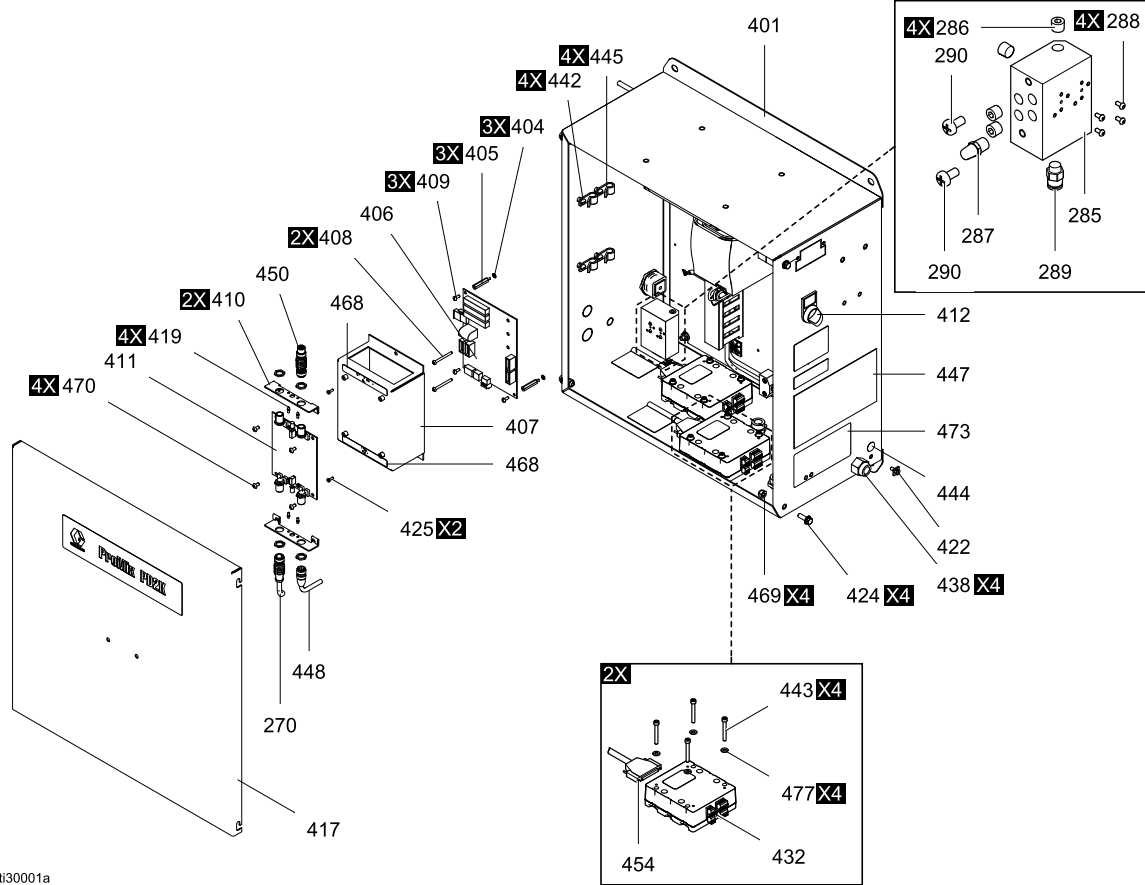

t330001a

Electrical Control Box (continued)

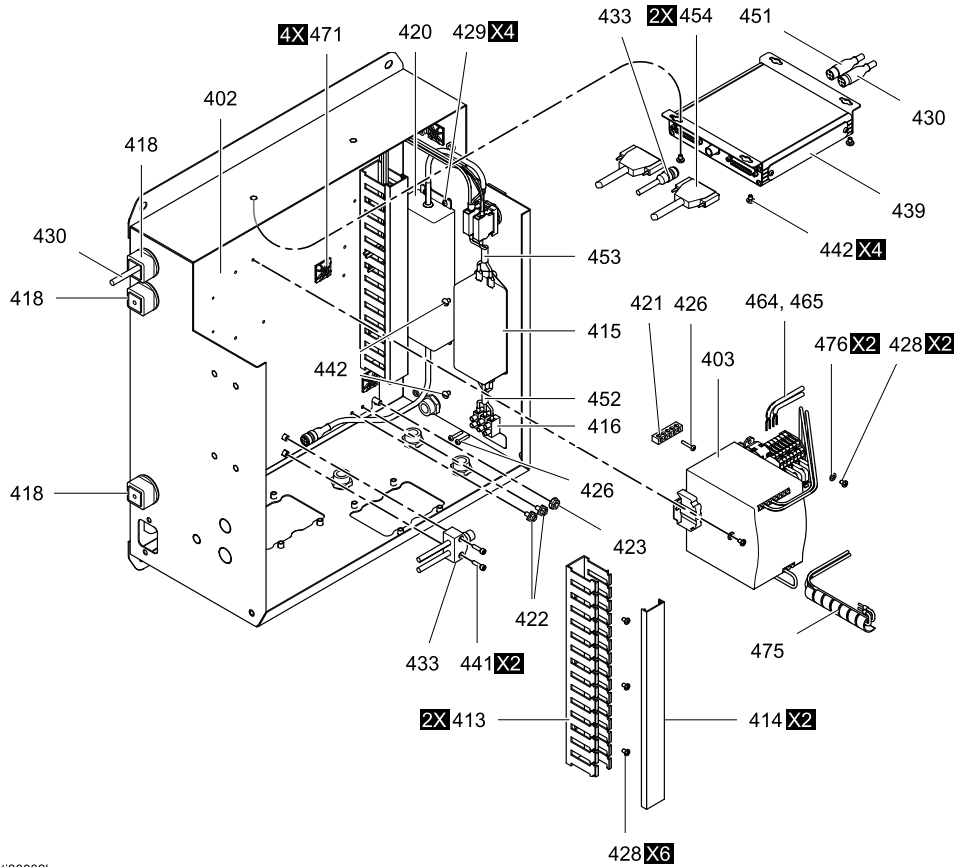

1130002b

| Ref | Part | Description | Qty | Ref | Part | Description | Qty |
|------|--------|--|-----|-----|--------|---|-----|
| 270 | 16V429 | CABLE, CAN, I.S.; fbe; 50 ft. 15.25 m) | 1 | 407 | --- | COVER, barrier | 1 |
| 277* | --- | BRACKET, mount, modbus (included with CGM Installation Kits) | 1 | 408 | --- | SCREW, machine, pan head; 6-32 x 1.5 in. (38 mm) | 2 |
| 281* | --- | SCREW, pan, #8-32 (included with CGM Installation Kits) | 4 | 409 | --- | SCREW, machine, pan head; 6-32 x 0.375 in. (10 mm) | 3 |
| 285 | --- | MANIFOLD, air | 1 | 410 | --- | BRACKET, board | 2 |
| 286 | --- | PLUG, pipe; 1/8 npt(f) | 4 | 411 | 24M485 | BOARD, isolation, IS | 1 |
| 287 | --- | MUFFLER, sintered; 1/8 in. | 1 | 412 | 16U725 | SWITCH, selector, 2 position | 1 |
| 288 | --- | SCREW, self-sealing | 4 | 413 | --- | DUCT, wire | 1 |
| 289 | --- | FITTING, connector; 1/8 npt(m) x 1/4 in. (6 mm) OD tube | 1 | 414 | --- | COVER, duct | 2 |
| 290 | --- | SCREW, machine, pan head | 2 | 415 | 16V446 | FILTER, line; 10A | 1 |
| 292 | --- | WASHER, lock, #6 | 1 | 416 | --- | BLOCK, terminal | 1 |
| 401 | --- | ENCLOSURE | 1 | 417 | --- | COVER, enclosure | 1 |
| 402 | --- | PANEL, back | 1 | 418 | --- | GROMMET | 2 |
| 403 | 26A189 | POWER SUPPLY; 48 Vdc; 10 A; 480 W | 1 | 419 | --- | LIGHT | 4 |
| 404 | --- | WASHER, lock; no. 6 | 3 | 420 | 16T660 | POWER SUPPLY; 24 Vdc, 4 A, 96 W | 1 |
| 405 | --- | SPACER, standoff | 3 | 421 | --- | CONNECTOR, bar, ground | 1 |
| 406 | 255786 | BOARD, barrier; includes item 106a | 1 | 422 | --- | SCREW, ground; M5 x 0.8 | 3 |
| 406a | 15D979 | FUSE; 400 mA, quick acting | 2 | 423 | --- | NUT, hex, flange head; 1/4-20 | 4 |
| | | | | 424 | --- | SCREW, flanged, hex head; 1/4-20 x 0.75 in. (19 mm) | 4 |

Parts

| Ref | Part | Description | Qty | Ref | Part | Description | Qty |
|------|--------|---|-----|------|--------|---|-----|
| 425 | — — — | SCREW, machine, pan head; 10–24 x 0.375 in. (10 mm) | 2 | 441 | — — — | SCREW, cap, socket head; 8–32 x 0.625 in. (16 mm) | 2 |
| 426 | — — — | SCREW, machine, pan head; 10–32 x 0.75 in. (19 mm) | 3 | 442 | — — — | SCREW, machine, pan head; 10–32 x 0.25 in. (6 mm) | 10 |
| 427 | — — — | FITTING, connector; 1/8 npt(m) x 1/4 in. (6 mm) OD tube | 1 | 443 | — — — | SCREW, machine, pan head; 10–32 x 1.5 in. (38 mm) | 8 |
| 428 | — — — | SCREW, machine, pan head; 8–32 x 0.25 in. (6 mm) | 8 | 444▲ | 172953 | LABEL, ground symbol | 1 |
| 429 | — — — | SCREW, machine, binding head; 6–32 x 0.25 in. (6 mm) | 4 | 445 | — — — | CLAMP; for 3/8 in. (10 mm) OD cable | 4 |
| 430 | 121003 | CABLE, CAN; fbe; 3.0 m | 1 | 447▲ | 15W598 | LABEL, warning | 1 |
| 431 | — — — | MANIFOLD, air | 1 | 448 | — — — | HARNESS, CAN isolation, power (not shown) | 1 |
| 432 | 24N527 | MODULE, control, pump | 2 | 450 | 16T072 | ADAPTER, CAN cable, IS to non-IS | 1 |
| 433 | 16P243 | CABLE, splitter | 1 | 451 | 121227 | CABLE, CAN; fbe; 0.6 m | 1 |
| 434 | — — — | MUFFLER | 1 | 452 | — — — | HARNESS, 3–wire | 1 |
| 435 | 121324 | VALVE, solenoid; 3–way | 1 | 453 | — — — | HARNESS, 2–wire | 1 |
| 436 | — — — | ELBOW, swivel; 1/8 npt(m) x 5/32 in. (4 mm) OD tube | 1 | 454 | 16T659 | CABLE, D-SUB, 25 pin, 2.5 ft | 2 |
| 437 | — — — | PLUG, pipe; 1/8 npt(m) | 3 | 455 | — — — | SCREW, self sealing | 2 |
| 438 | — — — | STRAIN RELIEF, cord | 4 | 459 | 15T632 | KIT, air flow switch; includes items 159a-159c | 1 |
| 439a | 24U601 | MODULE, control, enhanced fluid includes 16X039 TOKEN; latest version of software | 1 | 459a | 104641 | FITTING, bulkhead | 1 |
| 439b | 26A298 | MODULE, control enhanced fluid includes 17N631 TOKEN; latest version of software | 1 | 459b | 111763 | ELBOW; 1/4 npt (mbe) | 1 |
| 439c | 26D119 | MODULE, control enhanced fluid includes 25C283 TOKEN; latest version of software | 1 | 459c | 113029 | NIPPLE; 1/4 npt | 1 |
| 440 | — — — | SCREW, machine, pan head; 1/4–20 x 0.5 in. (13 mm) | 2 | 463 | 16V429 | CABLE, CAN, I.S.; fbe; 50 ft. 15.25 m) | 1 |
| | | | | 468▲ | 16U600 | LABEL, isolation board | 1 |
| | | | | 469 | — — — | NUT, hex, self-locking; 1/4–20 | 4 |
| | | | | 470 | — — — | SCREW, machine, pan head; 8–32 x 0.312 in. (8 mm) | 4 |
| | | | | 473▲ | 15W776 | LABEL, warning | 1 |


Items marked — — — are not available separately.

* Bracket (277) and Screws (281) included with CGM Installation Kits. See Manual 334494.

▲ Replacement Danger and Warning labels, tags, and cards are available at no cost.

Solenoid Manifold Parts

Part No. 24T772 Solenoid Manifold

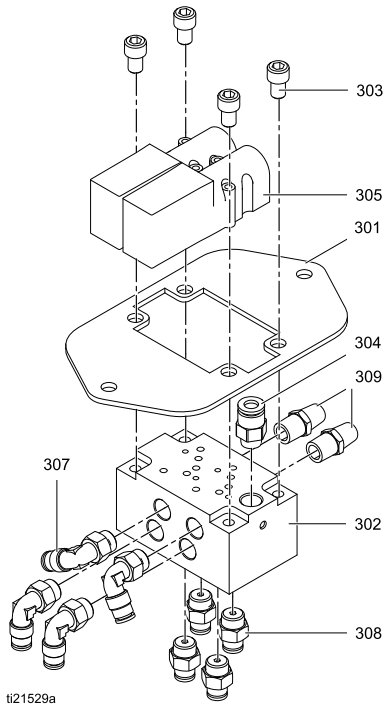

| Ref | Part | Description | Qty |
|-----|--------|--|-----|
| 301 | — — — | PLATE | 1 |
| 302 | — — — | MANIFOLD | 1 |
| 303 | — — — | SCREW, cap, socket head; 1/4-20 x 0.375 in. (10 mm) | 4 |
| 304 | 115671 | CONNECTOR; 1/8 npt(m) x 1/4 in. (6 mm) OD tube | 1 |
| 305 | 16P812 | VALVE, solenoid | 2 |
| 307 | 114151 | FITTING, elbow, swivel; 1/8 npt(m) x 5/32 in. (4 mm) OD tube | 4 |
| 308 | 114263 | FITTING, straight; 1/8 npt(m) x 5/32 in. (4 mm) OD tube | 4 |
| 309 | C06061 | MUFFLER | 2 |

Items marked — — — are not available separately.

Technical Specifications

| Positive Displacement Proportioner | U.S. | Metric |
|--|---|---------------------------|
| Maximum fluid working pressure: | | |
| AC0500 and AC0502 Systems with Low-Pressure Pumps | 300 psi | 2.1 MPa, 21 bar |
| AC0500 and AC0502 Systems with High-Pressure Pumps | 1500 psi | 10.5 MPa, 105 bar |
| AC1000 and AC1002 Air Spray Systems | 300 psi | 2.1 MPa, 21 bar |
| AC2000 and AC2002 Air-Assisted Spray Systems | 1500 psi | 10.5 MPa, 105 bar |
| Maximum working air pressure: | 100 psi | 0.7 MPa, 7.0 bar |
| Air supply: | 85–100 psi | 0.6–0.7 MPa, 6.0–7.0 bar) |
| Air filter inlet size: | 3/8 npt(f) | |
| Air filtration for air logic (user-supplied): | 5 micron (minimum) filtration required; clean and dry air | |
| Air filtration for atomizing air (user-supplied): | 30 micron (minimum) filtration required; clean and dry air | |
| Mixing ratio range: | 0.1:1 — 50:1, ±1% | |
| Fluids handled: | one or two component: <ul style="list-style-type: none"> • solvent and waterborne paints • polyurethanes • epoxies • moisture sensitive isocyanates | |
| Viscosity range of fluid: | 20–5000 centipoise | |
| Fluid filtration (user-supplied): | 100 mesh minimum | |
| Maximum fluid flow: | 800 cc/minute (depending on material viscosity) | |
| Fluid outlet size: | 1/4 npt(m) | |
| External power supply requirements: | 90 - 250 Vac, 50/60 Hz, 7 amps maximum draw 15 amp maximum circuit breaker required 8 to 14 AWG power supply wire gauge | |
| Operating temperature range: | 36 to 122°F | 2 to 50°C |
| Storage temperature range: | -4 to 158°F | -20 to 70°C |
| Weight of base model (approximate): | 195 lb | 88 kg |
| Sound data: | Less than 75 dB(A) | |
| Wetted parts: | | |
| AC0500 and AC0502 | Pumps sold separately; see selected pump manual for wetted parts information. | |
| AC1000, AC1002, AC2000, and AC2002 | 17–4PH, 303, 304 SST, Tungsten carbide (with nickel binder), perfluoroelastomer; PTFE, PPS, UHMWPE | |

California Proposition 65

CALIFORNIA RESIDENTS

 **WARNING:** Cancer and reproductive harm — www.P65warnings.ca.gov.

Graco Standard Warranty

Graco warrants all equipment referenced in this document which is manufactured by Graco and bearing its name to be free from defects in material and workmanship on the date of sale to the original purchaser for use. With the exception of any special, extended, or limited warranty published by Graco, Graco will, for a period of twelve months from the date of sale, repair or replace any part of the equipment determined by Graco to be defective. This warranty applies only when the equipment is installed, operated and maintained in accordance with Graco's written recommendations.

This warranty does not cover, and Graco shall not be liable for general wear and tear, or any malfunction, damage or wear caused by faulty installation, misapplication, abrasion, corrosion, inadequate or improper maintenance, negligence, accident, tampering, or substitution of non-Graco component parts. Nor shall Graco be liable for malfunction, damage or wear caused by the incompatibility of Graco equipment with structures, accessories, equipment or materials not supplied by Graco, or the improper design, manufacture, installation, operation or maintenance of structures, accessories, equipment or materials not supplied by Graco.

This warranty is conditioned upon the prepaid return of the equipment claimed to be defective to an authorized Graco distributor for verification of the claimed defect. If the claimed defect is verified, Graco will repair or replace free of charge any defective parts. The equipment will be returned to the original purchaser transportation prepaid. If inspection of the equipment does not disclose any defect in material or workmanship, repairs will be made at a reasonable charge, which charges may include the costs of parts, labor, and transportation.

THIS WARRANTY IS EXCLUSIVE, AND IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.

Graco's sole obligation and buyer's sole remedy for any breach of warranty shall be as set forth above. The buyer agrees that no other remedy (including, but not limited to, incidental or consequential damages for lost profits, lost sales, injury to person or property, or any other incidental or consequential loss) shall be available. Any action for breach of warranty must be brought within two (2) years of the date of sale.

GRACO MAKES NO WARRANTY, AND DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IN CONNECTION WITH ACCESSORIES, EQUIPMENT, MATERIALS OR COMPONENTS SOLD BUT NOT MANUFACTURED BY GRACO. These items sold, but not manufactured by Graco (such as electric motors, switches, hose, etc.), are subject to the warranty, if any, of their manufacturer. Graco will provide purchaser with reasonable assistance in making any claim for breach of these warranties.

In no event will Graco be liable for indirect, incidental, special or consequential damages resulting from Graco supplying equipment hereunder, or the furnishing, performance, or use of any products or other goods sold hereto, whether due to a breach of contract, breach of warranty, the negligence of Graco, or otherwise.

FOR GRACO CANADA CUSTOMERS

The Parties acknowledge that they have required that the present document, as well as all documents, notices and legal proceedings entered into, given or instituted pursuant hereto or relating directly or indirectly hereto, be drawn up in English. Les parties reconnaissent avoir convenu que la rédaction du présente document sera en Anglais, ainsi que tous documents, avis et procédures judiciaires exécutés, donnés ou intentés, à la suite de ou en rapport, directement ou indirectement, avec les procédures concernées.

Graco Information

For the latest information about Graco products, visit www.graco.com.

To place an order, contact your Graco Distributor or call to identify the nearest distributor.

Phone: 612-623-6921 **or Toll Free:** 1-800-328-0211 **Fax:** 612-378-3505

All written and visual data contained in this document reflects the latest product information available at the time of publication.

Graco reserves the right to make changes at any time without notice.

For patent information, see www.graco.com/patents.

Original Instructions. This manual contains English. MM 332709

Graco Headquarters: Minneapolis

International Offices: Belgium, China, Japan, Korea

GRACO INC. AND SUBSIDIARIES • P.O. BOX 1441 • MINNEAPOLIS MN 55440-1441 • USA

Copyright 2014, Graco Inc. All Graco manufacturing locations are registered to ISO 9001.

www.graco.com

Revision H, November 2022