

Electric Airless Sprayers

3A4187C
EN

*For professional use only.
Not approved for use in explosive atmospheres and hazardous locations.
For the application of architectural paints and coatings.*


LP 555/655, Mustang 5150/8150 Models:
3300 psi (22.7 MPa, 227 bar) Maximum Working Pressure



Important Safety Instructions

Read all warnings and instructions in this manual and in related manuals.
Be familiar with the controls and the proper usage of the equipment.
Save these instructions.

Related Manuals:	
3A4133	Gun
3A4347	Pump

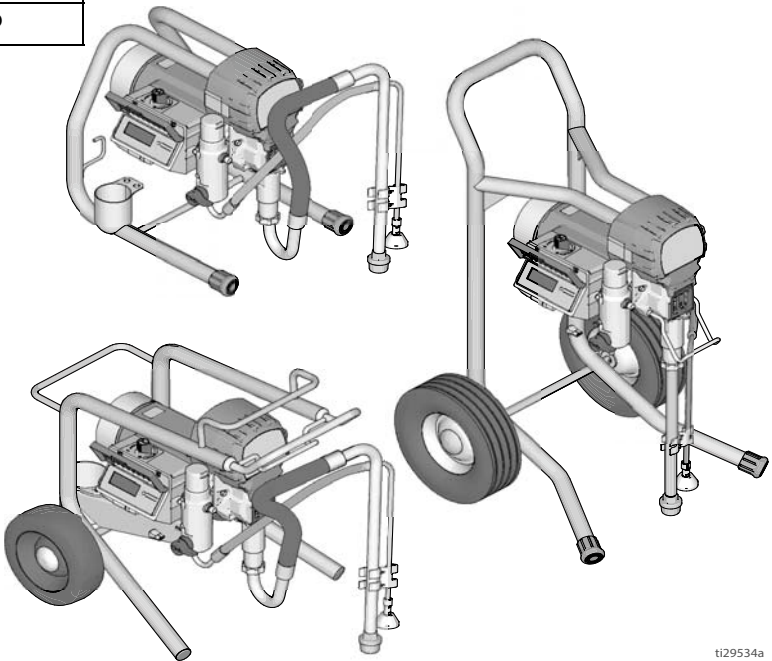

ti29534a



SERVICE
to every customer, every time








www.graco.com/techsupport



Table of Contents

Models	3
Warnings	4
Component Identification	8
Stand Models	8
Lo-Boy Models	9
Hi-Boy Models	10
Grounding	11
Power Requirements	11
Extension Cords	11
Pails	11
Pressure Relief Procedure	12
Trigger Lock	13
Setup	14
Startup	17
Operation	19
Spray Tip Installation	19
Spray	19
Clear Tip Clog	20
Digital Display	21
Cleanup	23
Maintenance	26
Troubleshooting	27
Stand Sprayers	39
Stand Sprayer Parts	40
Stand Sprayers Parts List	41
Lo-Boy Sprayers	42
Lo-Boy Sprayers Parts List	44
Hi-Boy Sprayers	45
Hi-Boy Sprayers Parts List	47
Accessories and Labels	48
Control Box	49
Control Box Parts List	50
Wiring Diagrams	51
Technical Specifications	53
Airlessco Standard Warranty	55

Models

					Hi-Boy
	VAC	Model	Stand 	Lo-Boy 	
	120 USA	LP555	17M134	17M136	17M135
		LP655	17M137	17M139	17M138
		Mustang 5150	17M151		17M152
		Mustang 8150			17M154
	230 Asia/ANZ/ South America	LP555	17M237	17M239	17M238
		LP655	17M240	17M242	17M241

Warnings

The following warnings are for the setup, use, grounding, maintenance, and repair of this equipment. The exclamation point symbol alerts you to a general warning and the hazard symbols refer to procedure-specific risks. When these symbols appear in the body of this manual or on warning labels, refer back to these Warnings. Product-specific hazard symbols and warnings not covered in this section may appear throughout the body of this manual where applicable.

WARNING



GROUNDING


This product must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This product is equipped with a cord having a grounding wire with an appropriate grounding plug. The plug must be plugged into an outlet that is properly installed and grounded in accordance with all local codes and ordinances.

- Improper installation of the grounding plug is able to result in a risk of electric shock.
- When repair or replacement of the cord or plug is required, do not connect the grounding wire to either flat blade terminal.
- The wire with insulation having an outer surface that is green with or without yellow stripes is the grounding wire.
- Check with a qualified electrician or serviceman when the grounding instructions are not completely understood, or when in doubt as to whether the product is properly grounded.
- Do not modify the plug provided; if it does not fit the outlet, have the proper outlet installed by a qualified electrician.
- This product is for use on a nominal 120V or 230V circuit and has a grounding plug similar to the plugs illustrated below.

120V US



230V



230V ANZ



ti24583a

- Only connect the product to an outlet having the same configuration as the plug.
- Do not use an adapter with this product.

Extension Cords:

- Use only a 3-wire extension cord that has a grounding plug and a grounding receptacle that accepts the plug on the product.
- Make sure your extension cord is not damaged. If an extension cord is necessary use 12 AWG (2.5mm²) minimum to carry the current that the product draws.
- An undersized cord results in a drop in line voltage and loss of power and overheating.

WARNING

SKIN INJECTION HAZARD



High-pressure spray is able to inject toxins into the body and cause serious bodily injury. In the event that injection occurs, **get immediate surgical treatment.**



- Do not aim the gun at, or spray any person or animal.
- Keep hands and other body parts away from the discharge. For example, do not try to stop leaks with any part of the body.



- Always use the nozzle tip guard. Do not spray without nozzle tip guard in place.
- Use Graco nozzle tips.



- Use caution when cleaning and changing nozzle tips. In the case where the nozzle tip clogs while spraying, follow the **Pressure Relief Procedure** for turning off the unit and relieving the pressure before removing the nozzle tip to clean.



- Equipment maintains pressure after power is shut off. Do not leave the equipment energized or under pressure while unattended. Follow the **Pressure Relief Procedure** when the equipment is unattended or not in use, and before servicing, cleaning, or removing parts.

- Check hoses and parts for signs of damage. Replace any damaged hoses or parts.
- This system is capable of producing 3300 psi. Use Graco replacement parts or accessories that are rated a minimum of 3300 psi.
- Always engage the trigger lock when not spraying. Verify the trigger lock is functioning properly.
- Verify that all connections are secure before operating the unit.
- Know how to stop the unit and bleed pressure quickly. Be thoroughly familiar with the controls.

FIRE AND EXPLOSION HAZARD



Flammable fumes, such as solvent and paint fumes, in work area can ignite or explode. To help prevent fire and explosion:



- Do not spray flammable or combustible materials near an open flame or sources of ignition such as cigarettes, motors, and electrical equipment.



- Paint or solvent flowing through the equipment is able to result in static electricity. Static electricity creates a risk of fire or explosion in the presence of paint or solvent fumes. All parts of the spray system, including the pump, hose assembly, spray gun, and objects in and around the spray area shall be properly grounded to protect against static discharge and sparks. Use Graco conductive or grounded high-pressure airless paint sprayer hoses.



- Verify that all containers and collection systems are grounded to prevent static discharge. Do not use pail liners unless they are antistatic or conductive.

- Connect to a grounded outlet and use grounded extensions cords. Do not use a 3-to-2 adapter.
- Do not use a paint or a solvent containing halogenated hydrocarbons.
- Do not spray flammable or combustible liquids in a confined area.
- Keep spray area well-ventilated. Keep a good supply of fresh air moving through the area.
- Sprayer generates sparks. Keep pump assembly in a well ventilated area at least 20 feet (6.1 m) from the spray area when spraying, flushing, cleaning, or servicing. Do not spray pump assembly.
- Do not smoke in the spray area or spray where sparks or flame is present.
- Do not operate light switches, engines, or similar spark producing products in the spray area.
- Keep area clean and free of paint or solvent containers, rags, and other flammable materials.
- Know the contents of the paints and solvents being sprayed. Read all Material Safety Data Sheets (MSDS) and container labels provided with the paints and solvents. Follow the paint and solvents manufacturer's safety instructions.
- Fire extinguisher equipment shall be present and working.

Warnings

WARNING



EQUIPMENT MISUSE HAZARD

Misuse can cause death or serious injury.

- Always wear appropriate gloves, eye protection, and a respirator or mask when painting.
- Do not operate or spray near children. Keep children away from equipment at all times.
- Do not overreach or stand on an unstable support. Keep effective footing and balance at all times.
- Stay alert and watch what you are doing.
- Do not operate the unit when fatigued or under the influence of drugs or alcohol.
- Do not kink or over-bend the hose.
- Do not expose the hose to temperatures or to pressures in excess of those specified by Graco.
- Do not use the hose as a strength member to pull or lift the equipment.
- Do not spray with a hose shorter than 25 feet.
- Do not alter or modify equipment. Alterations or modifications may void agency approvals and create safety hazards.
- Make sure all equipment is rated and approved for the environment in which you are using it.



ELECTRIC SHOCK HAZARD

This equipment must be grounded. Improper grounding, setup, or usage of the system can cause electric shock.

- Turn off and disconnect power cord before servicing equipment.
- Connect only to grounded electrical outlets.
- Use only 3-wire extension cords.
- Ensure ground prongs are intact on power and extension cords.
- Do not expose to rain. Store indoors.



PRESSURIZED ALUMINUM PARTS HAZARD

Use of fluids that are incompatible with aluminum in pressurized equipment can cause serious chemical reaction and equipment rupture. Failure to follow this warning can result in death, serious injury, or property damage.

- Do not use 1,1,1-trichloroethane, methylene chloride, other halogenated hydrocarbon solvents or fluids containing such solvents.
- Do not use chlorine bleach.
- Many other fluids may contain chemicals that can react with aluminum. Contact your material supplier for compatibility.

WARNING



MOVING PARTS HAZARD

Moving parts can pinch, cut, or amputate fingers and other body parts.

- Keep clear of moving parts.
- Do not operate equipment with protective guards or covers removed.
- Pressurized equipment can start without warning. Before checking, moving, or servicing equipment, follow the **Pressure Relief Procedure** and disconnect all power sources.



TOXIC FLUID OR FUMES HAZARD

Toxic fluids or fumes can cause serious injury or death if splashed in the eyes or on skin, inhaled, or swallowed.

- Read MSDSs to know the specific hazards of the fluids you are using.
- Store hazardous fluid in approved containers, and dispose of it according to applicable guidelines.



PERSONAL PROTECTIVE EQUIPMENT

Wear appropriate protective equipment when in the work area to help prevent serious injury, including eye injury, hearing loss, inhalation of toxic fumes, and burns. This protective equipment includes but is not limited to:

- Protective eyewear, and hearing protection.
- Respirators, protective clothing, and gloves as recommended by the fluid and solvent manufacturer.


CALIFORNIA PROPOSITION 65

This product contains a chemical known to the State of California to cause cancer, birth defects or other reproductive harm. Wash hands after handling.

Component Identification

Component Identification

Stand Models

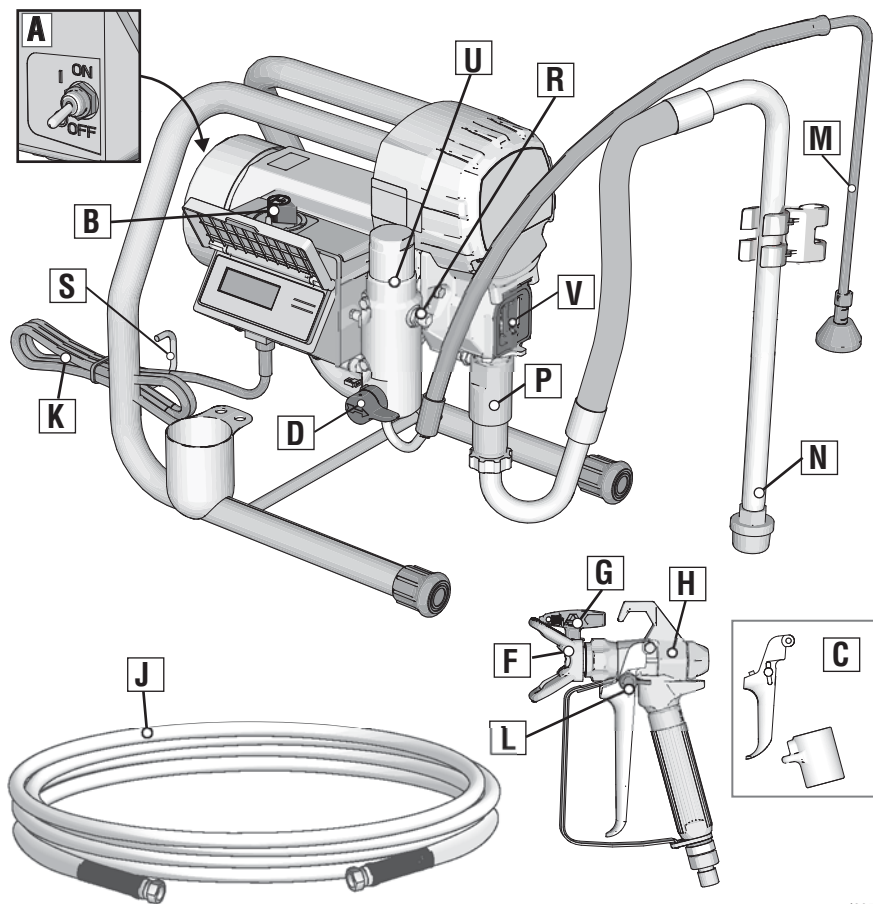


ti29535a

A	ON/OFF Switch
B	Pressure Control
C	Two-Finger Trigger Conversion Kit
D	Prime Valve
F	Tip Guard
G	Spray Tip
H	Gun
J	Airless Hose
K	Power Cord

L	Trigger Lock
M	Drain Tube
N	Fluid Intake
P	Pump
R	Fluid Outlet
S	Power Cord Wrap
U	Filter (inside manifold)
V	Finger Guard / TSO Fill Point
	Model/Serial Tag (Not shown, located on bottom of unit.)

Component Identification

Lo-Boy Models

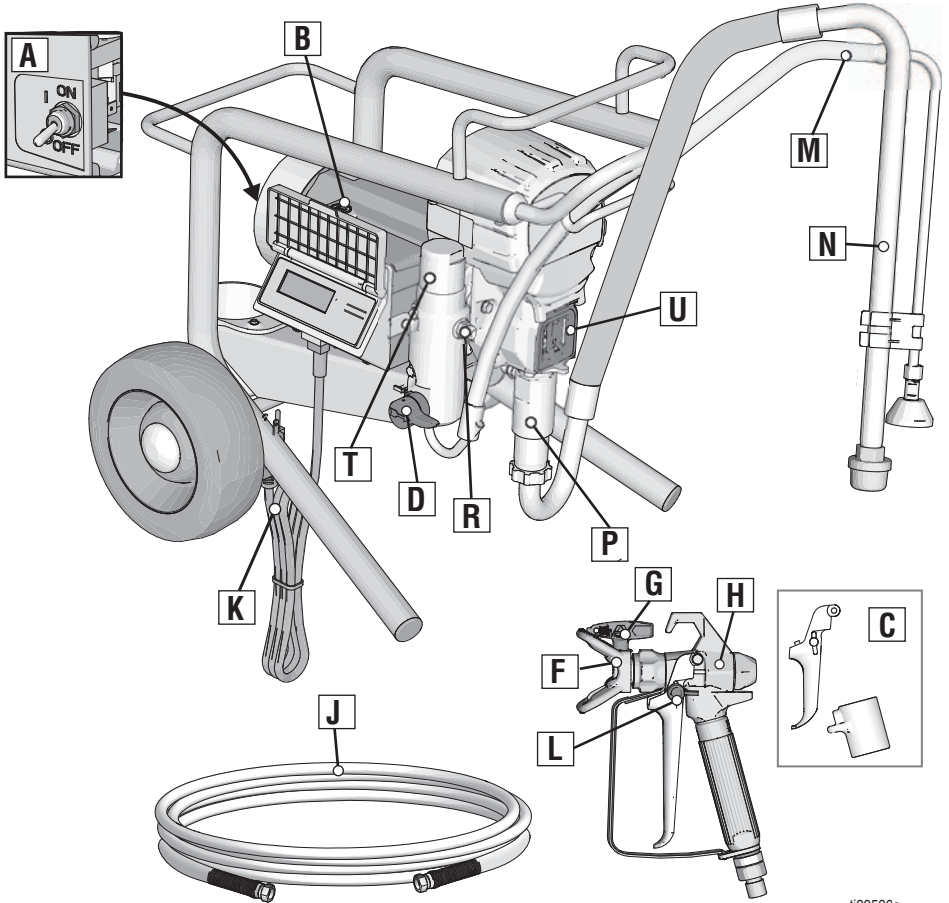


ti29536a

A	ON/OFF Switch
B	Pressure Control
C	Two-Finger Trigger Conversion Kit
D	Prime Valve
F	Tip Guard
G	Spray Tip
H	Gun
J	Airless Hose
K	Power Cord

L	Trigger Lock
M	Drain Tube
N	Fluid Intake
P	Pump
R	Fluid Outlet
T	Filter (inside manifold)
U	Finger Guard / TSO Fill Point
	Model/Serial Tag (Not shown, located on bottom of unit.)

Component Identification

Hi-Boy Models

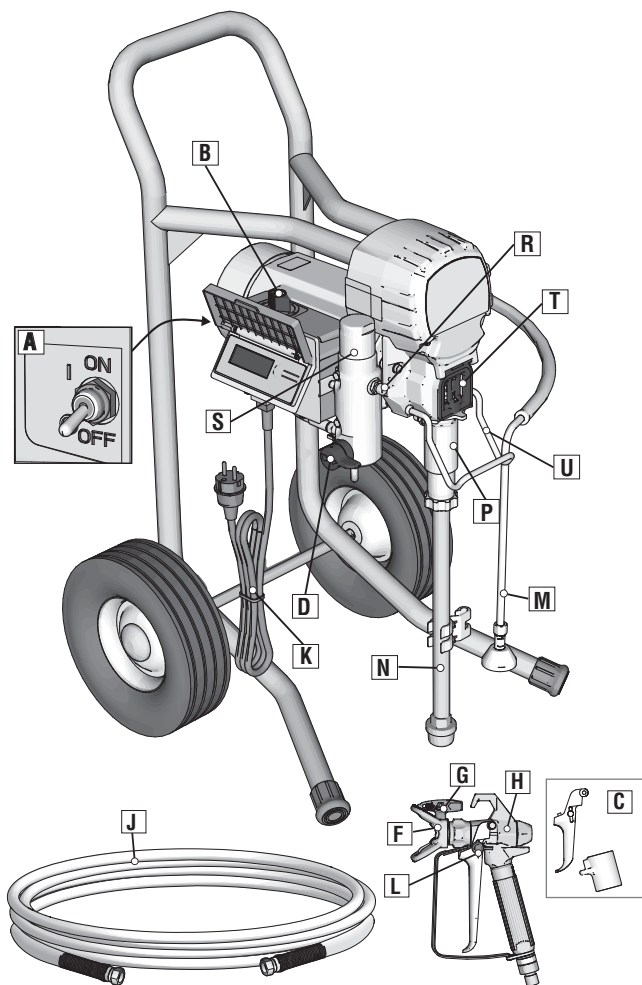

ti29537a

A	ON/OFF Switch
B	Pressure Control
C	Two-Finger Trigger Conversion Kit
D	Prime Valve
F	Tip Guard
G	Spray Tip
H	Gun
J	Airless Hose
K	Power Cord

L	Trigger Lock
M	Drain Tube
N	Fluid Intake
P	Pump
R	Fluid Outlet
S	Filter
T	Finger Guard / TSO Fill Point
U	Pail Hook
	Model/Serial Tag (Not shown, located on bottom of unit.)

Grounding



The equipment must be grounded to reduce the risk of static sparking and electric shock. An electric or static spark can cause fumes to ignite or explode. An improper ground can cause electric shock. A good ground provides an escape wire for the electric current.

This sprayer includes a ground wire with an appropriate ground contact.

The plug must be plugged into an outlet that is properly installed and grounded in accordance with all local codes and ordinances.

Do not modify the plug provided; if it does not fit the outlet, have the proper outlet installed by a qualified electrician.

Power Requirements

- 120V units require 100-120 VAC, 50/60 Hz, 13A, 1 phase.
- 230V units require 230 VAC, 50/60 HZ, 8A, 1 phase.

Extension Cords

Use an extension cord with an undamaged ground contact. If an extension cord is necessary, use a 3-wire, 12 AWG (2.5 mm²) minimum.

NOTE: Smaller gauge or longer extension cords may reduce sprayer performance.


Pails

Solvent and oil-based fluids: follow local code. Use only conductive metal pails, placed on a grounded surface such as concrete.


Do not place pail on a non-conductive surface such as paper or cardboard which interrupts grounding continuity.



Always ground a metal pail: connect a ground wire to the pail. Clamp one end to the pail and the other end to a true earth ground such as a water pipe.

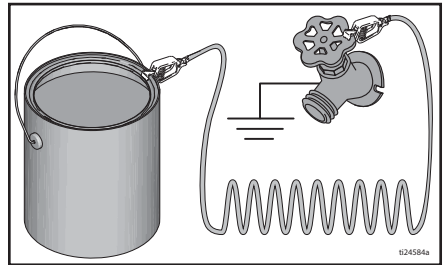

To maintain ground continuity when sprayer is flushed or pressure is relieved: hold metal part of spray gun firmly to the side of a grounded metal pail then trigger the gun.

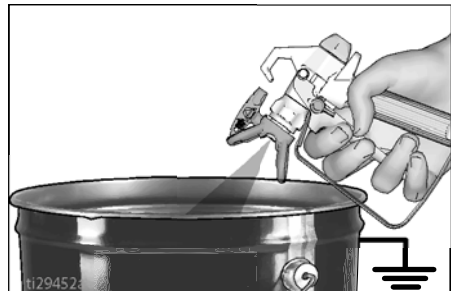


Pressure Relief Procedure

Pressure Relief Procedure




Follow the Pressure Relief Procedure whenever you see this symbol.

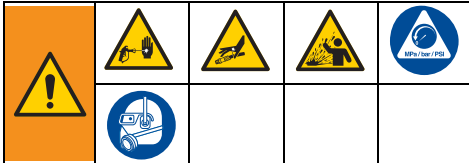


This equipment stays pressurized until pressure is manually relieved. To help prevent serious injury from pressurized fluid, such as skin injection, splashed fluid and moving parts, follow the **Pressure Relief Procedure** whenever sprayer is stopped and before sprayer is cleaned or checked, and before equipment is serviced.


1. Turn the ON/OFF switch to **OFF** position. Wait 7 seconds for power to dissipate.

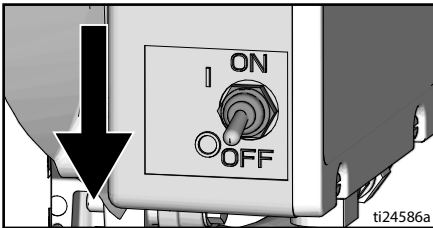


2. Engage the trigger lock.

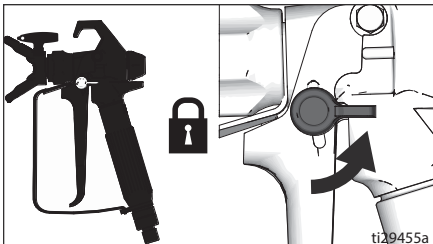

3. Turn pressure control to lowest setting. Disengage the trigger lock.

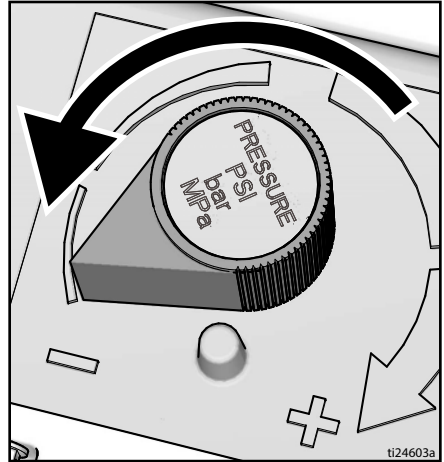


4. Hold a metal part of the gun firmly to a grounded metal pail. Trigger the gun to relieve pressure.

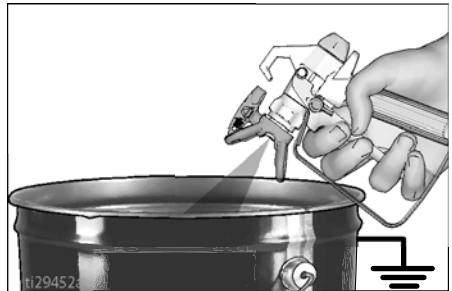

5. Engage the trigger lock.

Pressure Relief Procedure


6. Put drain tube in a pail. Turn prime valve down. Leave prime valve in down (drain) position until you are ready to spray again.

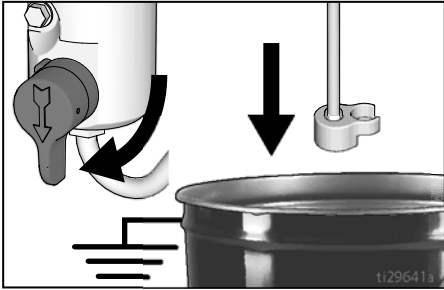


7. If you suspect the spray tip or hose is clogged or that pressure has not been fully relieved:
 - a. **VERY SLOWLY** loosen the tip guard retaining nut or the hose end coupling to relieve pressure gradually.
 - b. Loosen the nut or coupling completely.
 - c. Clear hose or tip obstruction.

Trigger Lock

Always engage the trigger lock when sprayer is stopped to prevent the gun from being triggered accidentally by hand or if dropped or bumped.

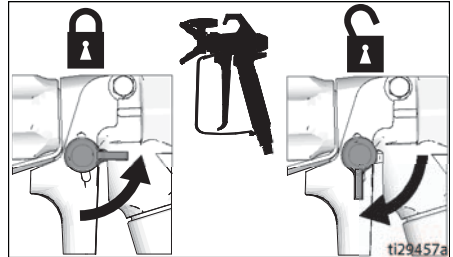


Setup

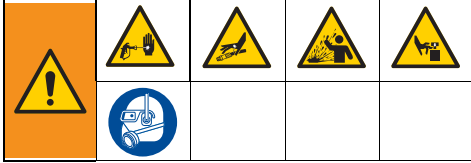


When unpacking sprayer for the first time or after long term storage perform setup procedure. When first setup is performed remove shipping plug from fluid outlet.


1. Connect airless hose to fluid outlet. Use wrenches to tighten securely.

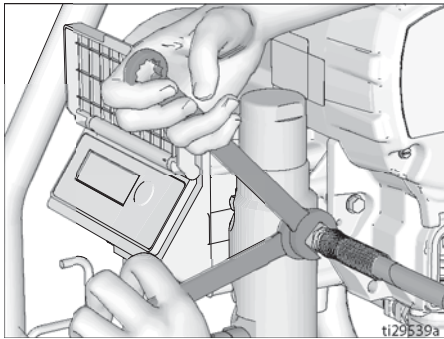


2. Connect other end of hose to gun.

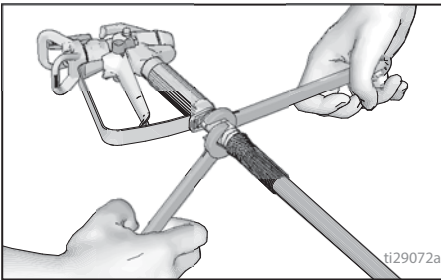


3. Use wrenches to tighten securely.
4. Engage trigger lock.

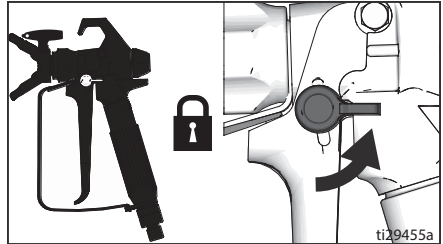


5. Remove tip guard.

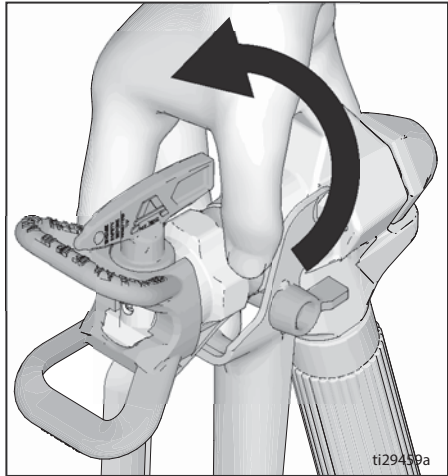


- When unpacking sprayer for the first time remove packaging materials from inlet strainer. After long term storage check inlet strainer for clogs and debris.

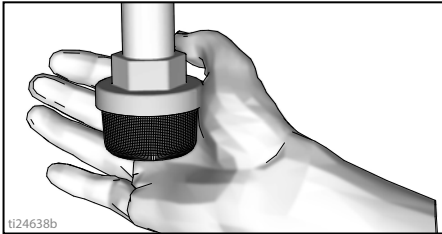


- Fill throat packing nut with TSO to prevent premature packing wear. Do this daily or each time you spray.
 - Place the TSO bottle nozzle into the top center opening in the grill at the front of the sprayer.
 - Squeeze bottle to dispense enough TSO to fill the space between the pump rod and packing nut seal.

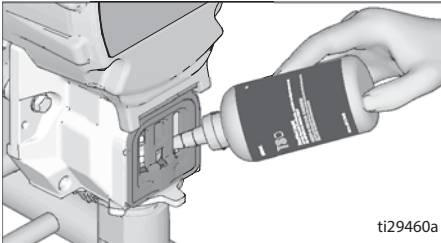

- Make certain ON/OFF switch is OFF.

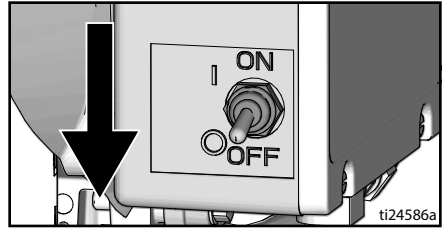


- Plug power supply cord into a properly grounded electrical outlet.

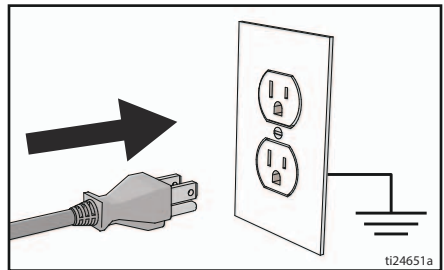


Setup

10. Turn prime valve down.

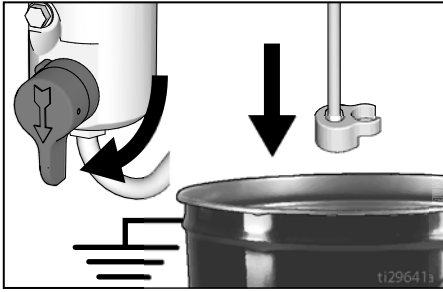


11. Place fluid intake with drain tube in grounded metal pail partially filled with flushing fluid. See **Grounding**, page 11.

NOTE: New sprayers are shipped with storage fluid that must be flushed out with mineral spirits prior to using the sprayer. Check flushing fluid for compatibility with material that is to be sprayed. A secondary flush with a compatible fluid may be necessary. Use water for latex paint, or mineral spirits for oil-based paint.

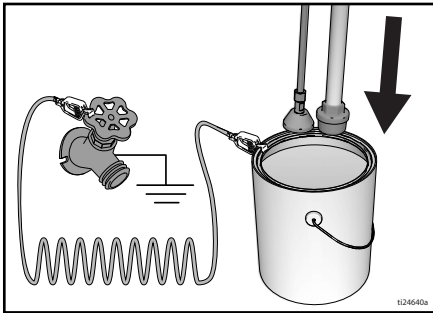


12. Turn pressure control to lowest setting.
13. Turn ON/OFF switch to **ON** position.
14. Increase pressure 1/2 turn to start motor. Allow fluid to flush through sprayer for one minute.

15. Turn prime valve horizontal. Disengage trigger lock.

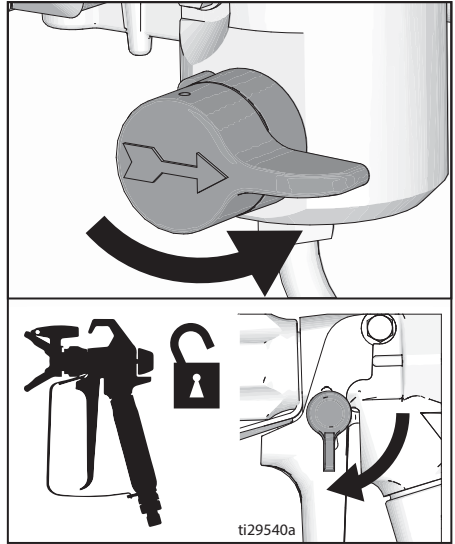


16. Hold a metal part of the gun firmly to a grounded metal pail. Trigger gun and flush until clean.
17. Turn ON/OFF switch to **OFF** position.
18. Engage trigger lock.
19. After flushing storage fluid out of the sprayer empty pail. Replace fluid intake with drain tube in grounded metal pail partially filled with flushing fluid. Use water to flush water-based paint or mineral spirits to flush oil-based paint.
20. Turn ON/OFF switch to **ON** position.
21. Turn prime valve horizontal. Disengage trigger lock.
22. Hold a metal part of the gun firmly to a grounded metal pail. Trigger gun and flush for one minute.
23. Turn ON/OFF switch to **OFF** position.
24. Engage trigger lock.
25. Sprayer is now ready to start up and spray.


Startup

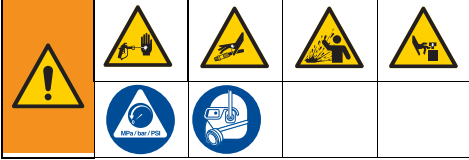


1. Perform **Pressure Relief Procedure**, page 12.
2. Turn pressure control to lowest pressure.

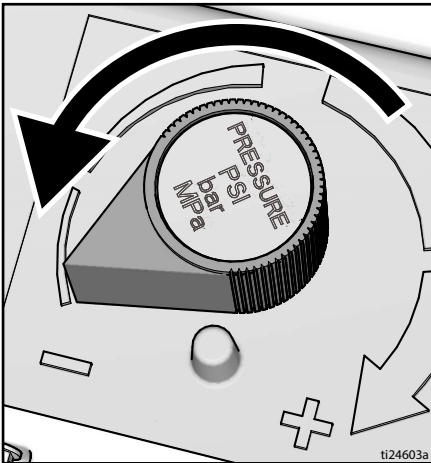


3. Place fluid intake in paint pail. Place drain tube in waste pail.
4. Turn ON/OFF switch to **ON** position.

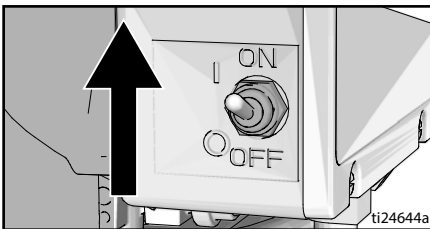

5. Turn pressure control 1/2 turn to start motor. Allow paint to circulate through sprayer until paint flows out the drain tube.

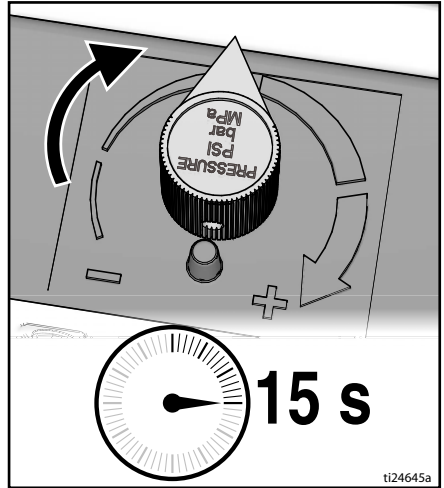


6. Turn prime valve horizontal. Disengage trigger lock.

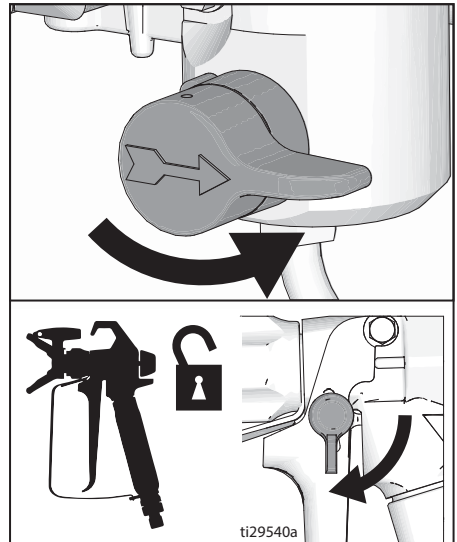


Startup

7. Hold gun against grounded metal waste pail. Trigger gun until paint appears.

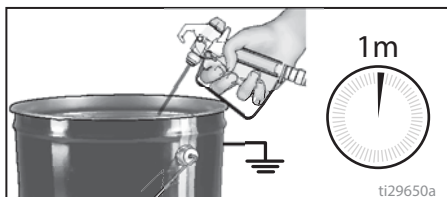


8. Move gun to paint pail and trigger for 20 seconds. Release trigger and allow sprayer to build pressure. Engage trigger lock.

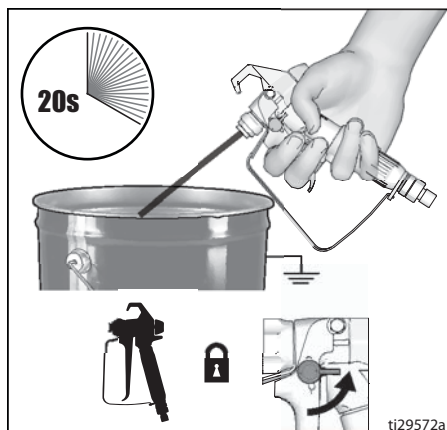

High-pressure spray is able to inject toxins into the body and cause serious bodily injury. Do not stop leaks with hand or rag.

9. Inspect for leaks. If leaks occur, perform **Pressure Relief Procedure**, page 12, then tighten all fittings and repeat Startup procedure. If there are no leaks continue with the next step.
10. Screw tip assembly onto gun and tighten. See **Spray Tip Installation**, page 19. For gun assembly instructions, see separate gun manual.

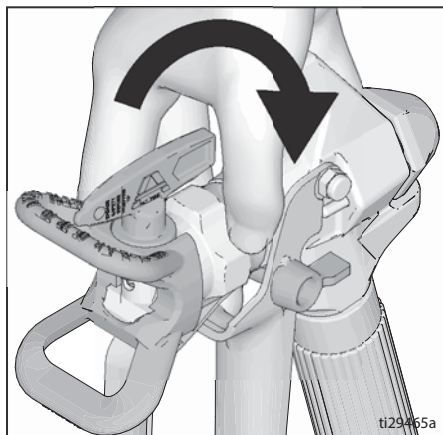



Operation

Spray Tip Installation




To avoid serious injury from skin injection do not put your hand in front of the spray tip when installing or removing the spray tip and tip guard.

1. Perform **Pressure Relief Procedure**, page 12.
2. Use spray tip to insert seal into tip guard. Insert Spray Tip.

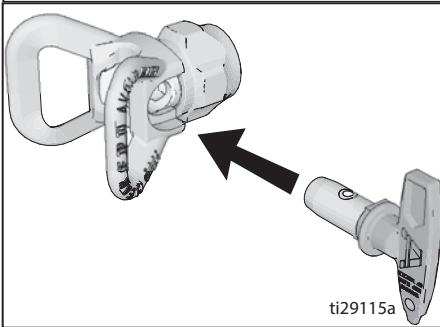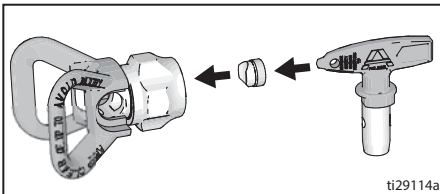


3. Screw assembly onto gun. Tighten.

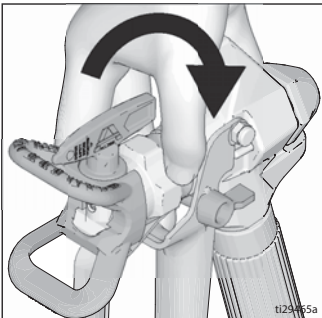


Spray

1. Spray test pattern. Adjust pressure to eliminate heavy edges.

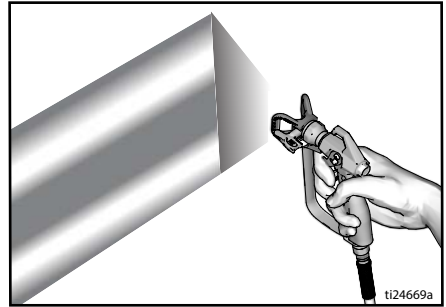

2. Use smaller tip size if pressure adjustment cannot eliminate heavy edges.
3. Hold gun perpendicular, 10-12 in. (25-30 cm) from surface. Spray back and forth; overlap by 50%.

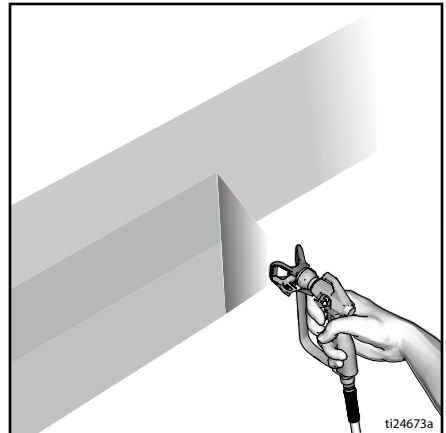


4. Trigger gun after moving. Release trigger before stopping. For additional spraying information, see separate gun manual.

Clear Tip Clog


In the event that particles or debris clog the spray tip, this sprayer is designed with a reversible spray tip that quickly and easily clears the particles without disassembling the sprayer.

1. Engage trigger lock. Rotate spray tip to unclog position. Disengage trigger lock. Trigger gun at waste area to clear clog.

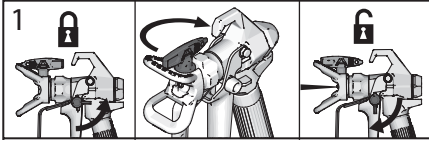

NOTE: If spray tip is difficult to rotate when turning to the unclog position, perform **Pressure Relief Procedure**, page 12, then turn Prime/Spray valve to spray position and repeat step 1.

2. Engage trigger lock. Rotate spray tip back to spray position. Disengage trigger lock and continue spraying.


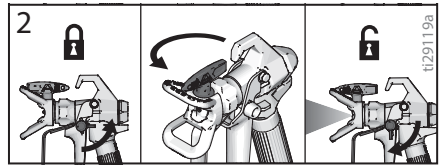


Digital Display

Some models are equipped with a digital display. This section explains how to use this feature.

Pressure Display

1. Perform **Pressure Relief Procedure**, page 12.
2. Plug sprayer into grounded outlet. Turn ON/OFF switch to **ON** position.

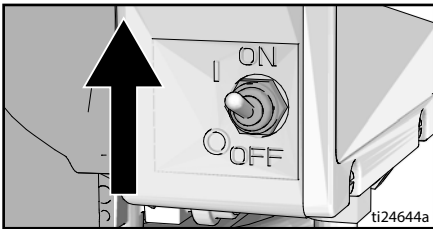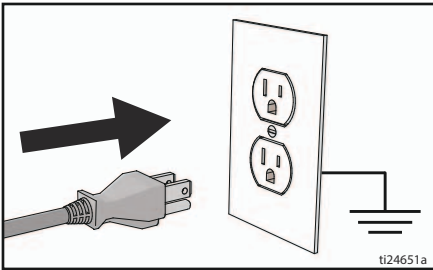


3. The pressure is displayed. Dashes indicate pressure is less than 200 psi (14 bar, 1.4 MPa).




4. Press and release display button to display total running hours.

5. Press and hold display button to change pressure units (psi, bar, or MPa).

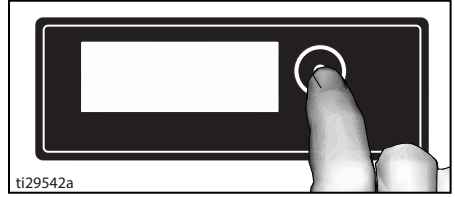


Stored Data Display

1. Turn ON/OFF switch to **OFF** position.

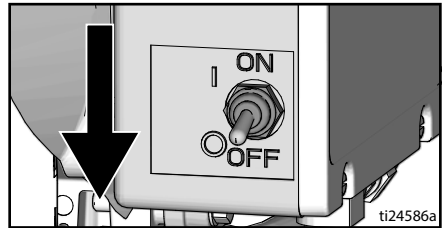

2. To enter Stored Data Mode, press and hold display button and turn ON/OFF switch to **ON** position.

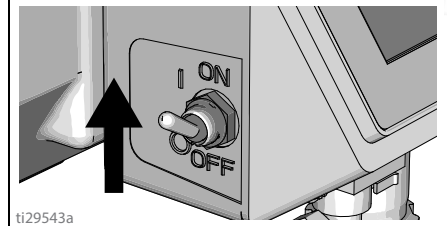

Operation


3. Sprayer model number is displayed followed by Data Point 1 which is the unit power on time in hours.



4. Press display button again to display Data Point 2. Motor run time in hours is displayed.



5. Press display button again to display Data Point 3. This will be the last error code.

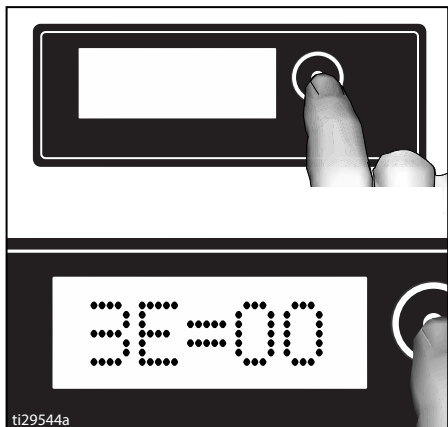

6. To erase last error code, press and hold display button.


7. Press display button again to display Data Point 4. The software revision is displayed.



8. Press display button again to return to Data Point 1.




9. Turn ON/OFF switch to **OFF** position to exit Stored Data.

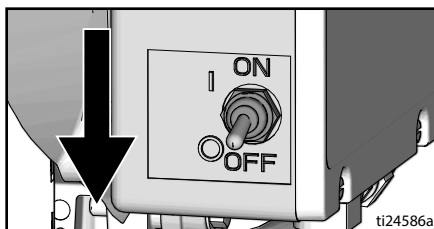


Cleanup


1. Perform **Pressure Relief Procedure**, page 12.
2. Remove tip guard and Spray Tip. For additional information, see separate gun manual.

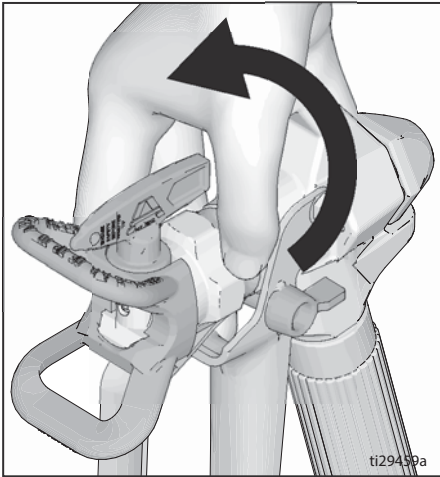


3. Remove fluid intake and drain tube from paint, wipe excess paint off outside.

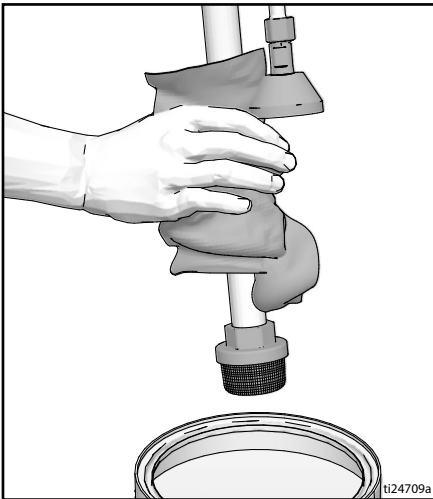

4. Place fluid intake in flushing fluid. Use water for water base paint and mineral spirits for oil-based paint. Place drain tube in waste pail.

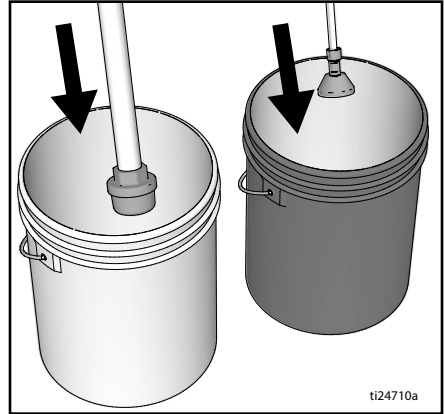

5. Turn prime valve horizontal.
6. Increase pressure 1/2 turn to start motor. Hold gun against paint pail. Disengage trigger lock. Trigger gun and increase pressure until the pump runs steady and flushing fluid appears.

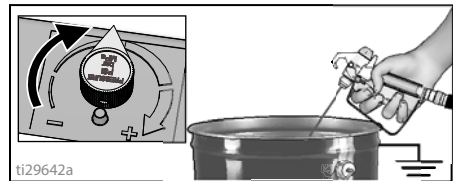


Operation

7. Stop triggering gun. Move gun to waste pail, hold gun against pail, trigger gun to thoroughly flush system.
8. While continuing to trigger gun, turn prime valve down. Then, release gun trigger. Allow flushing fluid to circulate until fluid comes out of drain tube clear.




9. Raise fluid intake above flushing fluid.

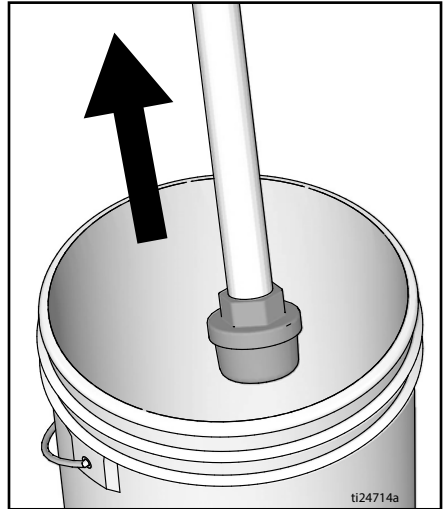


10. Turn prime valve horizontal. Trigger gun into flushing pail to purge fluid from hose.


11. Engage trigger lock.

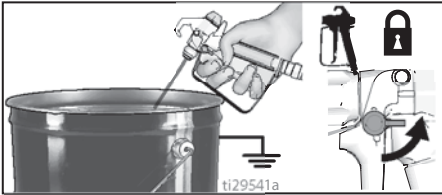


12. Turn pressure control knob to the lowest pressure setting and turn ON/OFF switch to **OFF** position. Disconnect power to sprayer.

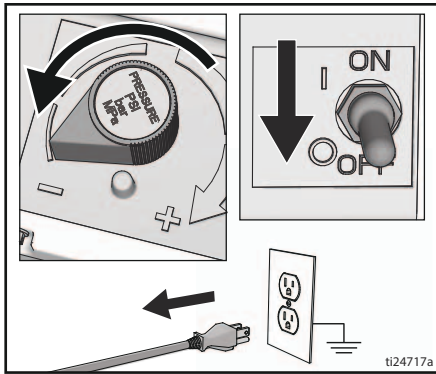


13. Remove filter from gun and sprayer if installed. Clean and inspect. Install filter. See separate gun manual.

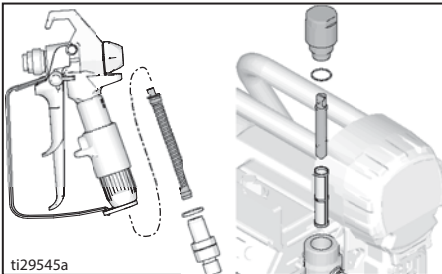

14. If flushing with water, flush again with mineral spirits or Pump Conditioner to leave a protective coating to prevent freezing or corrosion.

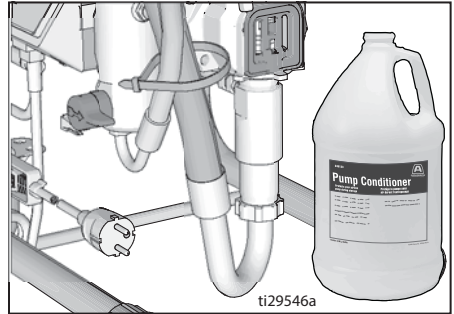

15. Wipe sprayer, hose and gun with a rag soaked in water or mineral spirits.

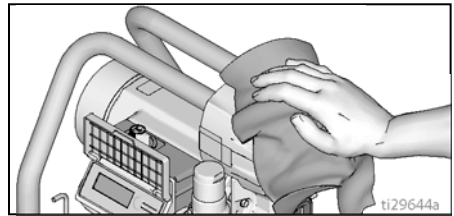

Maintenance

Routine maintenance is important to ensure proper operation of your sprayer. Maintenance includes performing routine actions which keep your sprayer in operation and prevents trouble in the future.



Activity	Interval
Inspect/clean sprayer filter, fluid inlet strainer, and gun filter.	Daily or each time you spray
Inspect motor shield vents for blockage.	Daily or each time you spray
Fill TSO by adding through TSO fill point.	Daily or each time you spray
Inspect motor brushes for wear. Brushes must be 1/2 in. (13mm) minimum length. NOTE: Brushes do not wear at the same rate on both sides of motor. Check both brushes.	Every 1000 gallons (3785 liters)
<p>Check sprayer stall.</p> <p>With sprayer gun NOT triggered, sprayer motor should stall and not restart until gun is triggered again.</p> <p>If sprayer starts again with gun NOT triggered, inspect pump for internal/external leaks and check prime valve for leaks.</p>	Every 1000 gallons (3785 liters)
<p>Throat packing adjustment</p> <p>When pump packing begins to leak after extended use, tighten packing nut down until leakage stops or lessens. This allows approximately 100 gallons of additional operation before a repacking is required. Packing nut can be tightened without O-ring removal.</p>	As necessary based on usage

Troubleshooting

Mechanical/Fluid Flow



1. Follow **Pressure Relief Procedure**, page 13, before checking or repairing.
2. Check all possible problems and causes before disassembling the unit.

Problem	What to Check If check is OK, go to next check	What to Do When check is not OK, refer to this column
<p>For units with display: E=0X is displayed.</p> <p>For units with no display: Control board status light is blinking or the light is off and there is power to the sprayer.</p>	Fault condition exists.	Determine fault correction from Electrical , page 30.
Pump output is low	Spray tip worn.	Follow Pressure Relief Procedure , page 12, then replace tip. See separate gun or tip manual.
	Spray tip clogged.	Relieve pressure. Check and clean spray tip.
	Paint supply.	Refill and reprime pump.
	Intake strainer clogged.	Remove and clean, then reinstall.
	Intake valve ball and piston ball are not seating properly.	Remove intake valve and clean. Check balls and seats for nicks; replace if necessary. See pump manual. Strain paint before using to remove particles that could clog pump.
	Fluid filter or tip filter is clogged or dirty.	Clean filter.
	Prime valve leaking.	Follow Pressure Relief Procedure , page 12, then repair prime valve.
	Verify pump does not continue to stroke when gun trigger is released. (Prime valve not leaking.)	Service pump. See pump manual.
Leaking around throat packing nut which may indicate worn or damaged packings.	Replace packings. See pump manual. Also check piston valve seat for hardened paint or nicks and replace if necessary. Tighten packing nut/wet-cup.	

Troubleshooting

Problem	What to Check If check is OK, go to next check	What to Do When check is not OK, refer to this column
Pump output is low	Pump rod damage.	Repair pump. See pump manual.
	Low stall pressure.	Turn pressure knob fully clockwise. Make sure pressure control knob is properly installed to allow full clockwise position. If problem persists, replace pressure transducer.
	Piston packings are worn or damaged.	Replace packings. See pump manual.
	O-ring in pump is worn or damaged.	Replace o-ring. See pump manual.
	Intake valve ball is packed with material.	Clean intake valve. See pump manual.
	Large pressure drop in hose with heavy materials.	Reduce overall length of hose.
	Check extension cord for correct size.	See Extension Cords , page 11.
	Loose motor brushes and terminals.	Tighten terminal screws. Replace brushes if leads are damaged.
	Worn motor brushes. (Brushes must be 1/2 in. [13mm] minimum length).	Replace brushes.
	Broken and misaligned motor brush springs. Rolled portion of spring must rest squarely on top of brush.	Replace spring if broken. Realign spring with brush.
Motor runs but pump does not stroke	Connecting rod assembly damaged. See pump manual.	Replace connecting rod assembly. See pump manual.
	Gears or drive housing damaged.	Inspect drive housing assembly and gears for damage and replace if necessary.

Problem	What to Check If check is OK, go to next check	What to Do When check is not OK, refer to this column
Excessive paint leakage into throat packing nut	Throat packing nut is loose.	Remove throat packing nut spacer. Tighten throat packing nut just enough to stop leakage.
	Throat packings are worn or damaged.	Replace packings. See pump manual.
	Displacement rod is worn or damaged.	Replace rod. See pump manual.
Fluid is spitting from gun	Air in pump or hose.	Check and tighten all fluid connections. Cycle pump as slowly as possible during priming.
	Spray tip is partially clogged.	Clear tip. See Cleanup , page 23.
	Fluid supply is low or empty.	Refill fluid supply. Prime pump. See pump manual. Check fluid supply often to prevent running pump dry.
Pump is difficult to prime	Air in pump or hose.	Check and tighten all fluid connections. Cycle pump as slowly as possible during priming.
	Intake valve is leaking.	Clean intake valve. Be sure ball seat is not nicked or worn and that ball seats well. Reassemble valve.
	Pump packings are worn.	Replace pump packings. See pump manual.
	Paint is too thick.	Thin the paint according to supplier recommendations.
Sprayer operates for 5 to 10 minutes then stops	Pump packing nut too tight. When pump packing nut is too tight the packings on the pump rod restrict pump action and overloads the motor.	Loosen pump packing nut. Check for leaks around throat. If necessary, replace pump packings. See Pump manual.

Troubleshooting

Electrical

Symptom: Sprayer does not run, stops running, or will not shut off.



Perform **Pressure Relief Procedure**, page 13.

1. Plug sprayer into correct voltage, grounded outlet.
2. Turn the ON/OFF switch **OFF** wait 30 seconds and then turn power back **ON** again (this ensures sprayer is in normal run mode).
3. Turn pressure control knob clockwise 1/2 turn.

4. View digital display or remove control box cover to view control board status light. To determine which code (or any other code besides voltage supply) refer to the control board status light. Turn the ON/OFF switch **OFF**, remove the control cover then turn power back **ON**. Observe the status light. Blinking LED total count equals the error code (for example: two blinks equals CODE 02).






Keep clear of electrical and moving parts during troubleshooting procedures. To avoid electrical shock hazards when covers are removed for troubleshooting, wait 7 seconds after disconnecting power cord for stored electricity to dissipate.

Problem	What to Check	How to check
Sprayer does not run at all AND Display is blank OR Control board status light never lights	See flow chart, page 36.	
Sprayer does not shut off AND Display shows E=02 OR Control board status light blinks 2 times repeatedly	Control board.	Replace control board.


Problem	What to Check	How to check
<p>Sprayer does not run at all AND Display shows E=02 OR Control board status light blinks 2 times repeatedly</p>	<p>Check transducer or transducer connections</p>	<p>Make sure there is no pressure in the system (see Pressure Relief Procedure, page 12). Check fluid path for clogs, such as clogged filter.</p> <p>Use airless paint spray hose with no metal braid. A small hose or metal braid hose may result in high-pressure spikes. Turn ON/OFF switch OFF and disconnect power to sprayer. Check transducer and connections to control board. Disconnect transducer from control board socket. Check that transducer and control board contacts are clean and secure.</p> <p>Reconnect transducer to control board socket. Connect power, turn ON/OFF switch ON and control knob 1/2 turn clockwise. If sprayer does not run properly, turn ON/OFF switch OFF and go to next step.</p> <p>Install new transducer. Connect power, turn ON/OFF switch ON and control knob 1/2 turn clockwise. Replace control board if sprayer does not run properly.</p>
<p>Sprayer does not run at all AND Display shows E=03 OR Control board status light blinks 3 times repeatedly</p>	<p>Check transducer or transducer connections (control board is not detecting a pressure signal).</p>	<p>Turn ON/OFF switch OFF and disconnect power to sprayer. Check transducer and connections to control board. Disconnect transducer from control board socket. Check to see if transducer and control board contacts are clean and secure.</p> <p>Reconnect transducer to control board socket. Connect power, turn ON/OFF switch ON and control knob to 1/2 turn clockwise. If sprayer does not run, turn ON/OFF switch OFF and go to next step.</p> <p>Connect a confirmed working transducer to control board socket.</p> <p>Turn ON/OFF switch ON and control knob to 1/2 turn clockwise. If sprayer runs, install new transducer. Replace control board if sprayer does not run.</p>

Troubleshooting

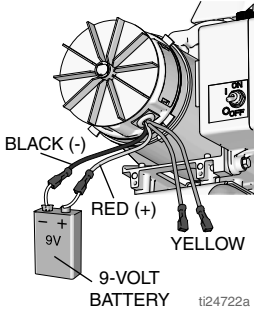Problem	What to Check	How to check
Sprayer does not run at all AND Display shows E=04 OR Control board status light blinks 4 times repeatedly	Check voltage supply to the sprayer (control board is detecting a multiple voltage surges).	Turn ON/OFF switch OFF and disconnect power to sprayer. Locate a good voltage supply to prevent damage to electronics.
Sprayer does not run at all AND Display shows E=05 OR Control board status light blinks 5 times repeatedly	Control is commanding motor to run but motor shaft does not rotate. Possibly locked rotor condition, an open connection exists between motor and control, there is a problem with motor or control board, or motor amp draw is excessive.	<ol style="list-style-type: none"> 1. Remove pump and try to run sprayer. If motor runs, check for locked or frozen pump or drive train. If sprayer does not run, continue to step 2. 2. Turn ON/OFF switch OFF and disconnect power to sprayer. 3. Disconnect motor connector(s) from control board socket(s). Check that motor connector and control board contacts are clean and secure. If contacts are clean and secure, continue to step 4. 4. Connect a DC voltmeter across the two motor wires – red & black spin the motor fan and check for a voltage to register on the meter. If voltage is not present, check brushes. If OK, replace motor. If voltage is present, go to step 5. 5. Perform a spin test by connecting a 9 –12 Volt battery to the motor leads. Motor leads may vary in style and size. Locate the two wires going to the carbon brushes normally Red and Black. Motor should spin when battery is connected to the motor leads. <div style="text-align: right; margin-top: 20px;">  <p style="text-align: right; font-size: small;">ti24722a</p> </div>

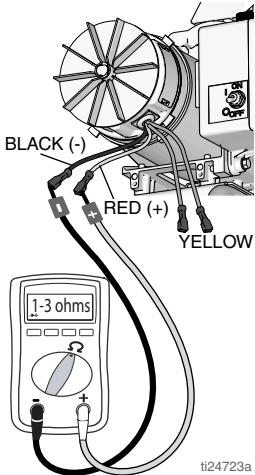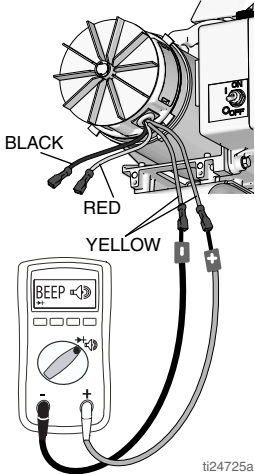Problem	What to Check	How to check
		<p data-bbox="715 196 1026 329">6. Connect the Red and Black leads from the motor to an Ohm meter. Rotate the motor while checking for opens. If an open is found replace the motor.</p>  <p data-bbox="944 805 998 820">ti24723a</p> <p data-bbox="715 846 1026 1024">7. Check motor thermal protection. Motor should be at ambient temperature for this test. Connect the yellow leads from the motor to an Ohm meter. Meter should indicate continuity or Ohms depending on the motor type.</p>  <p data-bbox="944 1520 998 1534">ti24725a</p>

Troubleshooting

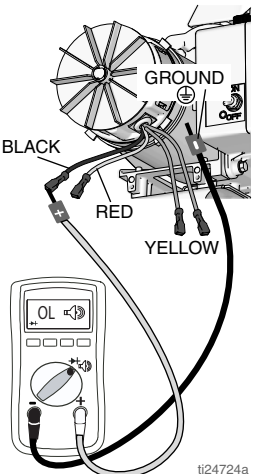
Problem	What to Check	How to check
		<p>8. Use an Ohm meter to check motor for shorts. Connect (-) meter lead to motor case. Move the (+) meter lead to each motor wire. Meter should read open on all wires.</p>  <p>ti24724a</p> <p>9. Reconnect motor connector(s) to control board socket(s). Connect power, turn ON/OFF switch ON and control knob to 1/2 turn clockwise. If motor does not run, replace control board.</p>
<p>Sprayer does not run at all AND Display shows E=06 OR Control board status light blinks 6 times repeatedly</p>	<p>Motor is hot or there is a fault in the motor thermal device.</p>	<p>Allow sprayer to cool. If sprayer runs when cool, correct cause of overheating. Keep sprayer in cooler location with good ventilation. Make sure motor air intake is not blocked. If sprayer still does not run, replace motor.</p>
<p>Sprayer does not run at all AND Display shows E=08 OR Control board status light blinks 8 times repeatedly</p>	<p>Check voltage supply to the sprayer (incoming voltage too low for sprayer operation).</p>	<p>Turn ON/OFF switch OFF and disconnect power to the sprayer.</p>

Problem	What to Check	How to check
Basic electrical problems	Motor leads are securely fastened and properly mated	Replace loose terminals; crimp to leads. Be sure terminal are firmly connected. Clean circuit board terminals. Securely reconnect leads.
	For loose motor brush lead connections and terminals.	Tighten terminal screws. Replace brushes if leads are damaged.
	Brushes must be 1/2 in. [13mm] minimum. NOTE: Brushes do not wear at the same rate on both sides of motor. Check both brushes.	Replace brushes.
	Broken or misaligned motor brush springs. Rolled portion of spring must rest squarely on top of brush.	Replace spring if broken. Realign spring with brush.
	Motor brushes may be binding in brush holders.	Clean brush holders. Remove carbon with small cleaning brush. Align brush leads with slot in brush holder to assure free vertical brush movement.
	Motor armature commutator for burn spots, gouges or extreme roughness.	Remove motor and have motor shop resurface commutator if possible.

Troubleshooting

Sprayer Will Not Run


(See following page for steps)

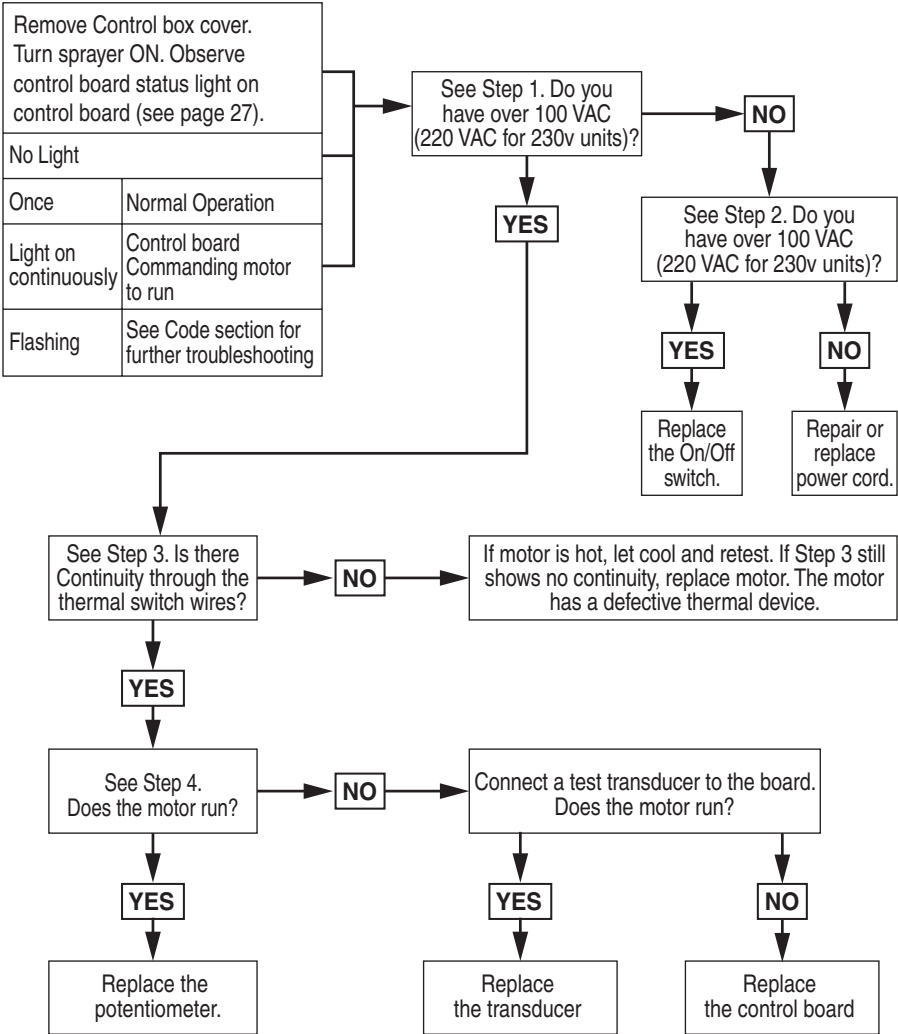

ti24726a


Step 1:

Plug Power cord in and turn switch ON. Connect probes to L and N on control board. Turn meter to AC Volts.

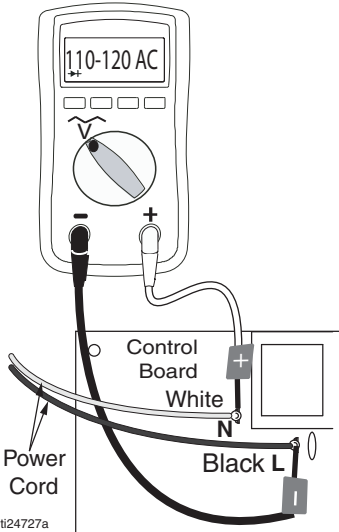

Step 2:


Plug power cord in and turn switch ON. Connect Probes to ON/OFF switch. Turn meter to AC Volts.

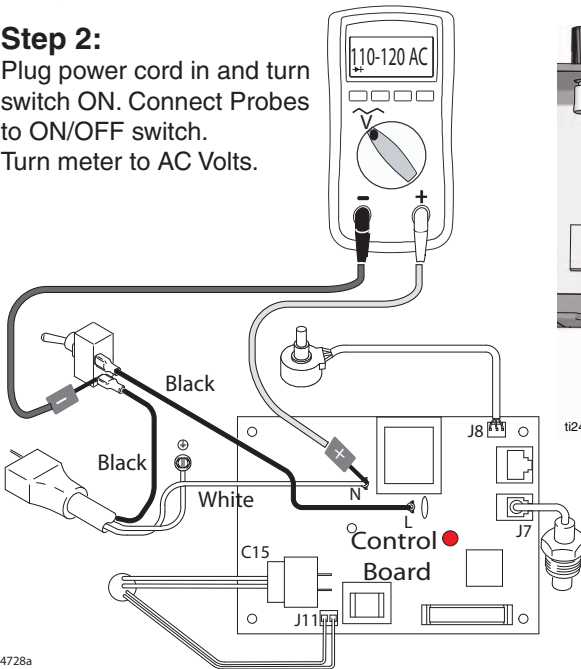

Step 3:


Check motor thermal switch. Unplug yellow wires. Meter should read continuity.

NOTE: Motor should be cool during reading.

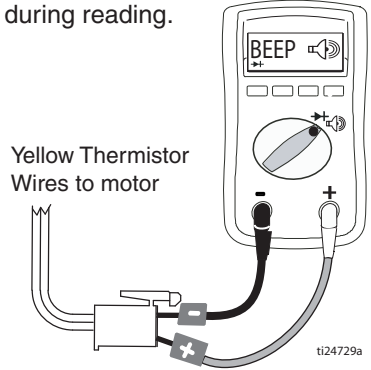

Step 4:

Disconnect potentiometer. Plug power cord in and turn switch ON.

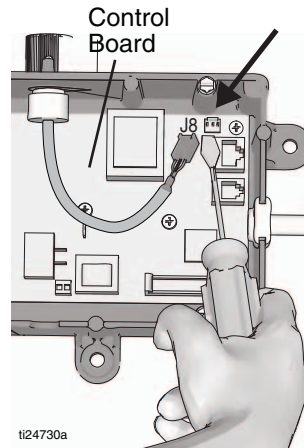


Troubleshooting

Sprayer Will Not Shut Off

1. Perform **Pressure Relief Procedure**, page 12. Leave prime valve open (down) and turn ON/OFF switch **OFF**.


2. Remove control box cover so the control board status light can be viewed if available.


Troubleshooting Procedure

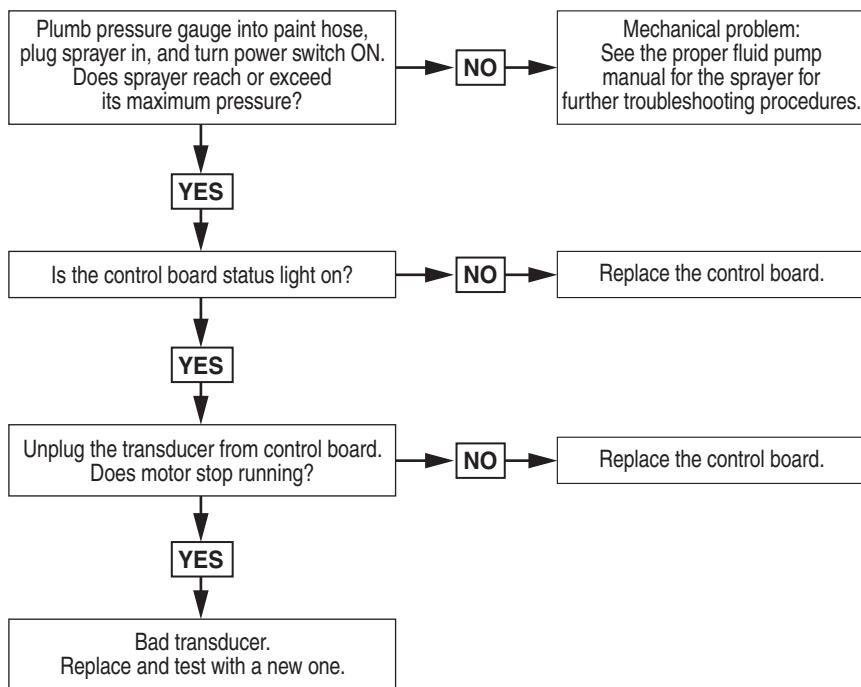

ti24731a

Stand Sprayers

Ref.	Torque
	30-35 in-lb (3.4 - 4.0 N•m)

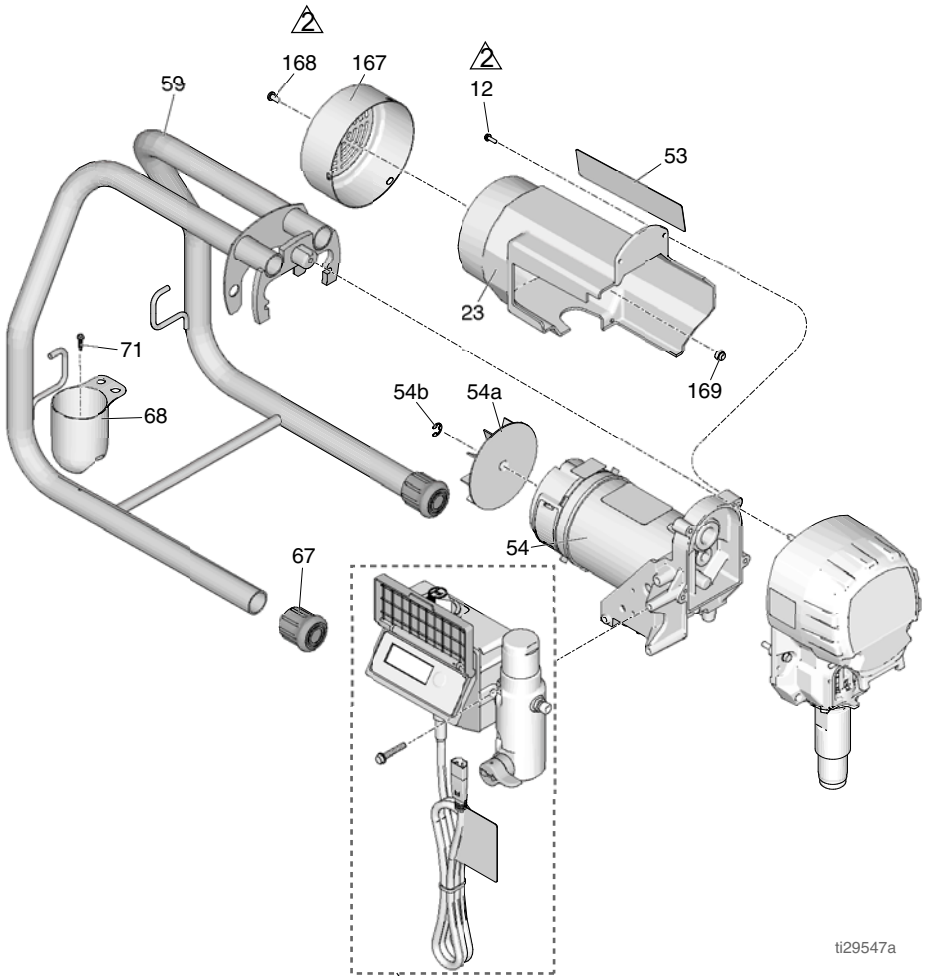


ti29547a

See page 49

Stand Sprayer Parts

Stand Sprayer Parts

Ref.	Torque
①	140-160 in-lb (15.8 - 18.1 N•m)
②	30-35 in-lb (3.4 - 4.0 N•m)
③	Hammer tight
④	25-30 ft-lb (33.9 - 40.7 N•m)

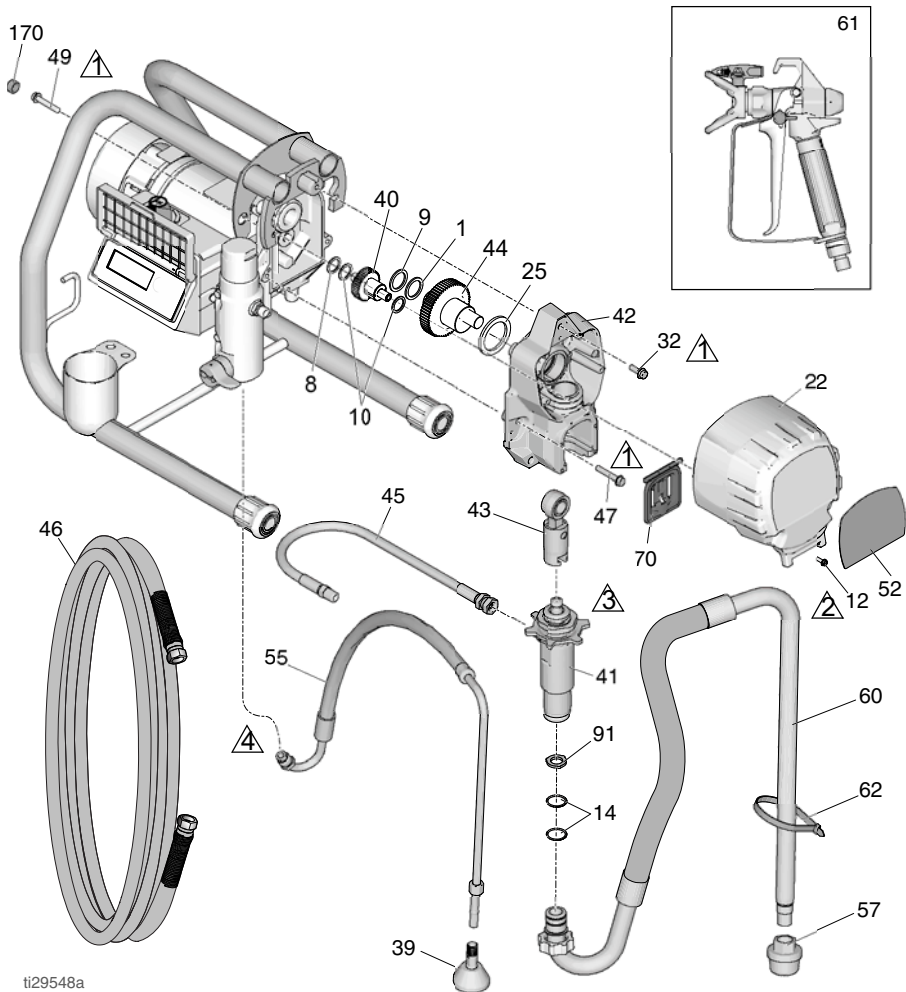

ti29548a

Stand Sprayers Parts List




Ref. Part	Description	Qty.	Ref. Part	Description	Qty.
1	107434 BEARING, thrust	1	52	See page LABEL, front	1
8	116073 WASHER, thrust	1	48		
9	116074 WASHER, thrust	1	53	See page LABEL, side	1
10	116079 BEARING, thrust	2	48		
12	117501 SCREW, mach, hex washer hd	5	54*	MOTOR, <i>includes 54a, 54b</i>	1
14	117559 O-RING	2	287015	120V	
22	17R007 COVER, front, painted	1	287060	230V	
23	17N272 SHIELD, motor, <i>includes 167,168,169</i>	1	54a	248189 FAN, motor, <i>includes 54b</i>	1
25	180131 BEARING, thrust	1	54b	118716 RING, retaining	1
32	113796 SCREW, flanged, hex	1	55	246381 HOSE, drain, stand, <i>includes 39,62</i>	1
33	867670 FLUID, packing seal, TSO, 8 oz. (not shown)	1	57	187651 STRAINER, 3/4"-16	1
34▲	See page 48 CARD, medical alert (not shown)	1	59	17M429 FRAME, standmount	1
39	241920 DEFLECTOR, threaded	1	60	17N275 KIT, hose suction <i>includes 14, 57, 91</i>	1
40	249194 GEAR, reducer	1	61	17N201 GUN, spray	1
41	17M991 North America/Europe	1	62	276888 CLIP, drain line	1
	17M990 Asia/ANZ/South America	1	63▲	See page 48 LABEL, danger (on hose, not shown)	1
42	17N294 HOUSING, drive, PC, <i>includes 47</i>	1	65▲	See page 48 LABEL, warning	1
43	24W640 ROD, connecting, PC	1	67	331048 CAP, leg	2
44	GEAR, crankshaft, <i>includes 25</i>	1	68	195177 CUP, suction/drain	1
	24X020 555/5150 models		70	17C484 COVER, pump rod	1
	24X021 655/8150 models		71	122667 SCREW, drill, hex washer head	1
45	15M671 KIT, hose, cpld	1	91	115099 WASHER, hose	1
46	HSE1450 HOSE, cpld, 1/4 in. x 50 ft	1	167	331786 COVER, fan	1
47	117493 SCREW, mach, hex washer hd	4	168	136192 SCREW	1
49	115495 SCREW, mach, hex washer hd	2	169	136217 NUT	1
			170	17N291 PLUG, hole, 5/8"	2


* For motor brush kit order 287735

▲ Replacement Danger and Warning labels, tags, and cards are available at no cost.

Lo-Boy Sprayers

Lo-Boy Sprayers


Ref.	Torque
 1	140-160 in-lb (15.8 - 18.1 N•m)
 2	30-35 in-lb (3.4 - 4.0 N•m)
 3	30-35 in-lb (3.4-4.0 N•m)

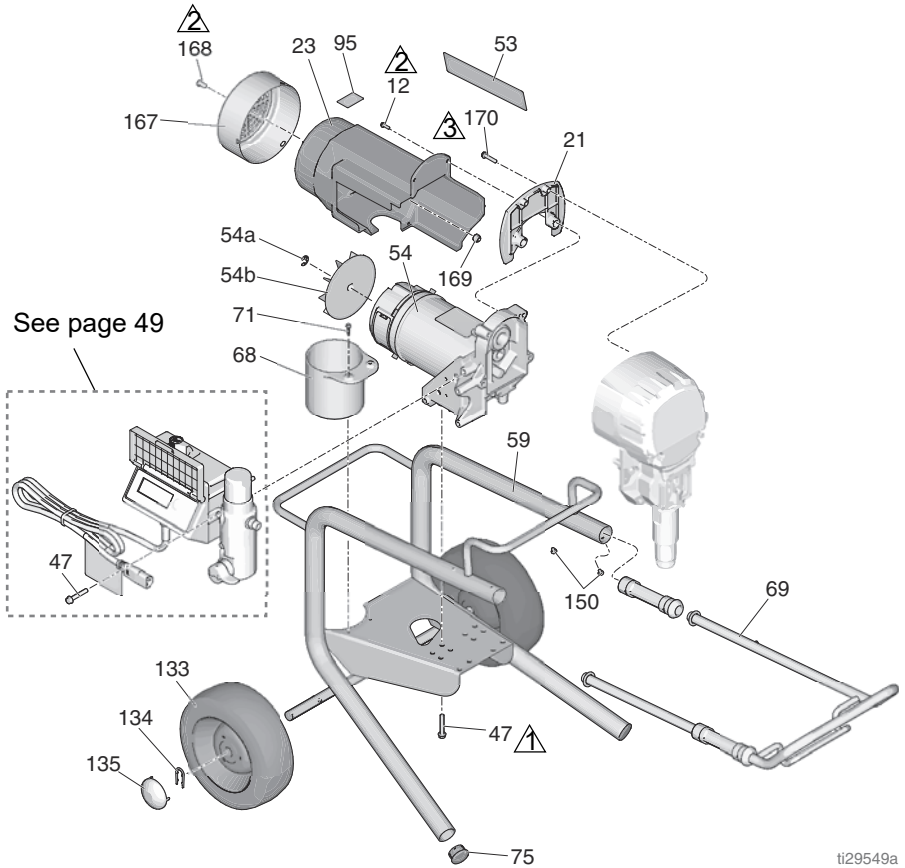

ti29549a

Lo-Boy Sprayers

Ref.	Torque
⚠1	140-160 in-lb (15.8 - 18.1 N•m)
⚠2	30-35 in-lb (3.4 - 4.0 N•m)
⚠3	Hammer tight
⚠4	25-30 ft-lb (33.9 - 40.7 N•m)

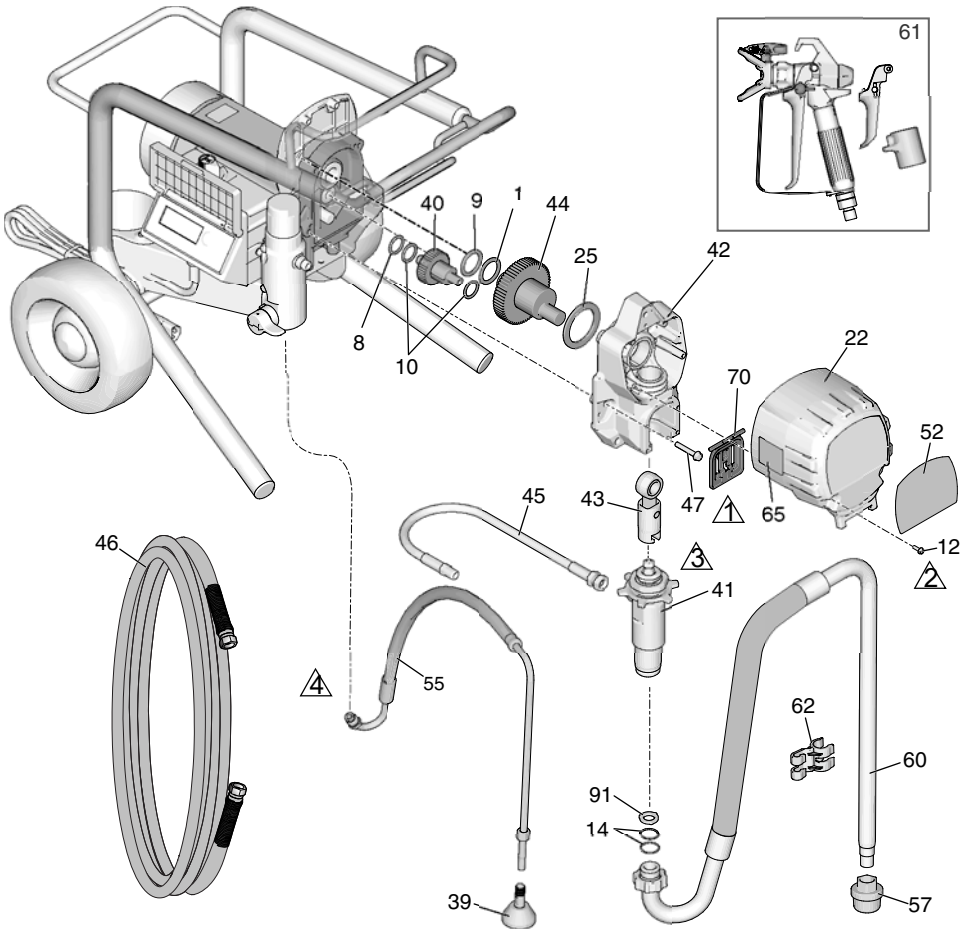

ti29550a

Lo-Boy Sprayers


Lo-Boy Sprayers Parts List


Ref. Part	Description	Qty.	Ref. Part	Description	Qty.
1	107434	BEARING, thrust	1	287060	MOTOR, 1230V <i>includes 54a, 54b</i>
8	116073	WASHER, thrust	1	54a	118716 RING, retaining
9	116074	WASHER, thrust	1	54b	248189 FAN, motor, <i>includes 54a</i>
10	116079	BEARING, thrust	2	55	246381 HOSE, drain, stand, <i>includes 39, 62</i>
12	117501	SCREW, mach, hex washer hd	5	57	187651 STRAINER, 3/4"-16
14	117559	O-ring	2	59	246250 FRAME, cart, lo
21	17M897	PLUG, shield, painted	1	60	17N275 KIT, hose, suction set <i>includes 14, 57, 91</i>
22	17R007	COVER, front, painted	1	61	17N201 GUN, spray
23	17N272	KIT, shield, motor, painted, <i>includes 167, 168, 169</i>	1	62	276888 CLIP, drain line
25	180131	BEARING, thrust	1	63▲	See page LABEL, danger (on 48 hose, not shown)
33	867670	FLUID, packing seal, TSO 8 oz. (not shown)	1	65▲	See page LABEL, warning 48
34▲	See page 48	CARD, medical alert (not shown)	1	68	15B870 CUP, suction/drain
39	241920	DEFLECTOR, threaded	1	69	287488 HANDLE, assembly, lo cart
40	249194	GEAR, reducer	1	70	17C484 COVER, pump rod
41	17M991	PUMP, displacement North America/Europe	1	71	122667 SCREW, drill, hex washer head
	17M990	Asia/ANZ/South America		75	107310 PLUG, tubing
42	24W817	HOUSING, drive, PC, <i>includes 47</i>	1	91	115099 WASHER, hose
43	24W640	ROD, connecting, PC	1	95	15Y118 LABEL, USA
44	24X020	GEAR, crankshaft, <i>includes 25</i>	1	133	195766 WHEEL, semi pneumatic
	24X020	555/5150 models		134	15B999 CLIP, retaining
	24X021	655/8150 models		135	104811 CAP, hub
45	15M671	HOSE, cpld	1	150	109032 SCREW, pan hd
46	HSE1450	HOSE, cpld, 1/4 in. x 50 ft	1	167	331786 COVER, fan
47	117493	SCREW, mach, hex washer hd	8	168	136192 SCREW
52	See page 48	LABEL, front	1	169	136217 NUT
53	See page 48	LABEL, side	1	170	17M806 SCREW, hex
54*	287015	MOTOR, 110V/120V <i>includes 54a, 54b</i>	1		

* For motor brush kit order 287735

▲ Replacement Danger and Warning labels, tags, and cards are available at no cost.





Hi-Boy Sprayers


Ref.	Torque
	30-35 in-lb (3.4 - 4.0 N•m)

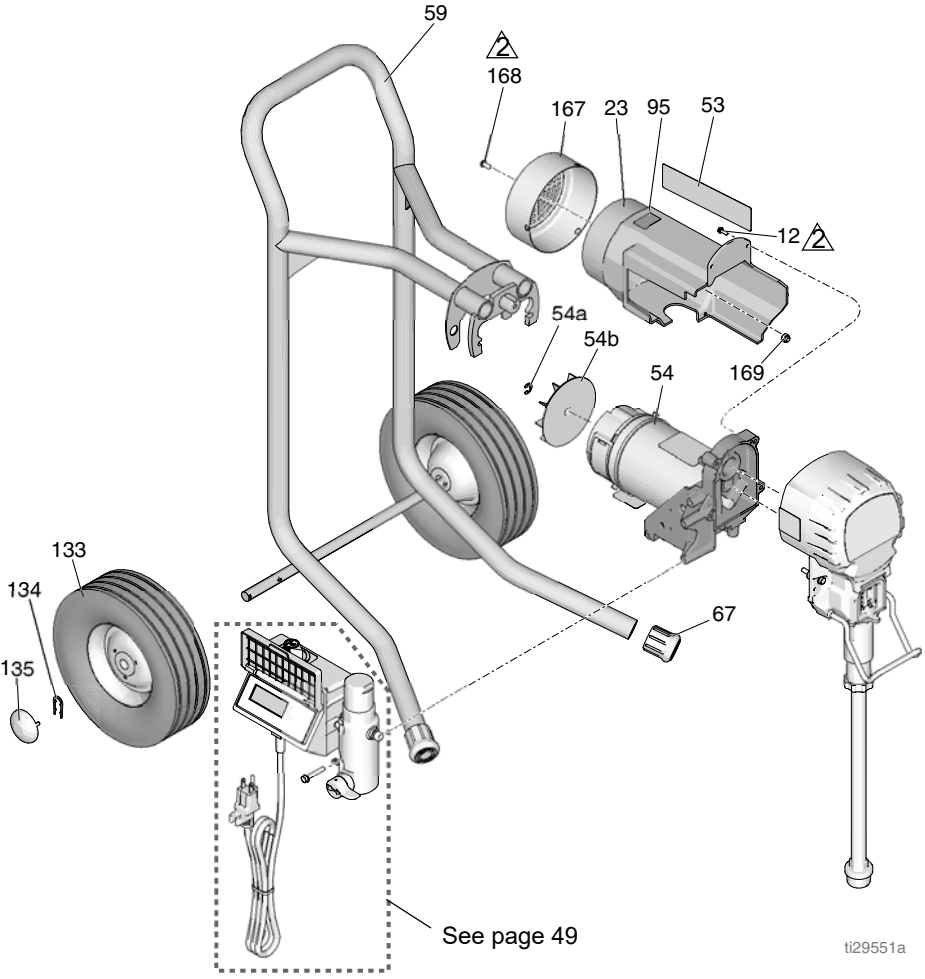

ti29551a

Hi-Boy Sprayers

Ref.	Torque
	140-160 in-lb (15.8 - 18.1 N•m)
	30-35 in-lb (3.4 - 4.0 N•m)
	Hammer tight
	25-30 ft-lb (33.8 - 40.6 N•m)

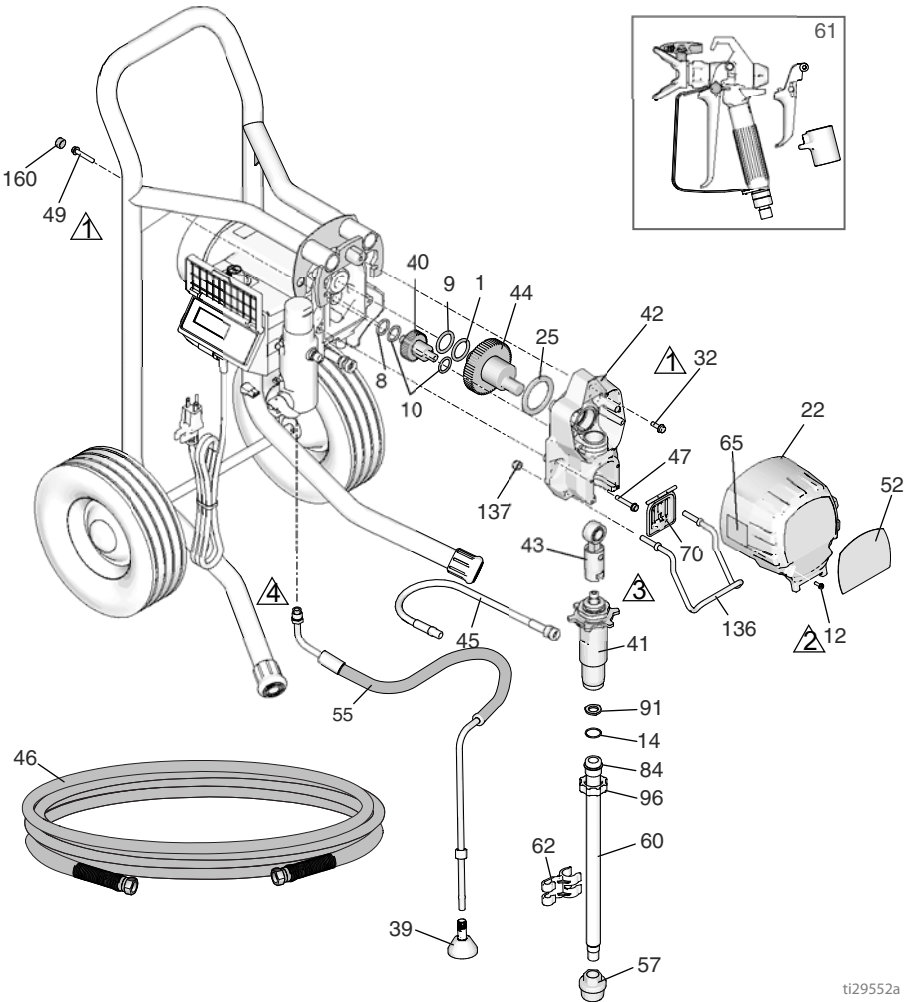

ti29552a

Hi-Boy Sprayers Parts List

Ref.	Part	Description	Qty.	Ref.	Part	Description	Qty.
1	107434	BEARING, thrust	1	54*		MOTOR, <i>includes 54a, 54b</i>	1
8	116073	WASHER, thrust	1		287015	120V	
9	116074	WASHER, thrust	1		287060	230V	
10	116079	BEARING, thrust	2	54a	118716	RING, retaining	1
12	117501	SCREW, mach, hex washer hd	5	54b	248189	FAN, motor, <i>includes 54a</i>	1
14	103413	O-ring	1	55	244240	HOSE, drain, <i>includes 39</i>	1
22	17R007	COVER, front, painted	1	57	187651	STRAINER, 3/4"-16	1
23	17N272	KIT, shield, motor, <i>includes 167, 168, 169</i>	1	59	17M446	FRAME, cart, hi	1
25	180131	BEARING, thrust	1	60	17C949	TUBE, suction, intake	1
32	113796	SCREW, flanged, hex	1	61	17N201	GUN, spray	1
34▲	See page 48	CARD, medical alert (not shown)	1	62	276888	CLIP, drain line	1
39	241920	DEFLECTOR, threaded	1	63▲	See page 48	LABEL, danger (on hose, not shown)	1
40	249194	GEAR, reducer	1	65▲	See page 48	LABEL, warning	1
41		PUMP, displacement, PC	1	67	331048	CAP, leg	2
	17M991	North America/Europe		70	17C484	COVER, pump rod	1
	17M990	Asia/ANZ/South America		84	15B652	WASHER, suction	1
42	17N294	HOUSING, drive, PC, <i>includes 47</i>	1	91	115099	WASHER, hose	1
43	24W640	ROD, connecting, PC	1	95	15Y118	LABEL, USA	1
44		GEAR, crankshaft, <i>includes 25</i>	1	96	15E813	NUT, jam	1
	24X020	555/5150 models		133	106062	WHEEL	2
	24X021	655/8150 models		134	15B999	CLIP, retaining	2
45	15M671	HOSE, cpld	1	135	104811	CAP, hub	2
46	HSE1450	HOSE, cpld, 1/4 in. x 50 ft	1	136	17C990	HANGER, pail	1
47	117493	SCREW, mach, hex washer hd	4	137	111040	NUT, lock, insert, nylon	2
49	115495	SCREW, mach, hex washer hd	2	160	17N291	PLUG, hole, 5/8"	2
52	See page 48	LABEL, front	1	167	331786	COVER, fan	
53	See page 48	LABEL, side	1	168	136192	SCREW	
				169	136217	NUT	
				867670	Fluid, packing seal, TSO 8oz. (not shown)		1

* For motor brush kit order 287735

▲ Replacement Danger and Warning labels, tags, and cards are available at no cost.


Accessories and Labels

Accessories and Labels

Sprayer Model	Ref. 34 Card, Medical Alert ▲	Ref. 52 Label, Front	Ref. 53 Label, Side	Ref. 63 Label, Danger ▲	Ref. 65 Label, Warning ▲
17M134 17M135 17M136	179660 #	17M688	17M697	15H085 #	195793 &
17M137 17M138 17M139	179660 #	17M688	17M699	15H085 #	195793 &
17M151 17M152	179660 #	17M708	17M709	15H085 #	195793 &
17M154	179660 #	17M710	17M711	15H085 #	195793 &
17M237 17M238 17M239	17A134 %	17M688	17M697	15H087 @	195792 %
17M240 17M241 17M242	17A134 %	17M688	17M699	15H087 @	195792 %
# – English, Spanish, French					
% – English, Chinese, Korean					
& – North America					
@ – Asia/ANZ					
▲ Replacement Danger and Warning labels, tags, and cards are available at no cost.					

Control Box

Ref.	Torque
①	140-160 in-lb (15.8 - 18.1 N•m)
②	30-35 in-lb (3.4 - 4.0 N•m)
⑤	20-25 in-lb (2.3 - 2.8 N•m)
⑥	37-43 ft-lb (50.2 - 58.3 N•m)
⑦	130-150 in-lb (14.7 - 16.9 N•m)

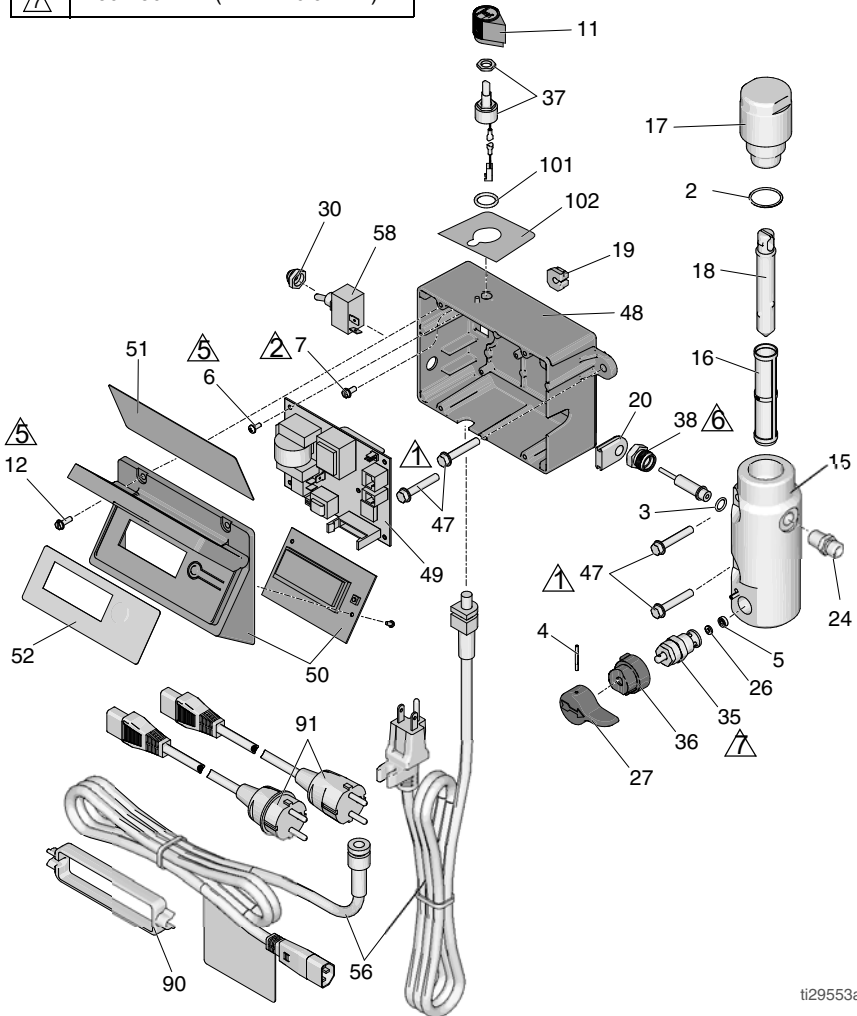

ti29553a


Control Box

Control Box Parts List

Ref. Part	Description	Qty.	Ref. Part	Description	Qty.		
2	117828	PACKING, o-ring	1	48	BOX, control	1	
3	111457	PACKING, o-ring	1	276868	555/5150 models		
4	111600	PIN, grooved	1	15D313	655/8150 models		
5	277364	GASKET, seat, valve	1	49	CONTROL, board	1	
6	115494	SCREW, mach, Phillips, pan hd	6	555/5150 models:			
7	115498	SCREW, mch, slot/hex, wash hd	1	246379	120V		
11	116167	KNOB, potentiometer	1	246380	230V		
12	117501	SCREW, mach, hex washer hd	4	655/8150 models:			
15	15G455	MANIFOLD, fluid	1	17N506	120V		
16		FILTER, fluid	1	24X751	230V		
	17P314	30 mesh		50	17N274	DIGITAL, display <i>includes 51, 52</i>	2
	17P315	60 mesh, original		51	17M694	LABEL, control	1
	17P316	100 mesh		52	17M698	LABEL, control, display	1
17	287902	CAP, manifold, <i>includes 18</i>	1	56		CORD, power	1
18	15B071	INSERT, filter	1	15J743	120V (555/5150 models)		
19	15B118	BUSHING, motor wire	1	15D029	120V (655/8150 models)		
20	15B120	GROMMET, transducer	1	253373	Multicord, 230V models		
24	162453	NIPPLE, (1/4 npsm x 1/4 npt)	1	58		SWITCH, toggle	1
26	15E022	SEAT, valve	1	195429	120V, US/Japan		
27	187625	HANDLE, valve, drain	1	117492	230V, Europe/Asia/ANZ/UK		
30	195428	BOOT, toggle	1	90	195551	RETAINER, plug, adapter (on select models)	1
35	239914	VALVE, drain, <i>includes</i> <i>5, 26</i>	1	91		CORD SET, adapter	1
36	224807	BASE, valve	1	242001	Europe		
37	17D888	POTENTIOMETER, assembly	1	242005	Australia		
38	243222	TRANSDUCER, pressure control, <i>includes 3</i>	1	101	158674	O-ring, packing	1
47	117493	SCREW, mach, hex washer hd	4	102	17P738	LABEL, control	1

Wiring Diagrams

120V

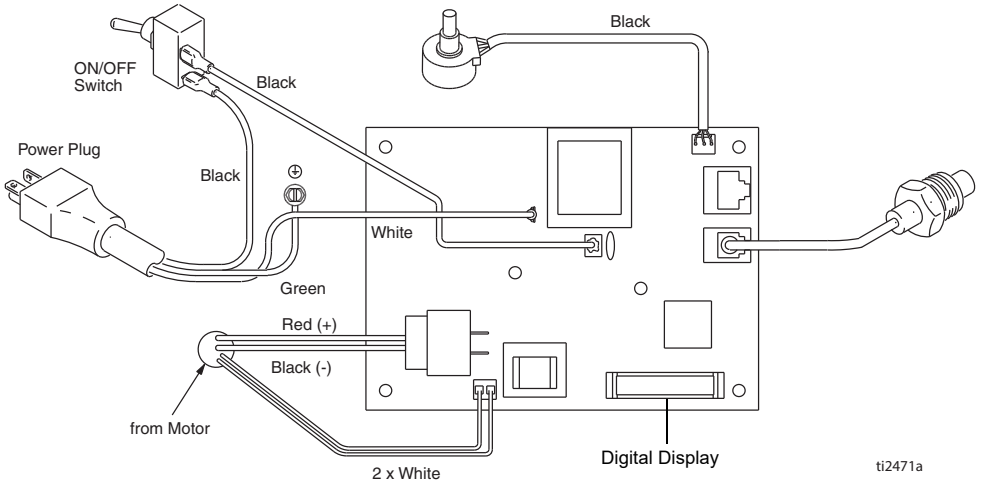


Wiring Diagrams

230V

NOTICE

Heat from inductor coil of filter board may destroy wire insulation that comes in contact with it. Exposed wires could cause shorts and component damage. Bundle and tie loose wires so none lay in contact with inductor coil on the filter board.

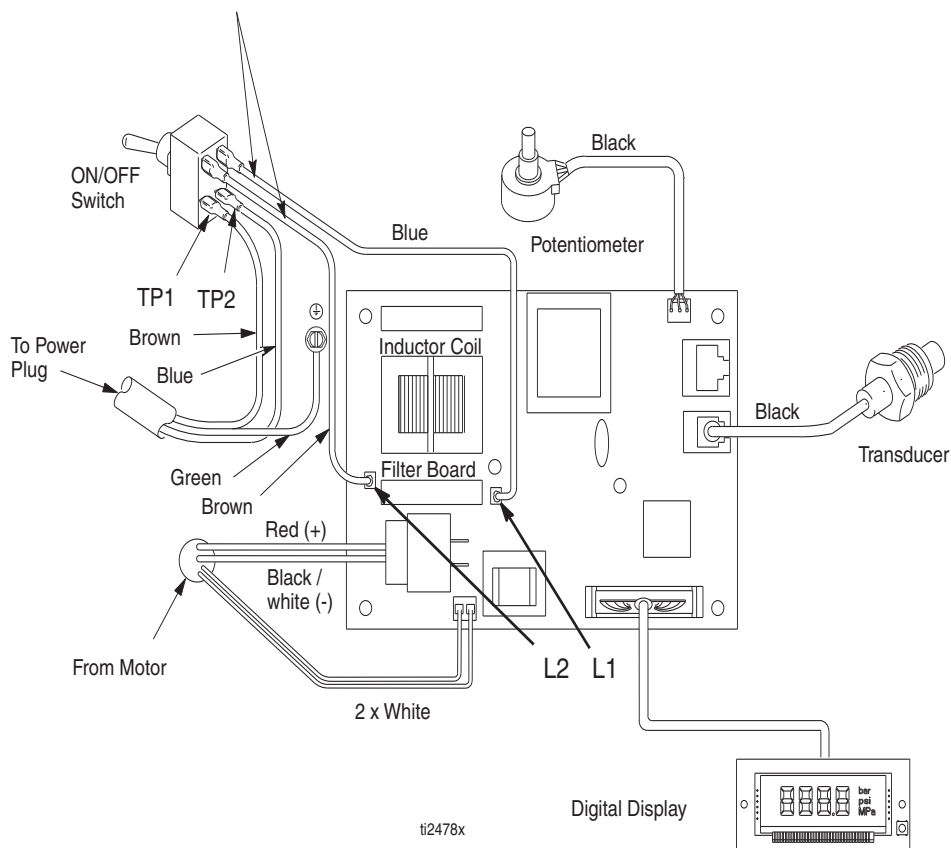

Technical Specifications

555/5150, 655/8150		
	US	Metric
Sprayer		
Maximum fluid working pressure.	3300 psi	228 bar, 22.8 MPa
Maximum Delivery (555/5150)	0.54 gpm	2.0 lpm
Maximum Tip Size (555/5150)	0.023	0.023
Maximum Delivery (655/8150)	0.60 gpm	2.3 lpm
Maximum Tip Size (655/8150)	0.025	0.025
Fluid Outlet npsm	1/4 in.	1/4 in.
Cycles (555/5105)	700 per gallon	185 per liter
Cycles (655/8150)	581 per gallon	154 per liter
Generator Minimum	3000 W	3000 W
120V, A, Hz (555/5150)	1Ø, 13, 50/60	
120V, A, Hz (655/8150)	1Ø, 15, 50/60	
220–240V, A, Hz	1Ø, 7, 50/60	
Dimensions		
Height		
Stand	17.8 in.	45.1 cm
Lo-Boy	22.5 in.	57.2 cm
Hi-Boy	36.5 in.	92.7 cm
Length		
Stand	17.0 in.	43.2 cm
Lo-Boy	26.0 in.	66.0 cm
Hi-Boy	23.0 in.	58.4 cm
Width		
Stand	14.0 in.	35.6 cm
Lo-Boy	20.0 in.	50.8 cm
Hi-Boy	21.0 in.	53.3 cm
Weight		
Stand	51.0 lb.	23.1 kg
Lo-Boy	66.0 lb.	29.9 kg
Hi-Boy	69.0 lb.	31.3 kg
Noise** (dBa) @ 70 psi (0.48 MPa, 4.8 bar)		
Sound pressure	90 dBa	
Sound power	100 dBa	
Materials of Construction		
Wetted materials on all models	zinc- and nickel-plated carbon steel, nylon, stainless steel, PTFE, Acetal, leather, UHMWPE, aluminum, tungsten carbide, polyethylene, fluoroelastomer, urethane	

Technical Specifications

555/5150, 655/8150

US

Metric

Notes

* *Startup pressures and displacement per cycle may vary based on suction condition, discharge head, air pressure, and fluid type.*

** *Sound pressure measured 3 feet (1 meter) from equipment.*

Sound power measured per ISO-3744.

Airlessco Standard Warranty

Airlessco warrants all equipment referenced in this document which is manufactured by Airlessco and bearing its name to be free from defects in material and workmanship on the date of sale to the original purchaser for use. With the exception of any special, extended, or limited warranty published by Airlessco, Airlessco will, for a period of twelve months from the date of sale, repair or replace any part of the equipment determined by Airlessco to be defective. This warranty applies only when the equipment is installed, operated and maintained in accordance with Airlessco's written recommendations.

This warranty does not cover, and Airlessco shall not be liable for general wear and tear, or any malfunction, damage or wear caused by faulty installation, misapplication, abrasion, corrosion, inadequate or improper maintenance, negligence, accident, tampering, or substitution of non-Airlessco component parts. Nor shall Airlessco be liable for malfunction, damage or wear caused by the incompatibility of Airlessco equipment with structures, accessories, equipment or materials not supplied by Airlessco, or the improper design, manufacture, installation, operation or maintenance of structures, accessories, equipment or materials not supplied by Airlessco.

This warranty is conditioned upon the prepaid return of the equipment claimed to be defective to an authorized Airlessco distributor for verification of the claimed defect. If the claimed defect is verified, Airlessco will repair or replace free of charge any defective parts. The equipment will be returned to the original purchaser transportation prepaid. If inspection of the equipment does not disclose any defect in material or workmanship, repairs will be made at a reasonable charge, which charges may include the costs of parts, labor, and transportation.

THIS WARRANTY IS EXCLUSIVE, AND IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.

Airlessco's sole obligation and buyer's sole remedy for any breach of warranty shall be as set forth above. The buyer agrees that no other remedy (including, but not limited to, incidental or consequential damages for lost profits, lost sales, injury to person or property, or any other incidental or consequential loss) shall be available. Any action for breach of warranty must be brought within two (2) years of the date of sale.

AIRLESSCO MAKES NO WARRANTY, AND DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IN CONNECTION WITH ACCESSORIES, EQUIPMENT, MATERIALS OR COMPONENTS SOLD BUT NOT MANUFACTURED BY Airlessco. These items sold, but not manufactured by Airlessco (such as electric motors, switches, hose, etc.), are subject to the warranty, if any, of their manufacturer. Airlessco will provide purchaser with reasonable assistance in making any claim for breach of these warranties.

In no event will Airlessco be liable for indirect, incidental, special or consequential damages resulting from Airlessco supplying equipment hereunder, or the furnishing, performance, or use of any products or other goods sold hereto, whether due to a breach of contract, breach of warranty, the negligence of Airlessco, or otherwise.

FOR AIRLESSCO CANADA CUSTOMERS

The Parties acknowledge that they have required that the present document, as well as all documents, notices and legal proceedings entered into, given or instituted pursuant hereto or relating directly or indirectly hereto, be drawn up in English. Les parties reconnaissent avoir convenu que la rédaction du présente document sera en Anglais, ainsi que tous documents, avis et procédures judiciaires exécutés, donnés ou intentés, à la suite de ou en rapport, directement ou indirectement, avec les procédures concernées.

Airlessco Information

For the latest information about AIRLESSCO products, visit www.airlessco.com.

For patent information, see www.graco.com/patents.

TO PLACE AN ORDER OR FOR SERVICE, contact your Airlessco distributor,
or call 1-800-223-8213 to identify the nearest distributor.

All written and visual data contained in this document reflects the latest product information available at the time of publication.

Airlessco reserves the right to make changes at any time without notice.

Original Instructions. This manual contains English. MM 3A4187

GRACO INC. AND SUBSIDIARIES • P.O. BOX 1441 • MINNEAPOLIS MN 55440-1441 • USA

Copyright 2016, Graco Inc. All Graco manufacturing locations are registered to ISO 9001.

Revision C, November 2018