

ProMix[®] 2KS

312777J

Plural Component Proportioner

EN

Manual system for proportional mixing of plural component coatings.
For professional use only.


For use in explosive atmospheres (except the EasyKey).



Important Safety Instructions

Read all warnings and instructions in this manual. Save these instructions.

See page 4 for model information, including maximum working pressure. Equipment approval labels are on page 3. Some components shown are not included with all systems.

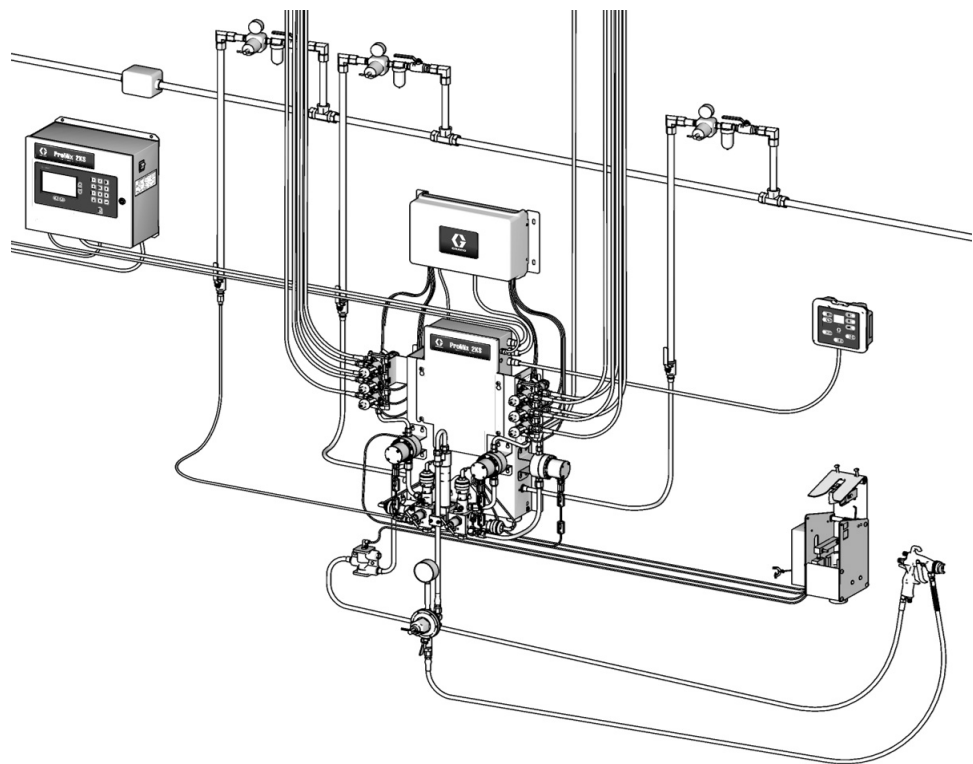

T112504a



Contents

| | | | |
|---|-----------|--|-----------|
| Related Manuals | 3 | Schematic Diagrams | 30 |
| Equipment Approvals | 3 | System Pneumatic Schematic | 30 |
| System Configuration and Part Numbers | 4 | EasyKey Electrical Schematic | 31 |
| Configurator Key | 4 | System Electrical Schematic | 32 |
| Standard Features | 6 | Tubing Schematic | 34 |
| Accessories | 6 | Service | 36 |
| 2KS Accessories | 6 | Before Servicing | 36 |
| 2KS Acid Compatible Accessories | 6 | After Servicing | 36 |
| Warnings | 7 | Servicing EasyKey | 37 |
| Important Two-Component Material Information | 9 | Replacing Air Filter Element | 41 |
| Isocyanate Conditions | 9 | Wall Mount Fluid Station | 42 |
| Material Self-ignition | 9 | Servicing Flow Meters | 46 |
| Keep Components A and B Separate | 9 | Servicing Fluid Manifold | 47 |
| Moisture Sensitivity of Isocyanates | 10 | Servicing Color Change Module, Color/Catalyst Valves, and Dump Valves | 47 |
| Changing Materials | 10 | Parts | 48 |
| Important Acid Catalyst Information | 11 | Configurator Key | 48 |
| Acid Catalyst Conditions | 11 | ProMix 2KS Manual System | 50 |
| Moisture Sensitivity of Acid Catalysts | 11 | EasyKey Controls | 52 |
| Grounding | 12 | Available Cables | 53 |
| Check Resistance | 12 | Wall Mount Fluid Station | 54 |
| Pressure Relief Procedure | 12 | Color Change Accessory Kits | 56 |
| Troubleshooting | 15 | Technical Data | 59 |
| Alarm Codes | 15 | Graco Standard Warranty | 60 |
| Solenoid Troubleshooting | 16 | Graco Information | 60 |
| Fluid Manifold Troubleshooting | 18 | | |
| EasyKey Barrier Board Diagnostics | 19 | | |
| EasyKey Display Board Diagnostics | 20 | | |
| Fluid Station Control Board Diagnostics | 23 | | |
| Booth Control Troubleshooting | 26 | | |
| Color Change Board Diagnostics | 28 | | |

Related Manuals

Component Manuals in English


| Manual | Description |
|--------|--|
| 312775 | ProMix 2KS Manual System Installation |
| 312776 | ProMix 2KS Manual System Operation |
| 312781 | Fluid Mix Manifold |
| 312782 | Dispense Valve |
| 312783 | Color Change Valve Stacks |
| 312787 | Color Change Module Kit |
| 312784 | Gun Flush Box Kits |
| 310745 | Gun Air Shutoff Kit |
| 312786 | Dump Valve and Third Purge Valve Kits |
| 312785 | Network Communication Kits |
| 308778 | G3000/G3000HR Flow Meter |
| 313599 | Coriolis Flow Meter |
| 313290 | Floor Stand Kit |
| 313542 | Beacon Kit |
| 313386 | Basic Web Interface/Advanced Web Interface |
| 406799 | 15V256 Automatic System Upgrade Kit |
| 406800 | 15V825 Discrete I/O Board Kit |

Equipment Approvals


Equipment approvals appear on the following labels which are attached to the Fluid Station and EasyKey™. See FIG. 1 on page 5 for label locations.

EasyKey and Fluid Station Label

ATEX Certificate is listed here

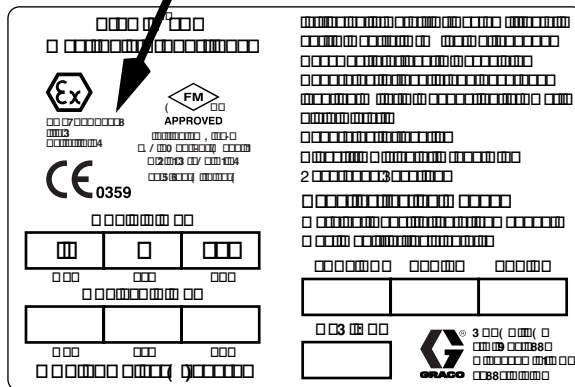


Fluid Station Label

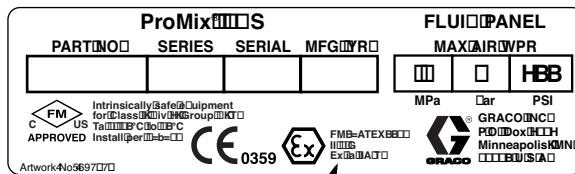

T113581a

ATEX Certificate is listed here

EasyKey Label

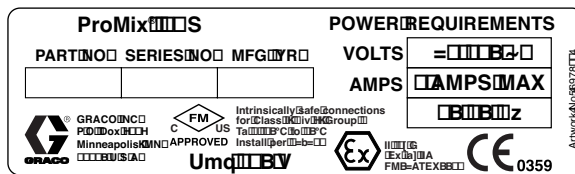

T113582a

ATEX Certificate is listed here

System Configuration and Part Numbers

Configurator Key

The configured part number for your equipment is printed on the equipment identification labels. See Fig. 1 for location of the identification labels. The part number includes one digit from each of the following six categories, depending on the configuration of your system.

| Manual System | Control and Display | A and B Meter | Color Valves | Catalyst Valves | Applicator Handling |
|-----------------|------------------------------|---|---|--|--|
| M | D = EasyKey with LCD Display | 0 = No Meters 1 = G3000 (A and B) 2 = G3000HR (A and B) 3 = 1/8 in. Coriolis (A) and G3000 (B) 4 = G3000 (A) and 1/8 in. Coriolis (B) 5 = 1/8 in. Coriolis (A) and G3000HR (B) 6 = G3000HR (A) and 1/8 in. Coriolis (B) 7 = 1/8 in. Coriolis (A and B) | 0 = No Valves (single color) 1 = Two Valves (low pressure) 2 = Four Valves (low pressure) 3 = Seven Valves (low pressure) 4 = Twelve Valves (low pressure) 5 = Two Valves (high pressure) 6 = Four Valves (high pressure) | 0 = No Valves (single catalyst) 1 = Two Valves (low pressure) 2 = Four Valves (low pressure) 3 = Two Valves (high pressure) | 1 = One Air Flow Switch Kit 2 = Two Air Flow Switch Kits 3 = One Gun Flush Box Kit 4 = Two Gun Flush Box Kits |
| M (acid models) | D = EasyKey with LCD Display | 8 = G3000 (A) and G3000A (B) | 0 = No Valves (no color; need to order acid kit 26A096-26A100; see page 6) | 0 = No Valves (single catalyst) | 1 = One Air Flow Switch Kit 2 = Two Air Flow Switch Kits 3 = One Gun Flush Box Kit 4 = Two Gun Flush Box Kits |

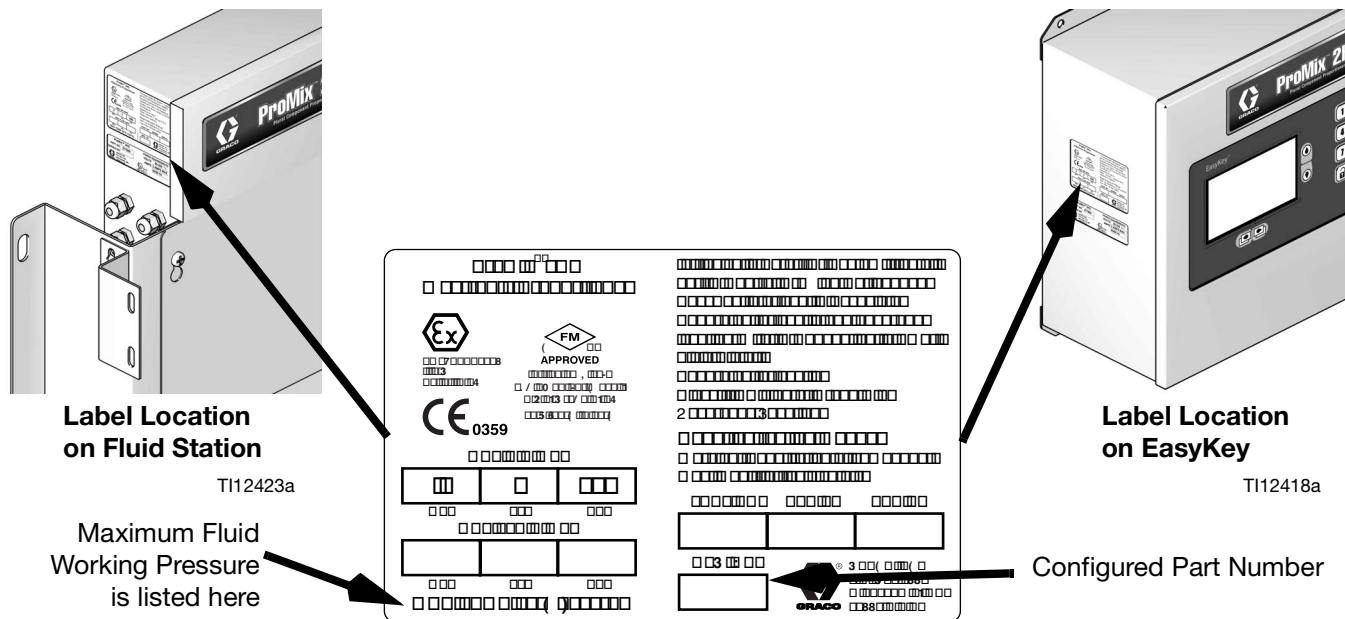


FIG. 1: Identification Label

| Hazardous Location Approval | |
|---|--|
| Models using a G3000, G3000HR, G3000A, or intrinsically safe Coriolis meter for both A and B meters are approved for installation in a Hazardous Location - Class I, Div I, Group D, T3 or Zone I Group IIA T3. | |
| Maximum Working Pressure | |
| Maximum working pressure rating is dependent on the fluid component options selected. The pressure rating is based on the rating of the lowest rated fluid manifold component. Refer to the component pressure ratings below. <i>Example:</i> Model MD2531 has a maximum working pressure of 3000 psi (21 MPa, 210 bar). | |
| Check the identification label on the EasyKey or fluid station for the system maximum working pressure. See Fig. 1. | |
| ProMix Fluid Manifold Components Maximum Working Pressure | |
| Base System (no meters [option 0], no color/catalyst change [option 0]) | 4000 psi (27.58 MPa, 275.8 bar) |
| Meter Option 1 and 2 (G3000 or G3000HR). | 4000 psi (27.58 MPa, 275.8 bar) |
| Meter Option 3, 4, 5, 6, and 7 (one or two Coriolis Meters). | 2300 psi (15.86 MPa, 158.6 bar) |
| Meter Option 8 (G3000 and G3000A). | 4000 psi (27.58 MPa, 275.8 bar) |
| Color Change Option 1, 2, 3 and 4 and Catalyst Change Option 1 and 2 (low pressure valves) | 300 psi (2.07 MPa, 20.6 bar) |
| Color Change Option 5 and 6 and Catalyst Change Option 3 (high pressure valves). | 3000 psi (21 MPa, 210 bar) |
| Flow Meter Fluid Flow Rate Range | |
| G3000 and G3000A | 75-3800 cc/min. (0.02-1.0 gal./min.) |
| G3000HR | 38-1900 cc/min. (0.01-0.50 gal./min.) |
| Coriolis Meter | 20-3800 cc/min. (0.005-1.00 gal./min.) |
| S3000 Solvent Meter (accessory). | 38-1900 cc/min. (0.01-0.50 gal./min.) |

Standard Features

| Feature |
|---|
| EasyKey with LCD |
| Fiber Optic and Power Cables, 50 ft (15.25 m) |
| Wall Mount Fluid Station, 50 cc Integrator and Static Mixer |
| B Side Dump Valve, if catalyst valve(s) is selected |
| Booth Control |
| Basic Web Interface |

Accessories

2KS Accessories

| Accessory |
|---|
| Gun Flush Box Gun Insert Selection |
| 15V354 Third Purge Valve Kit |
| 15V536 Solvent Flow Switch Kit |
| 15V213 Power Cable, 100 ft (30.5 m) |
| 15G710 Fiber Optic Cable, 100 ft (30.5 m) |
| 15U955 Injection Kit for Dynamic Dosing |
| 15V034 10 cc Integrator Kit |
| 15V033 25 cc Integrator Kit |
| 15V021 50 cc Integrator Kit |
| 24B618 100 cc Integrator Kit |
| 15W034 Strobe Light Alarm Indicator Kit |
| 15V337 Advanced Web Interface |
| 15V256 Automatic Mode Upgrade Kit |
| 16D329 S3000 Solvent Flow Meter Kit |
| 15V825 Discrete I/O Integration Board Kit |

2KS Acid Compatible Accessories






Intended for use with acid catalyst materials.

| Accessory |
|--|
| 26A096 No Color /1 Catalyst Change Kit |
| 26A097 2 Color/1 Catalyst Change Kit |
| 26A098 4 Color/1 Catalyst Change Kit |
| 26A099 7 Color/1 Catalyst Change Kit |
| 26A100 12 Color/1 Catalyst Change Kit |




NOTE: This is not a complete list of available accessories and kits. Refer to the Graco website for more information about accessories available for use with this product.

Warnings

The following warnings are for the setup, use, grounding, maintenance, and repair of this equipment. The exclamation point symbol alerts you to a general warning and the hazard symbols refer to procedure-specific risks. When these symbols appear in the body of this manual, refer back to these Warnings. Product-specific hazard symbols and warnings not covered in this section may appear throughout the body of this manual where applicable.

|  WARNING | |
|--|---|
|  | <p>FIRE AND EXPLOSION HAZARD</p> <p>Flammable fumes, such as solvent and paint fumes, in work area can ignite or explode. To help prevent fire and explosion:</p> <ul style="list-style-type: none"> • Use equipment only in well ventilated area. • Eliminate all ignition sources; such as pilot lights, cigarettes, portable electric lamps, and plastic drop cloths (potential static arc). • Keep work area free of debris, including solvent, rags and gasoline. • Do not plug or unplug power cords, or turn power or light switches on or off when flammable fumes are present. • Ground all equipment in the work area. See Grounding instructions. • Use only grounded hoses. • Hold gun firmly to side of grounded pail when triggering into pail. • If there is static sparking or you feel a shock, stop operation immediately. Do not use equipment until you identify and correct the problem. • Keep a working fire extinguisher in the work area. |
|  | <p>ELECTRIC SHOCK HAZARD</p> <p>This equipment must be grounded. Improper grounding, setup, or usage of the system can cause electric shock.</p> <ul style="list-style-type: none"> • Turn off and disconnect power at main switch before disconnecting any cables and before servicing equipment. • Connect only to grounded power source. • All electrical wiring must be done by a qualified electrician and comply with all local codes and regulations. |
|  | <p>INTRINSIC SAFETY</p> <p>Intrinsically safe equipment that is installed improperly or connected to non-intrinsically safe equipment will create a hazardous condition and can cause fire, explosion, or electric shock. Follow local regulations and the following safety requirements.</p> <ul style="list-style-type: none"> • Only models with a G3000, G250, G3000HR, G250HR, G3000A, or intrinsically safe Coriolis meter are approved for installation in a Hazardous Location - Class I, Div I, Group D, T3 or Zone I Group IIA T3. • Do not install equipment approved only for a non-hazardous location in a hazardous area. See the ID label for the intrinsic safety rating of your model. • Do not substitute or modify system components as this may impair intrinsic safety. |
|  | <p>SKIN INJECTION HAZARD</p> <p>High-pressure fluid from gun, hose leaks, or ruptured components will pierce skin. This may look like just a cut, but it is a serious injury that can result in amputation. Get immediate surgical treatment.</p> <ul style="list-style-type: none"> • Tighten all fluid connections before operating the equipment. • Do not point gun at anyone or at any part of the body. • Do not put your hand over the spray tip. • Do not stop or deflect leaks with your hand, body, glove, or rag. • Follow Pressure Relief Procedure in this manual, when you stop spraying and before cleaning, checking, or servicing equipment. |





 **WARNING**

| | |
|---|---|
|  | <p>EQUIPMENT MISUSE HAZARD</p> <p>Misuse can cause death or serious injury.</p> <ul style="list-style-type: none"> • Do not operate the unit when fatigued or under the influence of drugs or alcohol. • Do not exceed the maximum working pressure or temperature rating of the lowest rated system component. See Technical Data in all equipment manuals. • Use fluids and solvents that are compatible with equipment wetted parts. See Technical Data in all equipment manuals. Read fluid and solvent manufacturer’s warnings. For complete information about your material, request MSDS forms from distributor or retailer. • Check equipment daily. Repair or replace worn or damaged parts immediately with genuine manufacturer’s replacement parts only. • Do not alter or modify equipment. • Use equipment only for its intended purpose. Call your distributor for information. • Route hoses and cables away from traffic areas, sharp edges, moving parts, and hot surfaces. • Do not kink or over bend hoses or use hoses to pull equipment. • Keep children and animals away from work area. • Comply with all applicable safety regulations. |
|  | <p>TOXIC FLUID OR FUMES HAZARD</p> <p>Toxic fluids or fumes can cause serious injury or death if splashed in the eyes or on skin, inhaled, or swallowed.</p> <ul style="list-style-type: none"> • Read MSDS’s to know the specific hazards of the fluids you are using. • Store hazardous fluid in approved containers, and dispose of it according to applicable guidelines. • Always wear chemically impermeable gloves when spraying or cleaning equipment. |
|  | <p>PERSONAL PROTECTIVE EQUIPMENT</p> <p>You must wear appropriate protective equipment when operating, servicing, or when in the operating area of the equipment to help protect you from serious injury, including eye injury, inhalation of toxic fumes, burns, and hearing loss. This equipment includes but is not limited to:</p> <ul style="list-style-type: none"> • Protective eyewear • Clothing and respirator as recommended by the fluid and solvent manufacturer • Gloves • Hearing protection |

Important Two-Component Material Information

Isocyanates (ISO) are catalysts used in two component materials.



Isocyanate Conditions

| | | | | | | |
|---|---|---|---|--|--|--|
|  |  |  |  | | | |
|---|---|---|---|--|--|--|

Spraying or dispensing materials that contain isocyanates creates potentially harmful mists, vapors, and atomized particulates.




- Read and understand the fluid manufacturer’s warnings and Safety Data Sheet (SDS) to know specific hazards and precautions related to isocyanates.
- Use of isocyanates involves potentially hazardous procedures. Do not spray with this equipment unless you are trained, qualified, and have read and understood the information in this manual and in the fluid manufacturer’s application instructions and SDS.
- Use of incorrectly maintained or mis-adjusted equipment may result in improperly cured material. Equipment must be carefully maintained and adjusted according to instructions in the manual.
- To prevent inhalation of isocyanate mists, vapors, and atomized particulates, everyone in the work area must wear appropriate respiratory protection. Always wear a properly fitting respirator, which may include a supplied-air respirator. Ventilate the work area according to instructions in the fluid manufacturer’s SDS.
- Avoid all skin contact with isocyanates. Everyone in the work area must wear chemically impermeable gloves, protective clothing and foot coverings as recommended by the fluid manufacturer and local regulatory authority. Follow all fluid manufacturer recommendations, including those regarding handling of contaminated clothing. After spraying, wash hands and face before eating or drinking.

Material Self-ignition

| | | | | | | |
|---|--|--|--|--|--|--|
|  |  | | | | | |
|---|--|--|--|--|--|--|

Some materials may become self-igniting if applied too thick. Read material manufacturer’s warnings and Safety Data Sheet (SDS).

Keep Components A and B Separate

| | | | | | | |
|---|--|---|--|--|--|--|
|  |  |  | | | | |
|---|--|---|--|--|--|--|

Cross-contamination can result in cured material in fluid lines which could cause serious injury or damage equipment. To prevent cross-contamination:

- **Never** interchange component A and component B wetted parts.
- Never use solvent on one side if it has been contaminated from the other side.

Moisture Sensitivity of Isocyanates

Exposure to moisture (such as humidity) will cause ISO to partially cure; forming small, hard, abrasive crystals, which become suspended in the fluid. Eventually a film will form on the surface and the ISO will begin to gel, increasing in viscosity.

NOTICE

Partially cured ISO will reduce performance and the life of all wetted parts.

- Always use a sealed container with a desiccant dryer in the vent, or a nitrogen atmosphere. **Never** store ISO in an open container.
- Keep the ISO pump wet cup or reservoir (if installed) filled with appropriate lubricant. The lubricant creates a barrier between the ISO and the atmosphere.
- Use only moisture-proof hoses compatible with ISO.
- Never use reclaimed solvents, which may contain moisture. Always keep solvent containers closed when not in use.
- Always lubricate threaded parts with an appropriate lubricant when reassembling.

NOTE: The amount of film formation and rate of crystallization varies depending on the blend of ISO, the humidity, and the temperature.

Changing Materials

NOTICE

Changing the material types used in your equipment requires special attention to avoid equipment damage and downtime.

- When changing materials, flush the equipment multiple times to ensure it is thoroughly clean.
- Always clean the fluid inlet strainers after flushing.
- Check with your material manufacturer for chemical compatibility.
- When changing between epoxies and urethanes or polyureas, disassemble and clean all fluid components and change hoses. Epoxies often have amines on the B (hardener) side. Polyureas often have aminies on the A (resin) side.

Important Acid Catalyst Information

The 2KS Plural Component Proportioner is designed for acid catalysts (“acid”) currently used in two-component, wood-finishing materials. Current acids in use (with pH levels as low as 1) are more corrosive than earlier acids. More corrosion-resistant wetted materials of construction are required, and must be used without substitution, to withstand the increased corrosive properties of these acids.

Acid Catalyst Conditions



Acid is flammable, and spraying or dispensing acid creates potentially harmful mists, vapors, and atomized particulates. To help prevent fire and explosion and serious injury:

- Read and understand the fluid manufacturer’s warnings and Safety Data Sheet (SDS) to know specific hazards and precautions related to the acid.
- Use only genuine, manufacturer’s recommended acid-compatible parts in the catalyst system (hoses, fittings, etc). A reaction may occur between any substituted parts and the acid.
- To prevent inhalation of acid mists, vapors, and atomized particulates, everyone in the work area must wear appropriate respiratory protection. Always wear a properly fitting respirator, which may include a supplied-air respirator. Ventilate the work area according to instructions in the acid manufacturer’s SDS.
- Avoid all skin contact with acid. Everyone in the work area must wear chemically impermeable gloves, protective clothing, foot coverings, aprons, and face shields as recommended by the acid manufacturer and local regulatory authority. Follow all fluid manufacturer recommendations, including those regarding handling of contaminated clothing. Wash hands and face before eating or drinking.
- Regularly inspect equipment for potential leaks and remove spills promptly and completely to avoid direct contact or inhalation of the acid and its vapors.
- Keep acid away from heat, sparks, and open flames. Do not smoke in the work area. Eliminate all ignition sources.
- Store acid in the original container in a cool, dry, and well-ventilated area away from direct sunlight and away from other chemicals in accordance with acid manufacturer’s recommendations. To avoid corrosion of containers, do not store acid in substitute containers. Reseal the original container to prevent vapors from contaminating the storage space and surrounding facility.

Moisture Sensitivity of Acid Catalysts





Acid catalysts can be sensitive to atmospheric moisture and other contaminants. It is recommended the catalyst pump and valve seal areas exposed to atmosphere are flooded with ISO oil, TSL, or other compatible material to prevent acid build-up and premature seal damage and failure.

NOTICE


Acid build-up will damage the valve seals and reduce the performance and life of the catalyst pump. To prevent exposing acid to moisture:

- Always use a sealed container with a desiccant dryer in the vent, or a nitrogen atmosphere. Never store acids in an open container.
- Keep the catalyst pump and the valve seals filled with the appropriate lubricant. The lubricant creates a barrier between the acid and the atmosphere.
- Use only moisture-proof hoses compatible with acids.
- Always lubricate threaded parts with an appropriate lubricant when reassembling.

Grounding

| | | | | | | |
|--|---|---|---|--|--|--|
|  |  |  |  | | | |
| Your system must be grounded. See the Grounding instructions in your ProMix 2KS Installation manual. | | | | | | |





Check Resistance

| | | | | | | |
|--|---|---|---|--|--|--|
|  |  |  |  | | | |
| To ensure proper grounding, resistance between Pro-Mix components and true earth ground must be less than 1 ohm. Read Warnings , page 7. | | | | | | |

Have a qualified electrician check resistance between each ProMix component and true earth ground. If resistance is greater than 1 ohm, a different ground site may be required. Do not operate the system until the problem is corrected.

Pressure Relief Procedure

NOTE: The following procedures relieve all fluid and air pressure in the ProMix 2KS system. Use the procedure appropriate for your system configuration.

| | | | | | | |
|---|---|--|---|--|--|--|
|  |  |  |  | | | |
| Relieve pressure when you stop spraying, before changing spray tips, and before cleaning, checking, or servicing equipment. | | | | | | |

Single Color Systems

1. While in Mix mode (gun triggered), shut off the A and B fluid supply pumps/pressure pots. Close all fluid shutoff valves at the pump outlets.
2. With the gun triggered, push the manual override on the A and B dose valve solenoids to relieve pressure. See FIG. 4.

NOTE: If a Dose Time alarm (E-7, E-8) occurs, clear the alarm.
3. Do a complete system purge, following the instructions under **Purging Using Recipe 0** in your system Operation manual.
4. Shut off the fluid supply to the solvent purge valve (SPV) and the air supply to the air purge valve (APV), FIG. 3.
5. With the gun triggered, push the manual override on the A and B purge valve solenoids to relieve air and solvent pressure. See FIG. 4. Verify that solvent pressure is reduced to 0.

NOTE: If a Purge Volume alarm (E-11) occurs, clear the alarm.

Systems with Color Change and without Dump Valves


NOTE: This procedure relieves pressure through the sampling valve.

1. Complete all steps under **Single Color Systems**, page 12.
2. Close the A side shutoff valve (SVA), FIG. 3. Open the A side sampling valve (RVA).
3. Direct the A side sampling tube into a waste container.
4. See FIG. 2. Open the color change module. Using the solenoid identification labels as a guide, press and hold the override button on each color solenoid until flow from the sampling valve stops.
5. Press and hold the solvent solenoid override until clean solvent comes from the sampling valve, then release.
6. Shutoff the solvent supply to the color change stack solvent valve.
7. Press and hold the solvent solenoid override until solvent flow from the sampling valve stops.
8. Open the A side shutoff valve (SVA), FIG. 3. Close the A side sampling valve (RVA).

Systems with Color/Catalyst Change and Dump Valves


NOTE: This procedure relieves pressure through the dump valves.

1. Complete all steps under **Single Color Systems**, page 12.
2. Shut off all color and catalyst supplies to the valve stacks.
3. Press and hold the dump valve A solenoid override, FIG. 4.
4. See FIG. 2. Open the color change module. Using the solenoid identification labels as a guide, press and hold the override button on each color solenoid until flow from dump valve A stops.
5. Press and hold the dump valve B solenoid override, FIG. 4.
6. See FIG. 2. Using the solenoid identification labels as a guide, press and hold the override button on each catalyst solenoid until flow from dump valve B stops.
7. Press and hold the dump valve A solenoid override, FIG. 4.
8. Press and hold the A side (color) solvent solenoid override until clean solvent comes from the dump valve, then release.
9. Press and hold the dump valve B solenoid override, FIG. 4.
10. Press and hold the B side (catalyst) solvent solenoid override until clean solvent comes from the dump valve, then release.
11. Shutoff the solvent supply to the color/catalyst change stack solvent valves.
12. Press and hold the A and B solvent solenoid overrides and dump valve overrides until solvent flow from the dump valves stops.

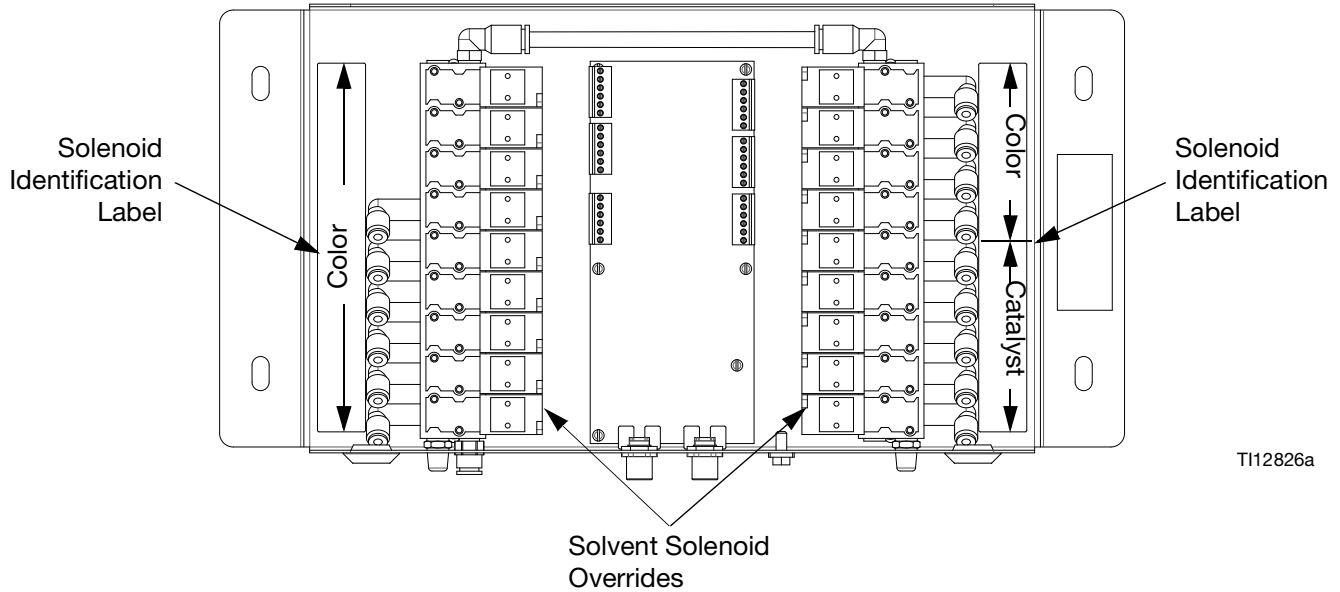

TI12826a

FIG. 2: Color Change Solenoids

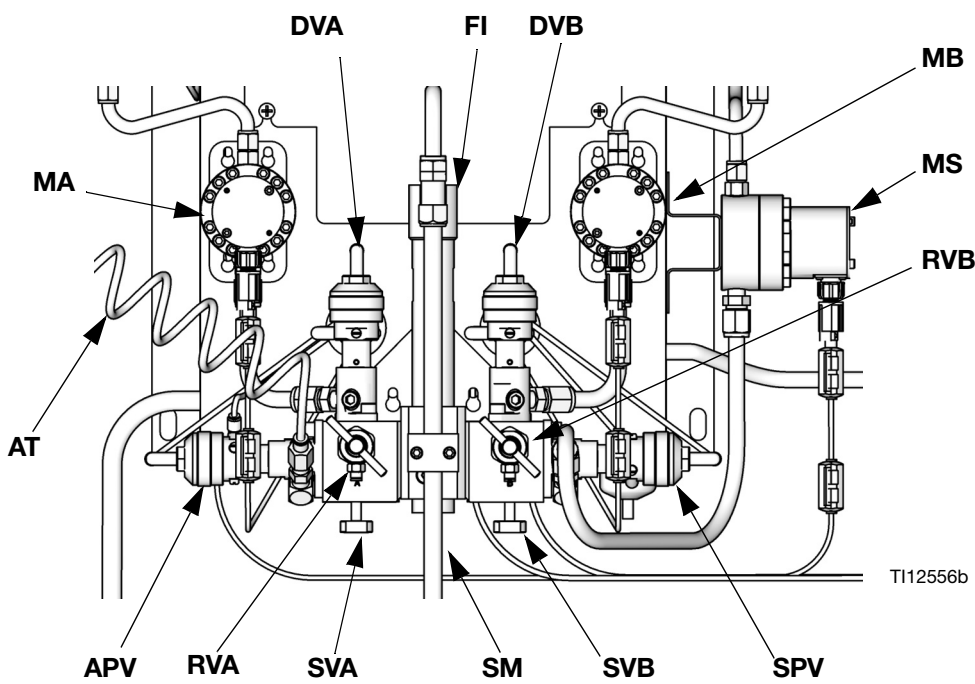

Key:

- MA Component A Meter
- DVA Component A Dose Valve
- RVA Component A Sampling Valve
- SVA Component A Shutoff Valve
- MB Component B Meter
- DVB Component B Dose Valve
- RVB Component B Sampling Valve
- SVB Component B Shutoff Valve
- MS Solvent Meter (accessory)
- SPV Solvent Purge Valve
- APV Air Purge Valve
- SM Static Mixer
- FI Fluid Integrator
- AT Air Purge Valve Air Supply Tube

FIG. 3. Wall Mount Fluid Station

Troubleshooting

| | | | | | | |
|---|---|---|---|--|--|--|
|  |  |  |  | | | |
| Follow Pressure Relief Procedure , page 12, before cleaning, checking, or servicing equipment. | | | | | | |

NOTE: Do not use the fluid in the line that was dispensed off ratio as it may not cure properly.

Alarm Codes

Table 1 lists the system alarm codes. See the system operation manual for complete information on alarm troubleshooting.

Table 1: System Alarm Codes

| Code | Description |
|------|--|
| E-1 | Communication Error Alarm |
| E-2 | Potlife Alarm |
| E-3 | Ratio High Alarm |
| E-4 | Ratio Low Alarm |
| E-5 | Overdose A/B Dose Too Short Alarm |
| E-6 | Overdose B/A Dose Too Short Alarm |
| E-7 | Dose Time A Alarm |
| E-8 | Dose Time B Alarm |
| E-9 | Mix in Setup Alarm |
| E-10 | Remote Stop Alarm |
| E-11 | Purge Volume Alarm |
| E-12 | CAN Network Communication Error Alarm |
| E-13 | High Flow Alarm |
| E-14 | Low Flow Alarm |
| E-15 | System Idle Warning |
| E-16 | Setup Change Warning |
| E-17 | Power On Warning |
| E-18 | Defaults Loaded Warning |
| E-19 | I/O Alarm (see Operation Manual for details) |
| E-20 | Purge Initiate Alarm |
| E-21 | Material Fill Alarm |
| E-22 | Tank A Low Alarm |
| E-23 | Tank B Low Alarm |
| E-24 | Tank S Low Alarm |
| E-25 | Auto Dump Complete Alarm |
| E-26 | Color/Catalyst Purge Alarm |
| E-27 | Color/Catalyst Fill Alarm |

Solenoid Troubleshooting

NOTE: Refer to the **Schematic Diagrams**, page 30.

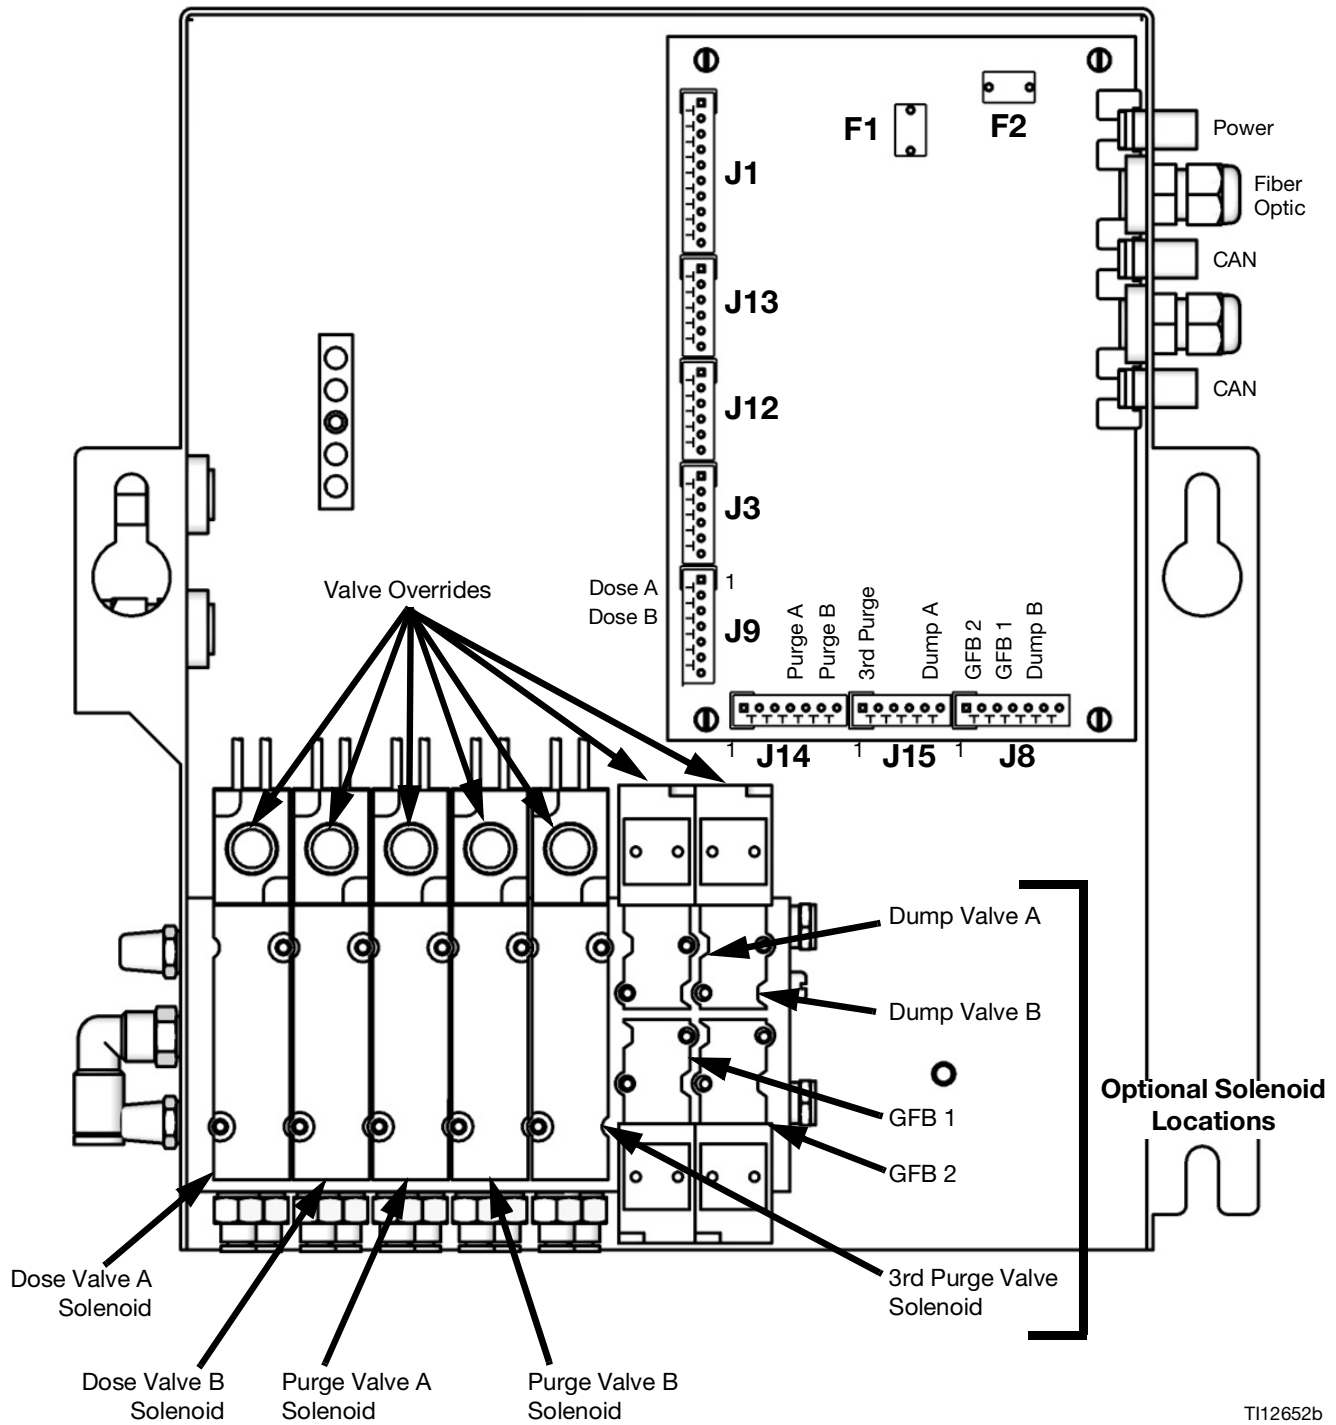


FIG. 4: Fluid Station Board and Solenoids

NOTE: Refer to the **Schematic Diagrams**, page 30.


If the dispense or purge valves are not turning on or off correctly, it could be caused by one of the following.

Table 2: Solenoid Troubleshooting

| Cause | Solution |
|---|--|
| 1. Air regulator pressure set too high or too low. | Check air pressure. 80-90 psi (550-630 kPa, 5.5-6.3 bar) is commonly used. Do not go below 70 psi (490 kPa, 4.9 bar) or above 120 psi (0.8 MPa, 8 bar), |
| 2. Air or electrical lines damaged or connections loose. | Visually inspect air and electrical lines for kinks, damage, or loose connections. Service or replace as needed. |
| 3. Solenoid failure. | <p>Manually operate the valves by removing the Fluid Station cover and pressing and releasing solenoid valve override buttons. FIG. 4.</p> <p>Use the control board diagnostics to check the signals. If signals do not occur correctly, go to Cause 4.</p> <p>Valves should snap open and shut quickly. If the valves actuate slowly, it could be caused by:</p> <ul style="list-style-type: none"> • Air pressure to the valve actuators is too low. See Cause 1. • Solenoid is clogged. Make sure air supply has 5 micron filter installed. • Something is restricting the solenoid or tubing. Check for air output from air line for corresponding solenoid when valve is actuated. Clear restriction. • A dose valve is turned in too far. See ProMix 2KS Operation manual for settings. • Fluid pressure is high and air pressure is low. • Fluid seal in valve has failed. See corresponding valve manual for repair information. |
| 4. Solenoid, cable, or fluid station control board failure. | <p>Check voltage level to solenoid by pulling solenoid connector and checking voltage between pins.</p> <p>If voltage is 9-15 VDC, the solenoid is damaged. Replace solenoid or correct electrical line problem.</p> <p>If there is no voltage, replace the board.</p> |
| 5. Blown fuse. | Check condition of fuses F1 and F2. F1 powers J9 and J14 (Dose Valve A and B and Purge Valve A and B solenoids). F2 powers J8 and J15 (3rd Purge Valve, Dump Valve A and B, and GFB 1 and 2 solenoids). |

Fluid Manifold Troubleshooting

See FIG. 5. To remove the fluid manifold, see page 47.
See manual 312781 for complete information on the fluid manifold.

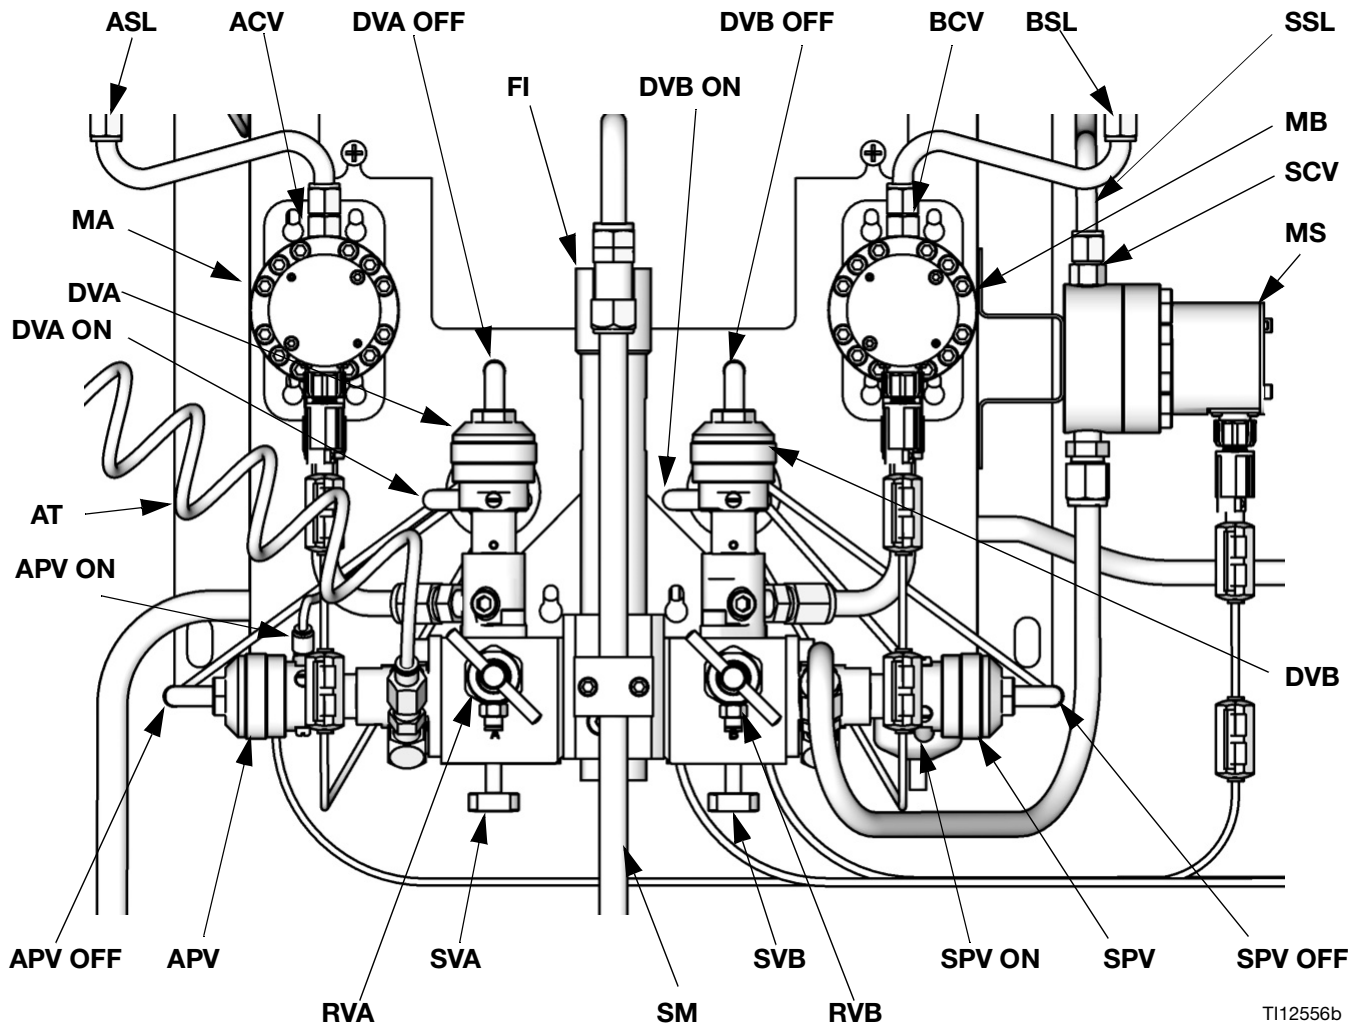

Key:

Component A Side

- MA Component A Meter
- DVA Component A Dose Valve
- RVA Component A Sampling Valve
- SVA Component A Shutoff Valve
- APV Air Purge Valve
- AT Air Purge Valve Air Supply Tube
- ASL Component A Supply Line
- ACV Meter A Check Valve

Component B Side

- MB Component B Meter
- DVB Component B Dose Valve
- RVB Component B Sampling Valve
- SVB Component B Shutoff Valve
- BSL Component B Supply Line
- BCV Meter B Check Valve
- SPV Solvent Purge Valve
- SSL Solvent Supply Line
- MS Solvent Meter (accessory)
- SCV Solvent Meter Check Valve

Mixed Material

- SM Static Mixer
- FI Fluid Integrator

FIG. 5. Fluid Manifold

EasyKey Barrier Board Diagnostics

See FIG. 6 and Table 3 to troubleshoot the EasyKey barrier board. Also see the **EasyKey Electrical Schematic** on page 31 and the **System Electrical Schematic** on pages 32 and 33.

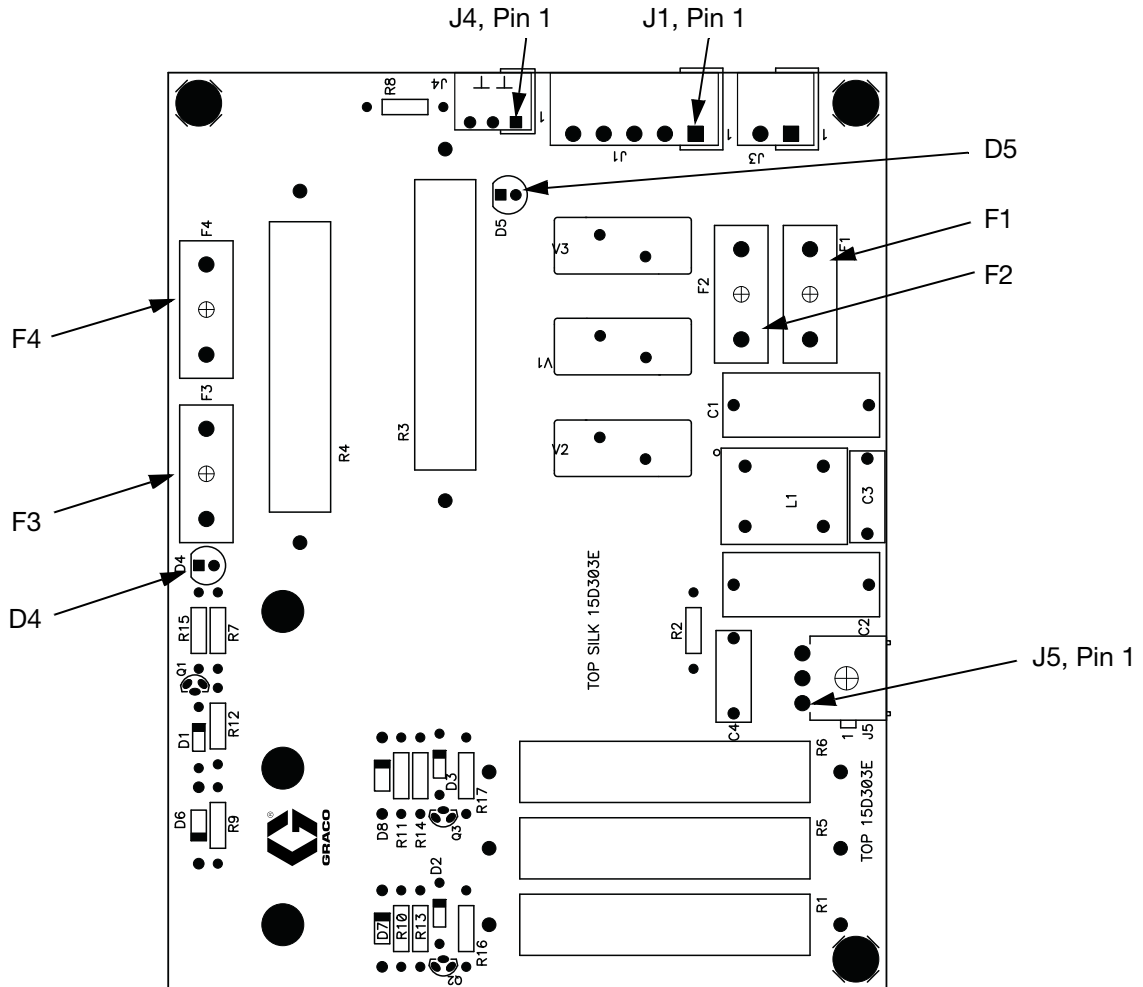


FIG. 6: 255786 EasyKey Barrier Board

Table 3: EasyKey Barrier Board Diagnostics

| Connector | Description | Diagnosis |
|-----------|---|--|
| J1 | AC Power Input | n/a |
| J4 | 24 Vdc Power Input to EasyKey Display Board | D5 turns on. |
| J5 | 12 Vdc Power Output to Fluid Station Board | D4 turns on if barrier board is functioning. If D4 does not turn on, fuses F3 or F4 (Graco Part No. 15D979) are blown or there is no input power at J4. If there is no input power (D5 does not light), fuses F1 and F2 (Graco Part No. 114788) may be blown. |

EasyKey Display Board Diagnostics

See FIG. 7 and Table 4 to troubleshoot the EasyKey display board. Also see the **EasyKey Electrical Schematic** on page 31 and the **System Electrical Schematic** on pages 32 and 33.

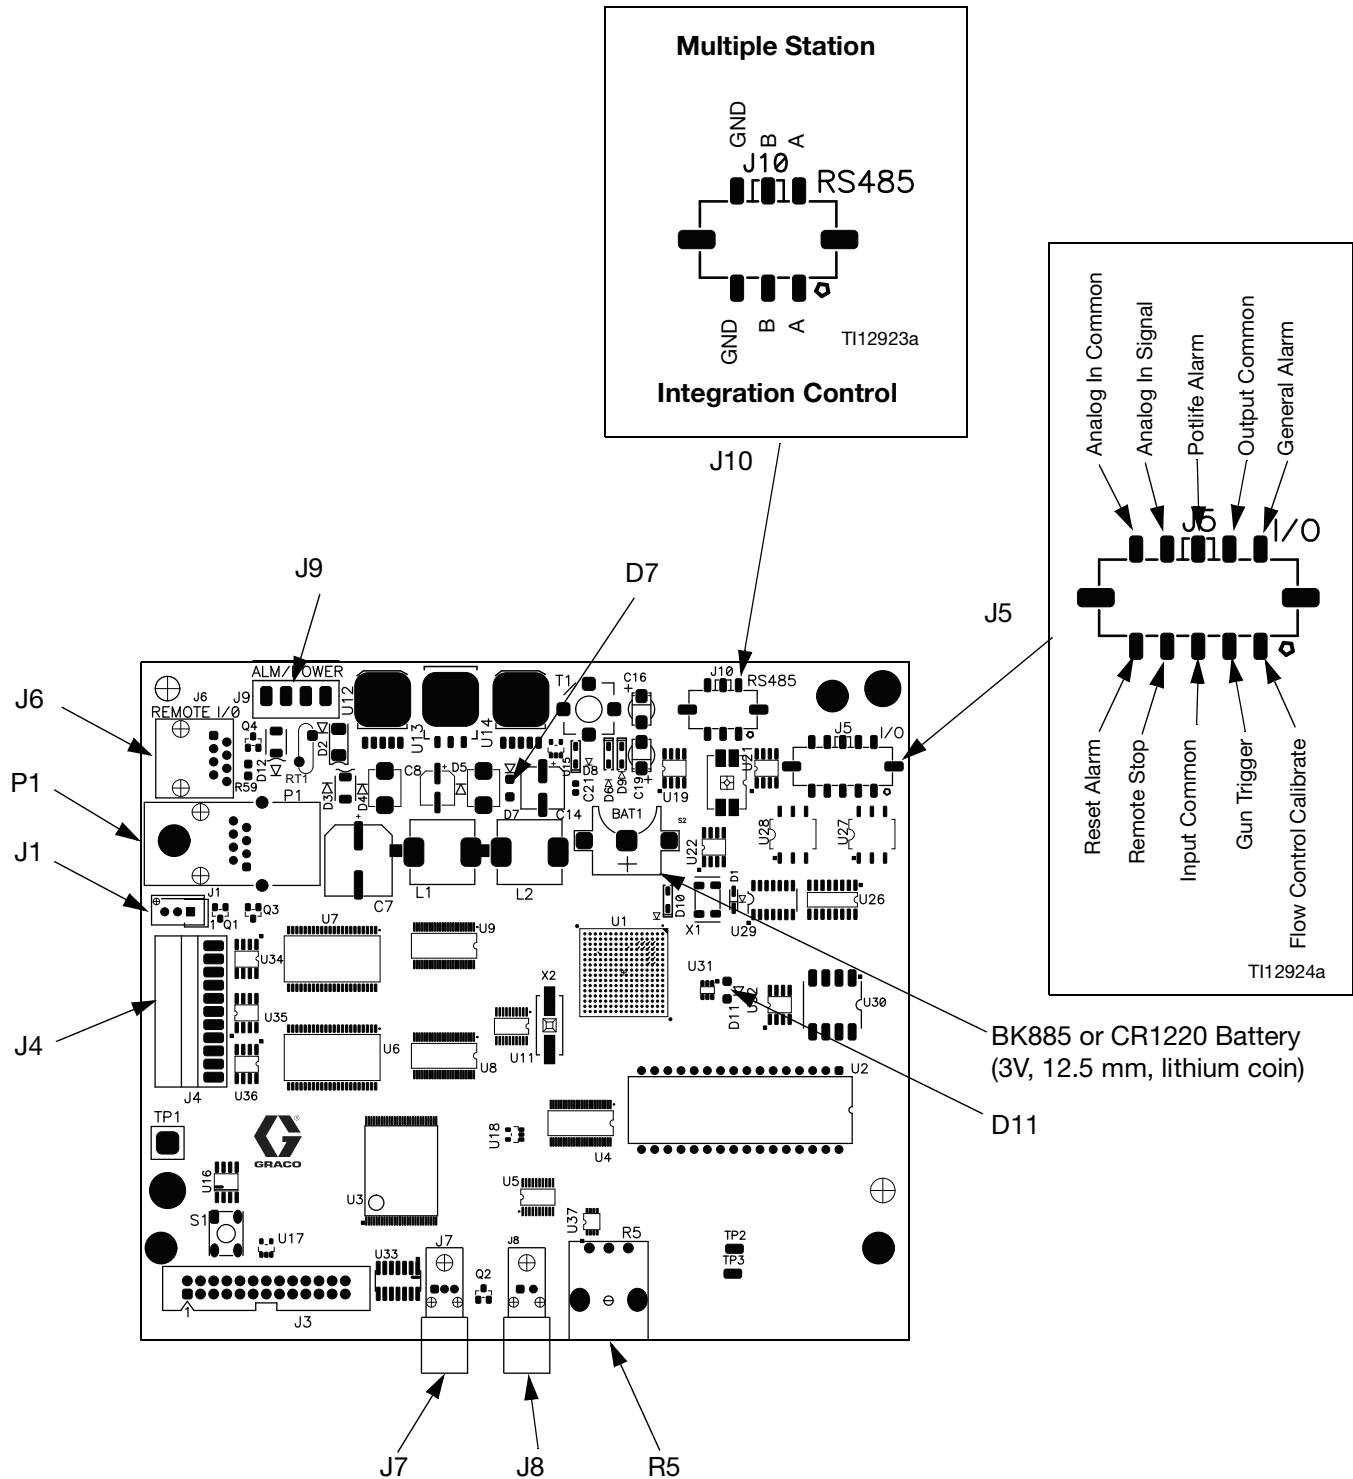


FIG. 7: 255767 EasyKey Display Board

Table 4: EasyKey Display Board Diagnostics

| Connector/ Indicator | Description |
|---------------------------------|---------------------------------|
| J1 | Graphic Display Backlight |
| J4 | Ribbon Cable to Membrane |
| J5 | Inputs and Outputs |
| J6 | Remote I/O |
| J7 | Fiber Optic Cable Input (black) |
| J8 | Fiber Optic Cable Output (blue) |

| Connector/ Indicator | Description |
|---------------------------------|--|
| J9 | 24 Vdc Power Input/Alarm Output |
| J10 | RS485 Communication Terminals |
| D7 (green) | LED turns on when power is supplied to board |
| D11 (yellow) | LED blinks (heartbeat) when board is operating |
| P1 | Ethernet Port |
| R5 | Display Contrast/Dimmer Switch (turn by hand) |

Fluid Station Control Board Diagnostics

See FIG. 8, FIG. 9, and Table 5 to troubleshoot the fluid station control board. Also see the **System Electrical Schematic** on pages 32 and 33.

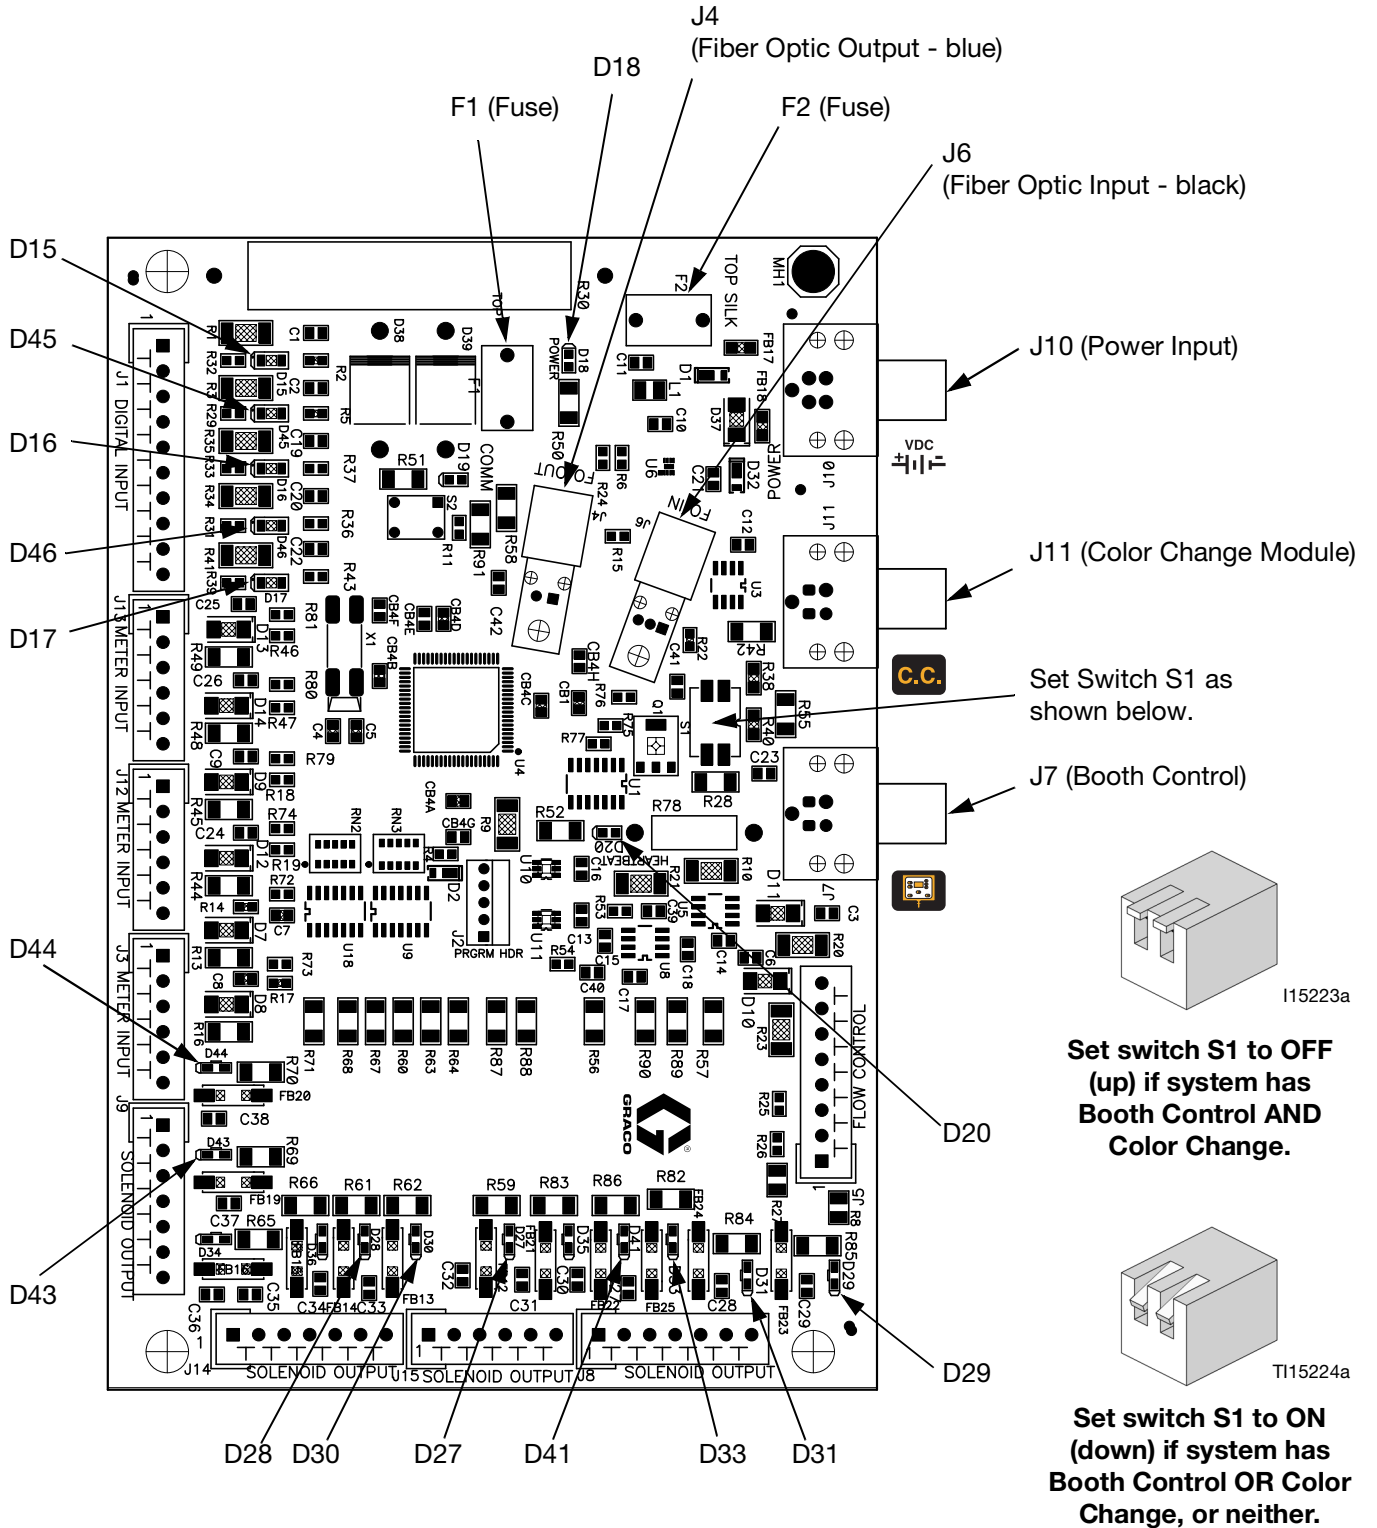


FIG. 8: 255765 Fluid Station Control Board Indicators

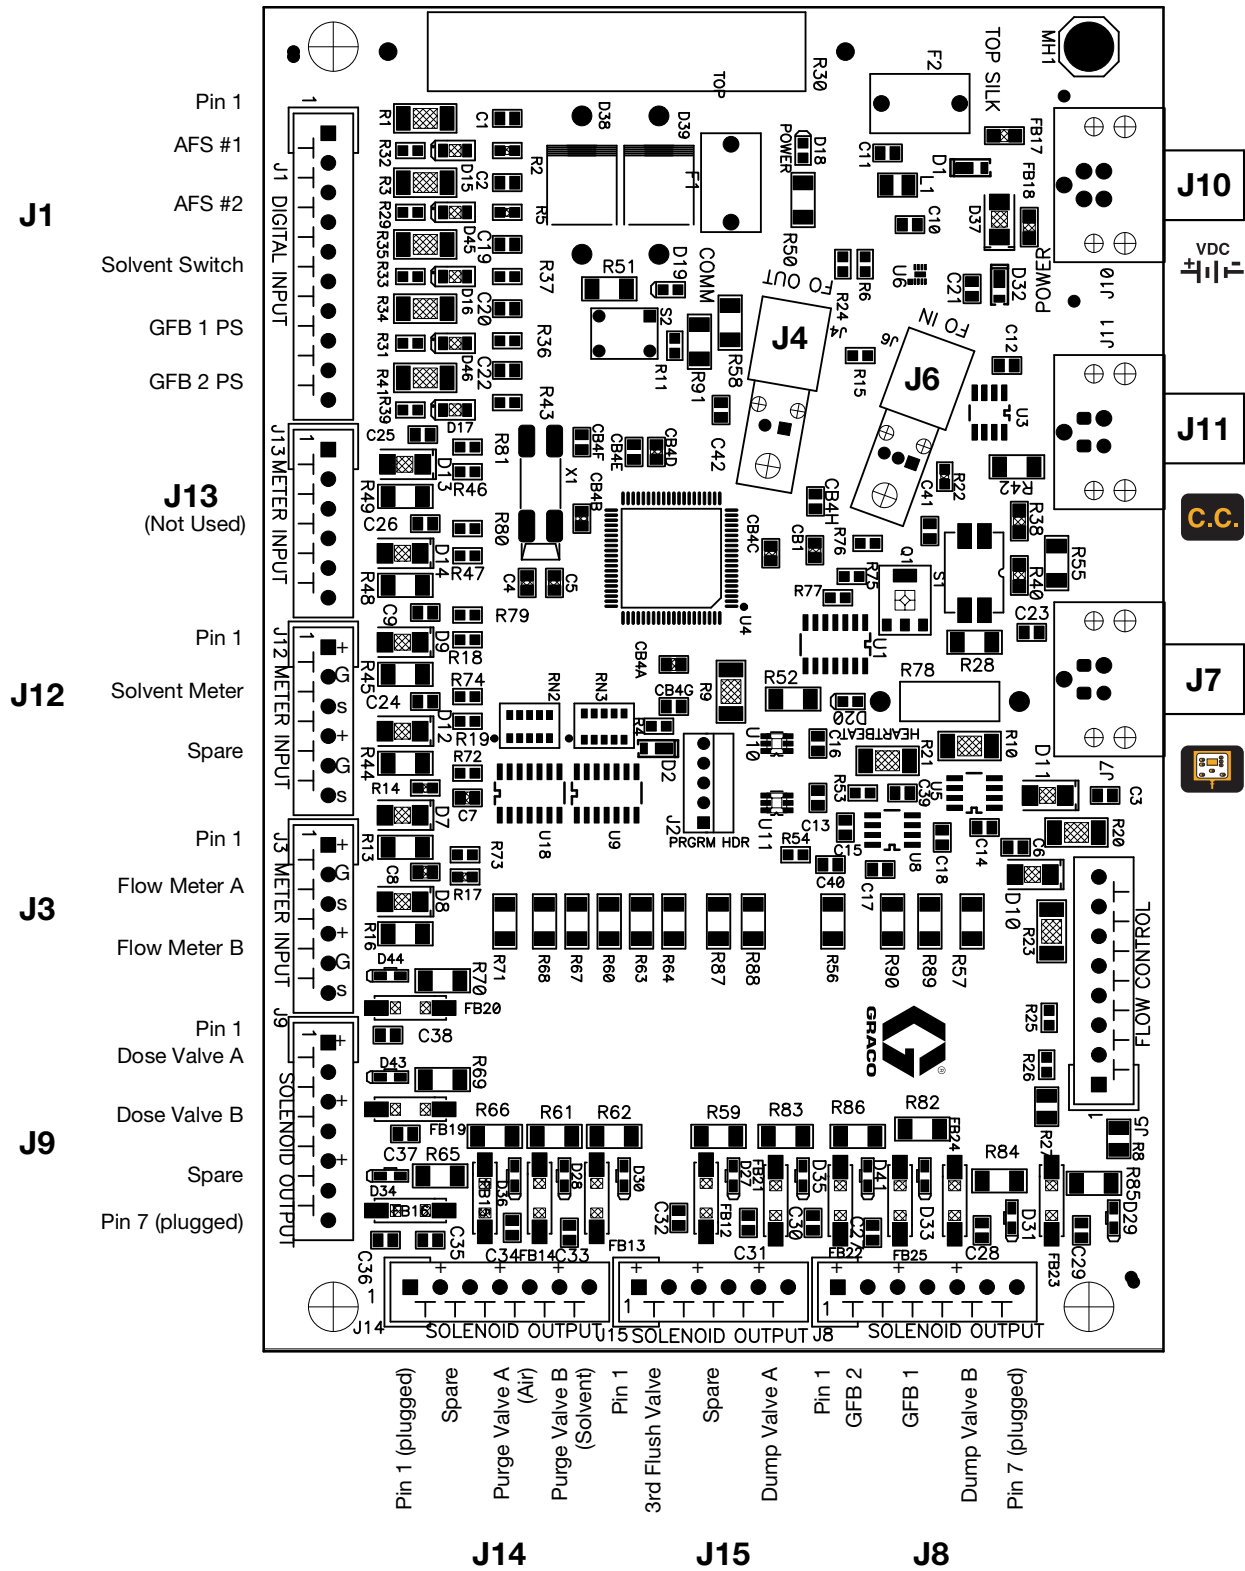


Fig. 9: 255765 Fluid Station Control Board Input/Output Connections

Table 5: Fluid Station Control Board Diagnostics

| LED | Connector and Pin Nos. | Signal Description | Diagnosis |
|------------|-------------------------------|---|---|
| D15 | J1, 1 & 2 | Air Flow Switch 1 | Turns on when gun 1 is triggered. |
| D16 | J1, 5 & 6 | Solvent Flow Switch | Turns on when solvent is flowing. |
| D17 | J1, 9 & 10 | Gun Flush Box 2 Pressure Switch | Turns on when a gun is in Gun Flush Box 2. |
| D18 | J10 | Power | Turns on when power is supplied to the board. |
| D20 | n/a | Board OK | Blinks (heartbeat) during normal operation. |
| D27 | J15, 1 & 2 | Purge Valve C (Water Purge) | D27 through D44 turn on when ProMix sends a signal to actuate the related solenoid valve. |
| D28 | J14, 4 & 5 | Purge Valve A (Air Purge) | |
| D29 | J8, 5 & 6 | Dump Valve B | |
| D30 | J14, 6 & 7 | Purge Valve B (Solvent Purge) | |
| D31 | J8, 3 & 4 | Gun Flush Box 1 Trigger | |
| D33 | J8, 1 & 2 | Gun Flush Box 2 Trigger | |
| D41 | J15, 5 & 6 | Dump Valve A | |
| D43 | J9, 3 & 4 | Dose Valve B | |
| D44 | J9, 1 & 2 | Dose Valve A | |
| D45 | J1, 3 & 4 | Air Flow Switch 2 | |
| D46 | J1, 7 & 8 | Gun Flush Box 1 Pressure Switch | Turns on when a gun is in Gun Flush Box 1. |
| F1 | n/a | Replaceable Fuse for Flow Meter A and B, Dose Valve A and B Solenoids, and Purge Valve A and B Solenoids | Check fuse condition if Flow Meters, Dose Valves, and Purge Valves are not working. |
| F2 | n/a | Replaceable Fuse for Solvent Meter, Dump Valve A and B Solenoids, 3rd Purge Valve Solenoid, and Gun Flush Box 1 and 2 Solenoids | Check fuse condition if Solvent Meter, Dump Valves, 3rd Purge Valve, and Gun Flush Boxes are not working. |


Booth Control Troubleshooting

See FIG. 10 and Table 6 to troubleshoot the booth control board. Also see the **System Electrical Schematic** on pages 32 and 33. The booth control does not contain any serviceable parts and must be replaced as a complete unit.


To replace the booth control, disconnect the cable from J7 on the fluid station control board. See FIG. 8 on page 23. Install the new booth control and connect the cable to J7.

Table 6: Booth Control Board Diagnostics

| LED | Description | Diagnosis |
|-----|--------------------------------|--|
| D2 | Alarm Reset Indicator (red) | LED blinks when an alarm occurs and turns off after alarm is reset. |
| D3 | Mix Indicator (green) | LED turns on when in Mix mode. |
| D4 | Standby Indicator (green) | LED turns on when in Standby mode. |
| D5 | Purge Indicator (green) | LED turns on when in Purge mode. |
| D6 | Job Complete Indicator (green) | LED blinks once after key is pressed, signalling that job is complete, and A and B totalizers are reset. |
| D7 | Recipe Indicator (green) | LED turns on when a recipe is in use, and shuts off when a new recipe is being selected or if an alarm occurs. LED blinks when a new recipe is loading and turns solid after loading is complete. |
| D8 | Board OK (green) | Blinks (heartbeat) during normal operation. |
| D9 | Communication (yellow) | Turns on when board is communicating with EasyKey. |
| D10 | Power (green) | Turns on when power is supplied to the board (J11). |

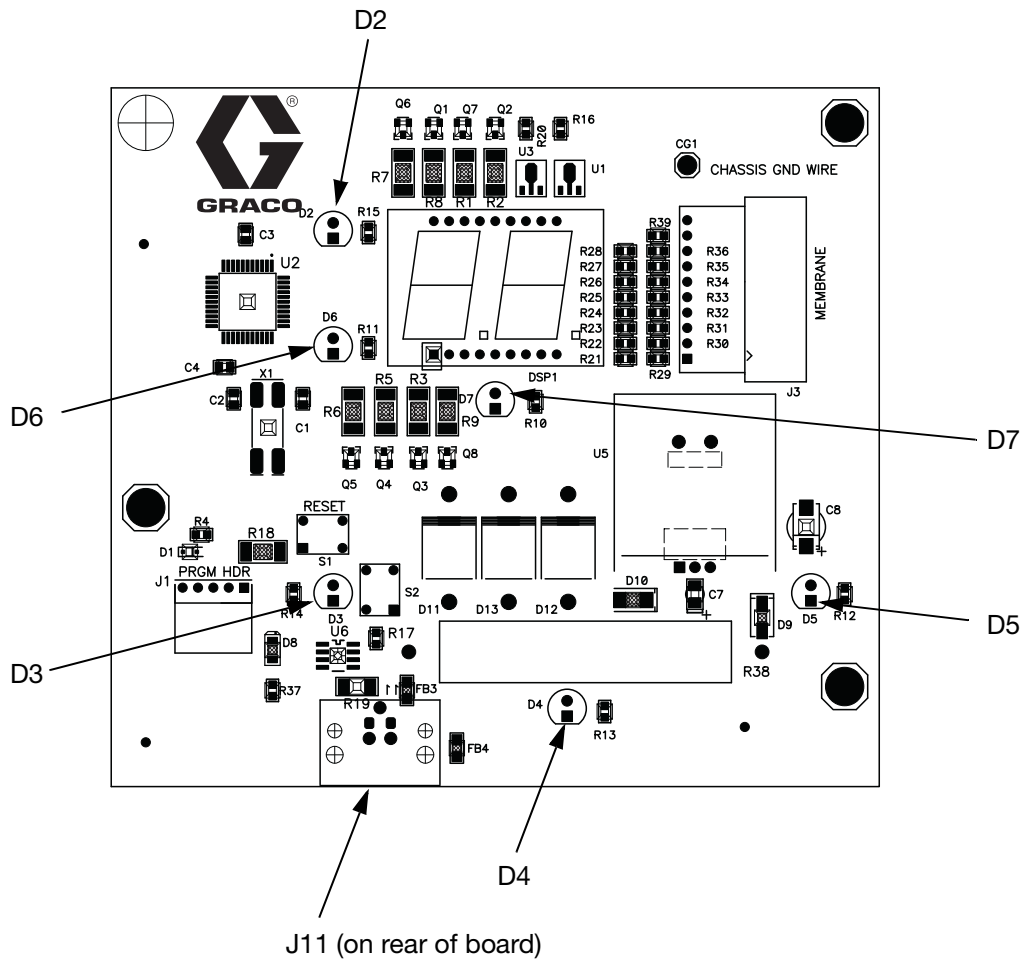

Bottom View of Booth Control

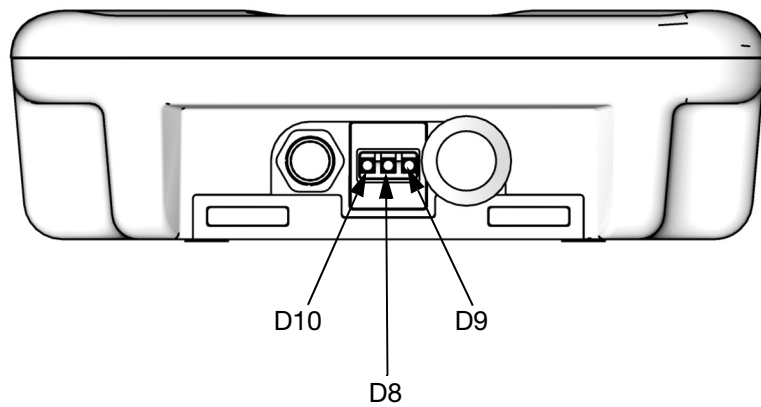

T112789a


FIG. 10: Booth Control Board

Table 7: Color Change Board Diagnostics


| LED | Connector and Pin Nos. | Board 1 Signal Description | Board 2 Signal Description | Diagnosis |
|-----|------------------------|----------------------------|----------------------------|--|
| D8 | n/a | Board OK | Board OK | Blinks (heartbeat) during normal operation. |
| D9 | n/a | Communication (yellow) | Communication (yellow) | Turns on when board is communicating with ProMix 2KS. |
| D10 | J7 | Power | Power | Turns on when power is supplied to the board. |
| D27 | J15, 5 & 6 | Color 3 | Color 16 | D27 through D46 turn on when ProMix 2KS sends a signal to actuate the related solenoid valve. |
| D28 | J14, 3 & 4 | Color 1 | Color 14 | |
| D29 | J8, 5 & 6 | Color 6 | Color 19 | |
| D30 | J14, 1 & 2 | Color 2 | Color 15 | |
| D31 | J8, 3 & 4 | Color 7 | Color 20 | |
| D32 | J16, 3 & 4 | Catalyst 4 | Color 26 | |
| D33 | J8, 1 & 2 | Color 8 | Color 21 | |
| D34 | J9, 5 & 6 | Color 9 | Color 22 | |
| D35 | J15, 3 & 4 | Color 4 | Color 17 | |
| D36 | J14, 5 & 6 | Solvent (Color) | Color 13 | |
| D37 | J10, 5 & 6 | Catalyst 2 | Color 28 | |
| D38 | J16, 1 & 2 | Catalyst 3 | Color 27 | |
| D39 | J16, 5 & 6 | Color 12 | Color 25 | |
| D41 | J15, 1 & 2 | Color 5 | Color 18 | |
| D43 | J9, 3 & 4 | Color 10 | Color 23 | |
| D44 | J9, 1 & 2 | Color 11 | Color 24 | |
| D45 | J10, 3 & 4 | Catalyst 1 | Color 29 | |
| D46 | J10, 1 & 2 | Solvent (Catalyst) | Color 30 | |
| F1 | Replaceable Fuse | n/a | n/a | Check fuse condition if there is no power to the board or if communication is interrupted between the fluid station and the color change module. |

Schematic Diagrams

System Pneumatic Schematic

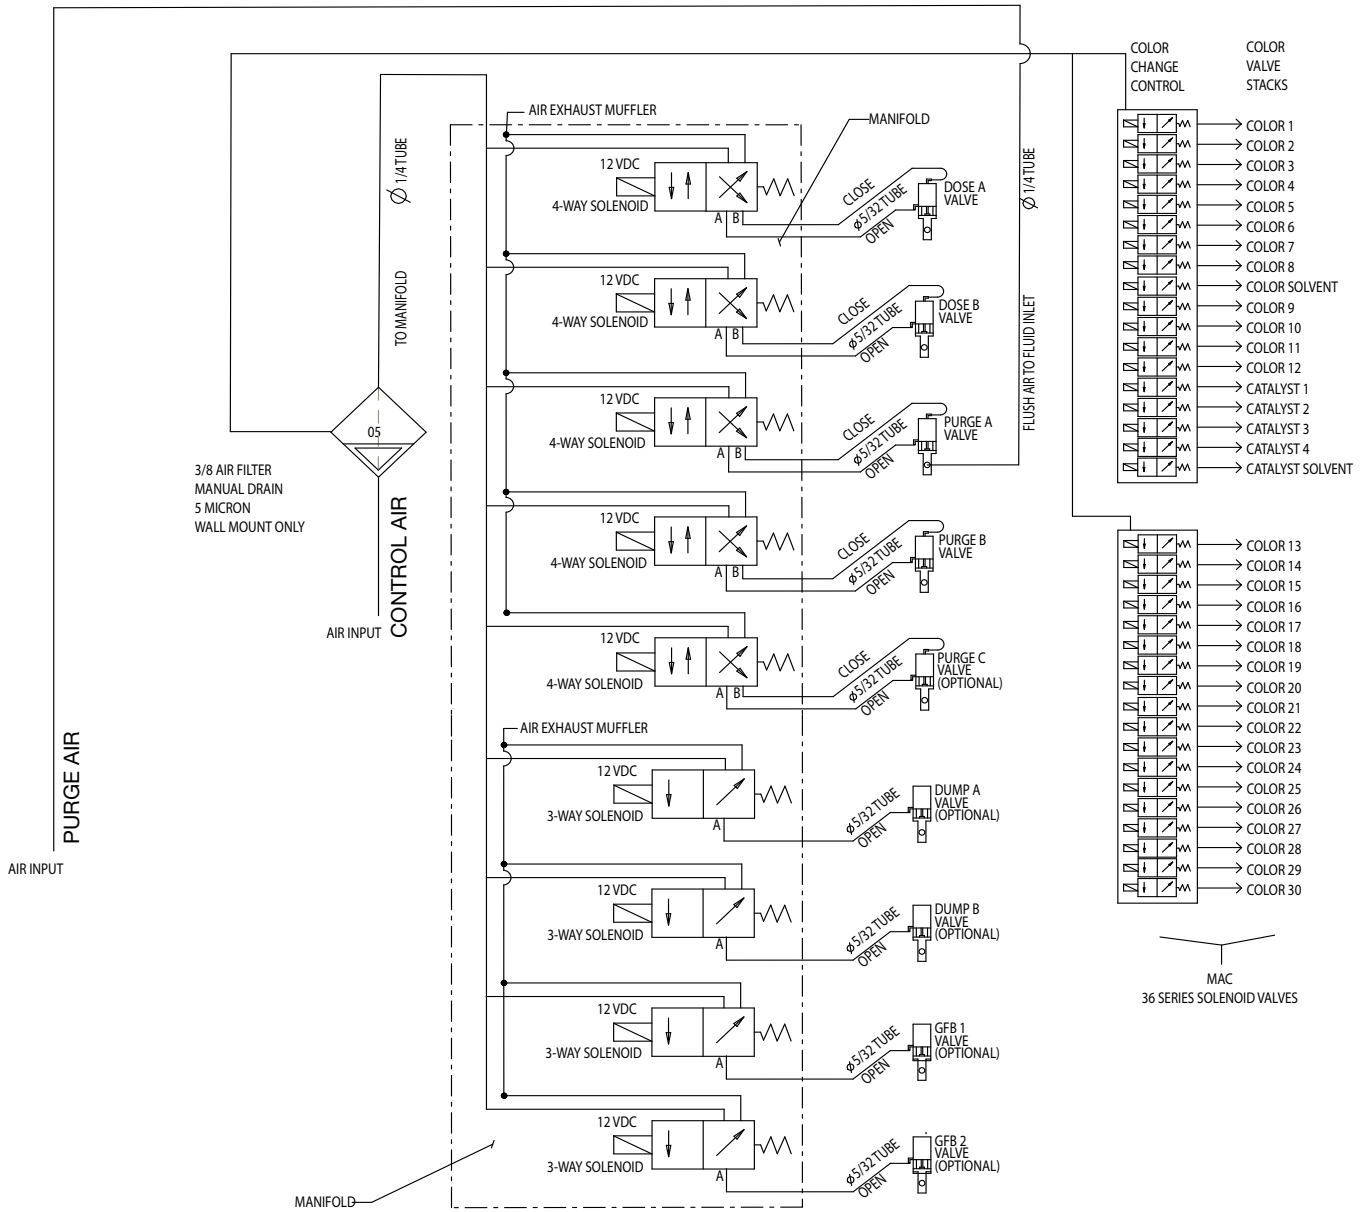


EasyKey Electrical Schematic

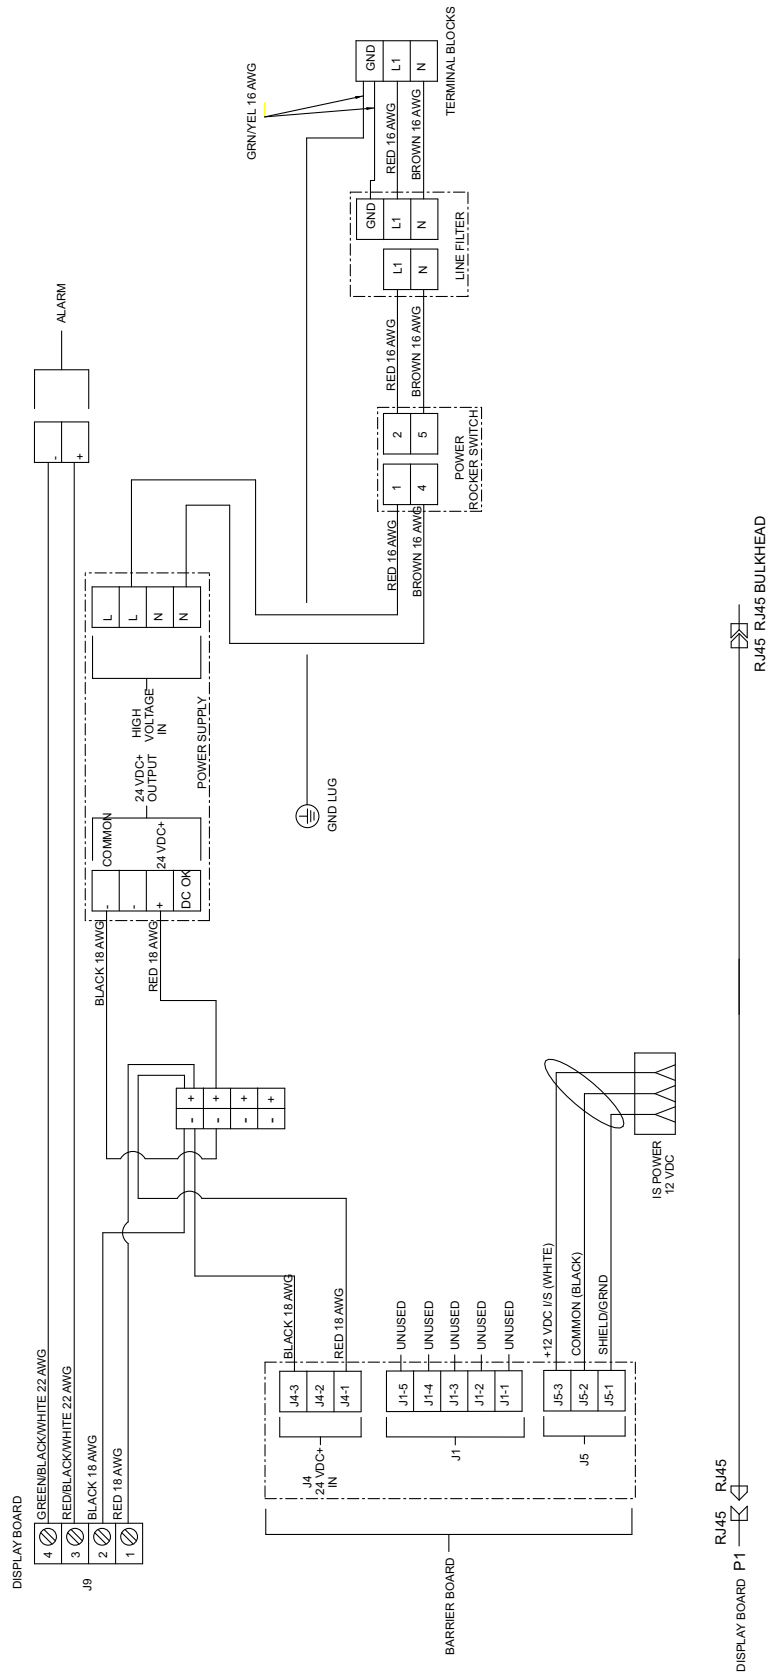

System Electrical Schematic

NOTE: The electrical schematic illustrates all possible wiring expansions in a ProMix 2KS system. Some components shown are not included with all systems.


Non-Hazardous Area

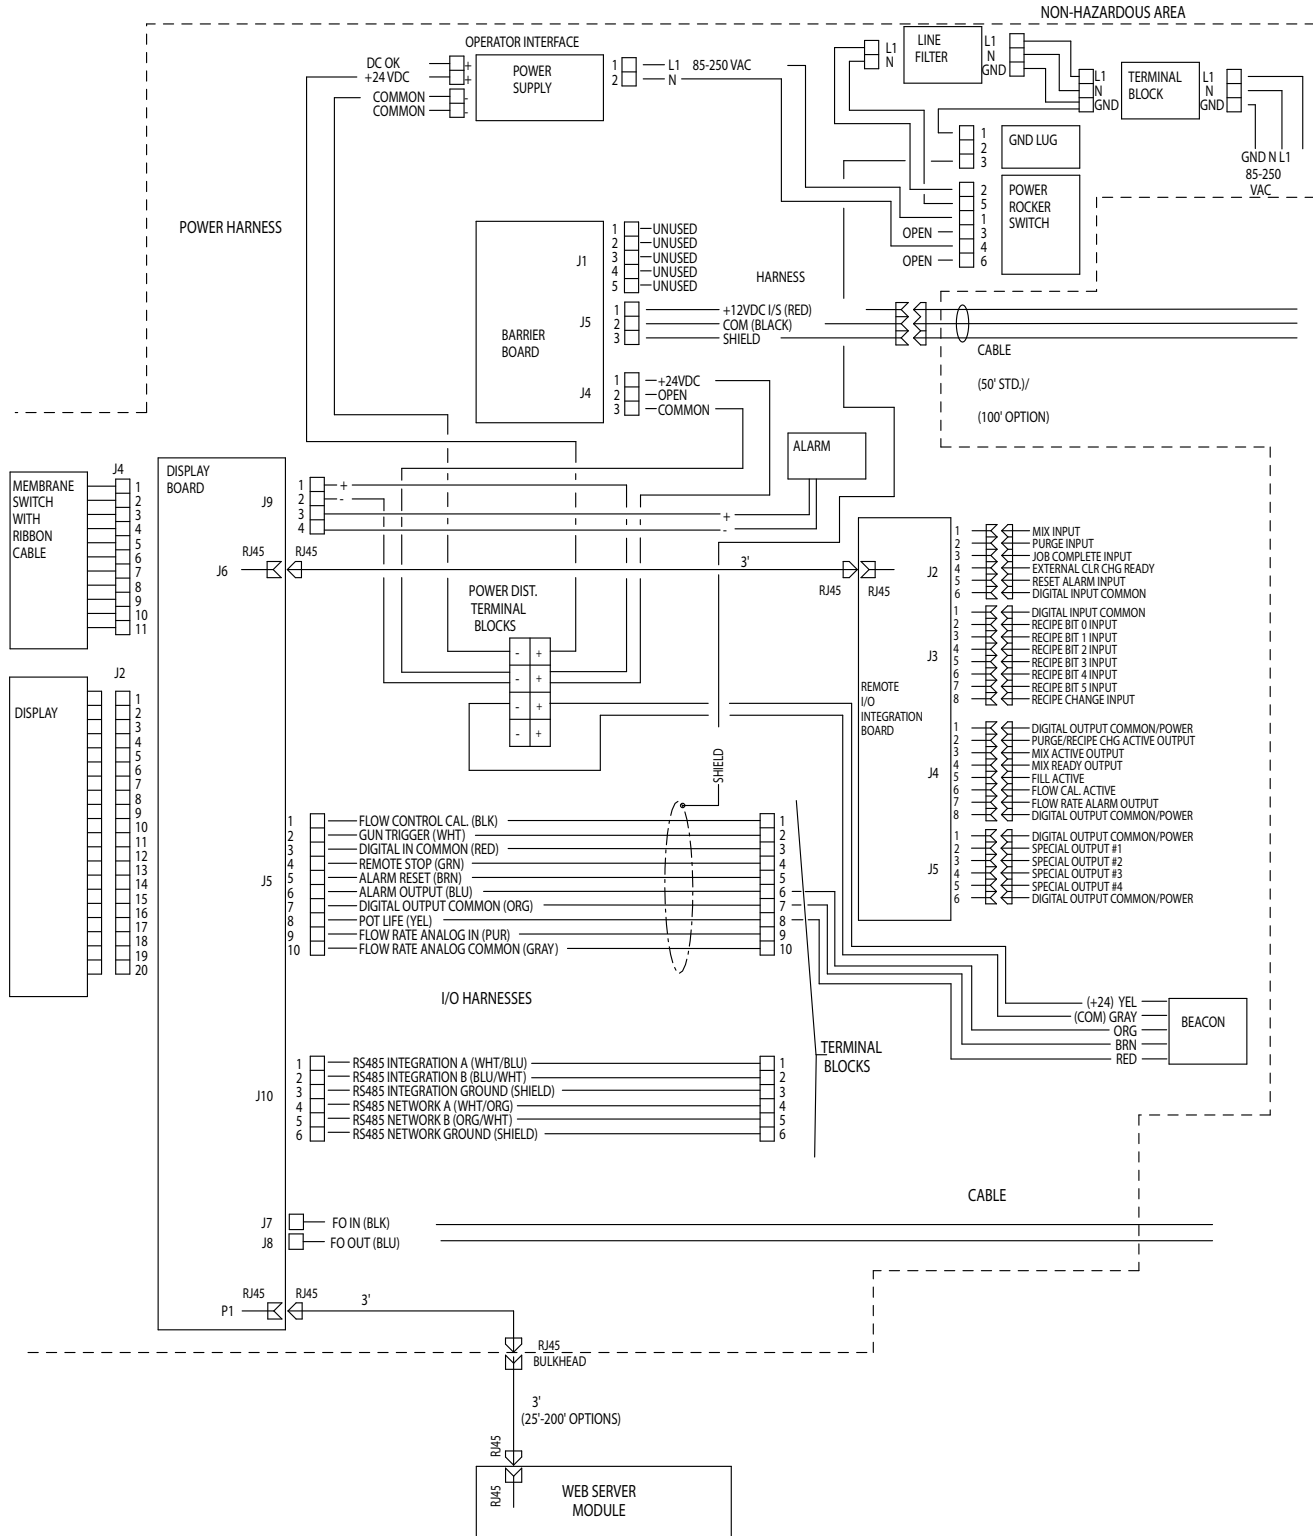


System Electrical Schematic

NOTE: The electrical schematic illustrates all possible wiring expansions in a ProMix 2KS system. Some components shown are not included with all systems.


Hazardous Area

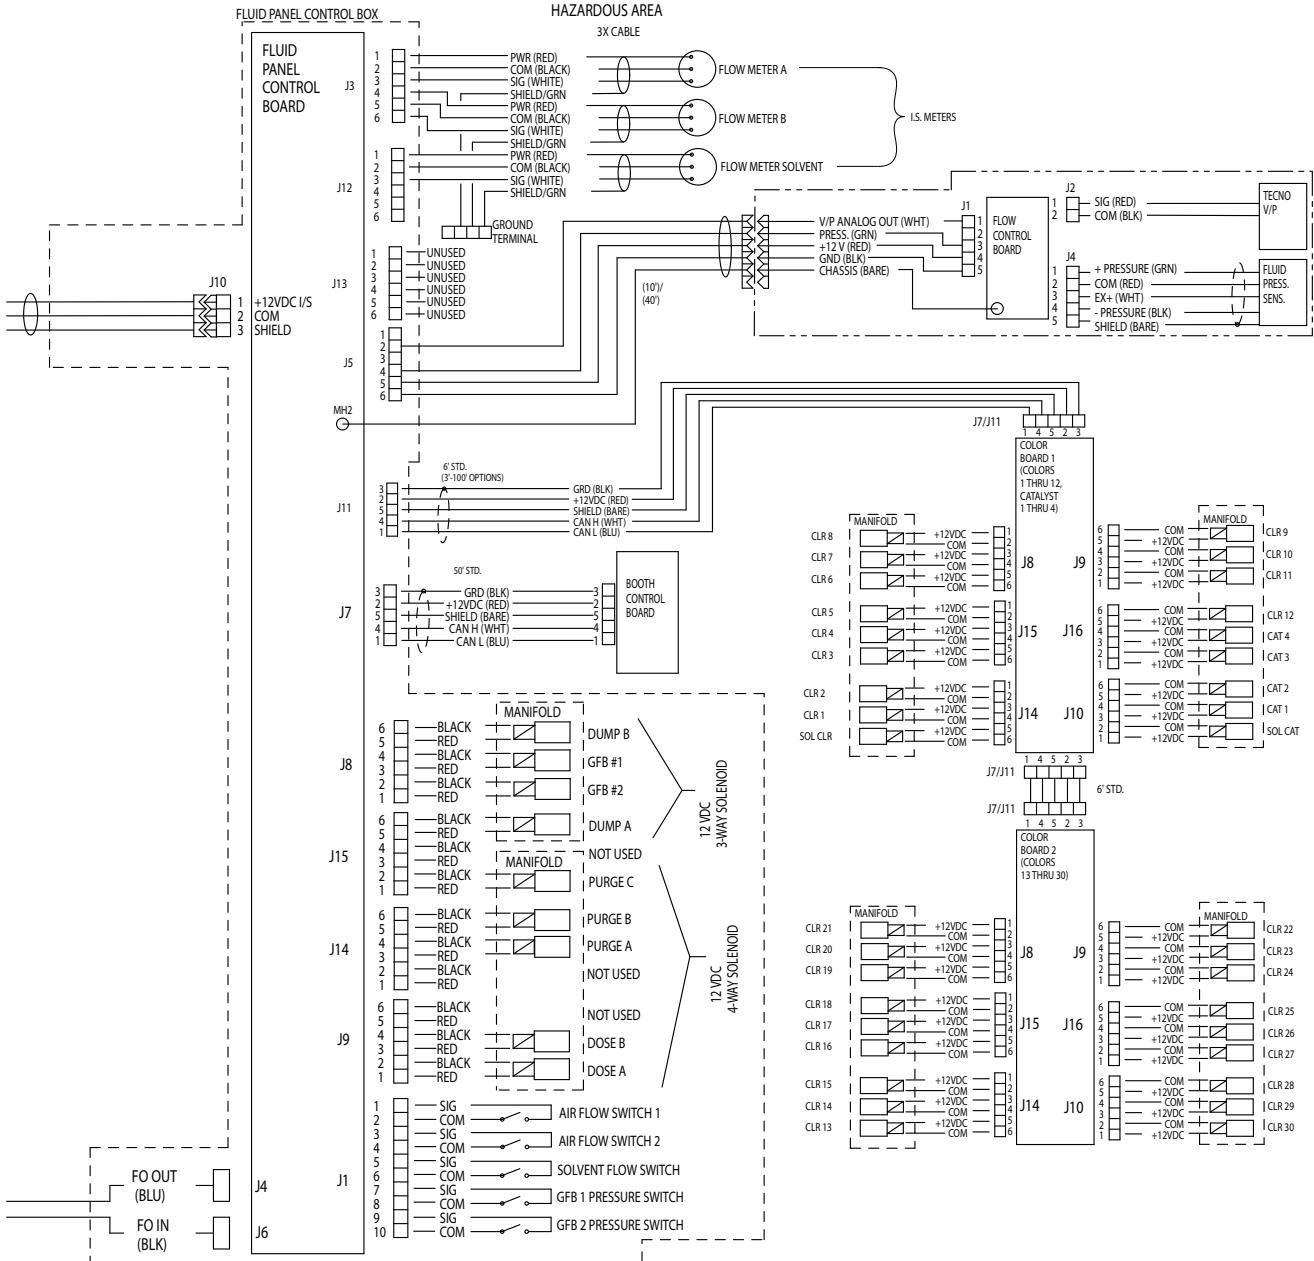


Tubing Schematic

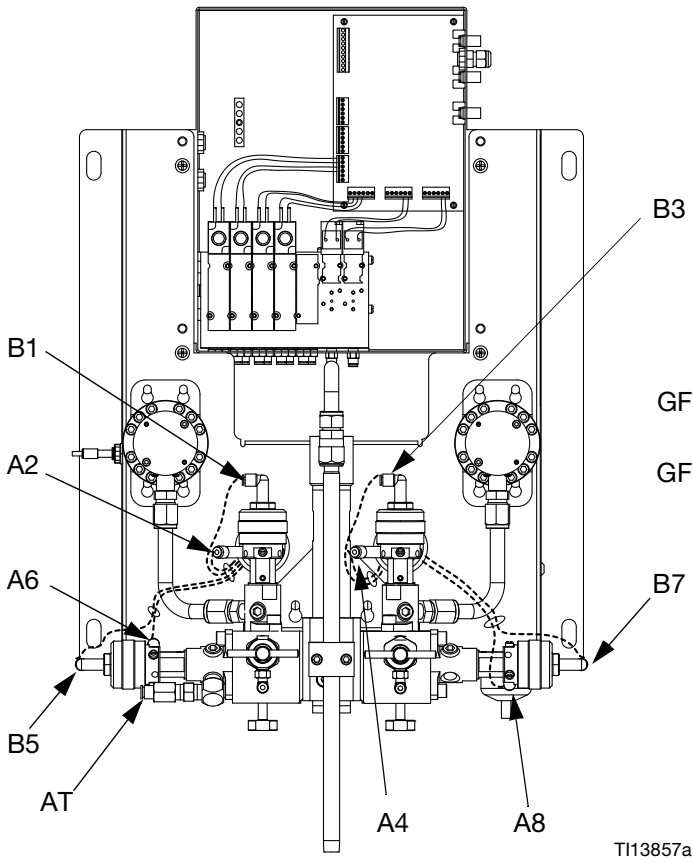


T113857a

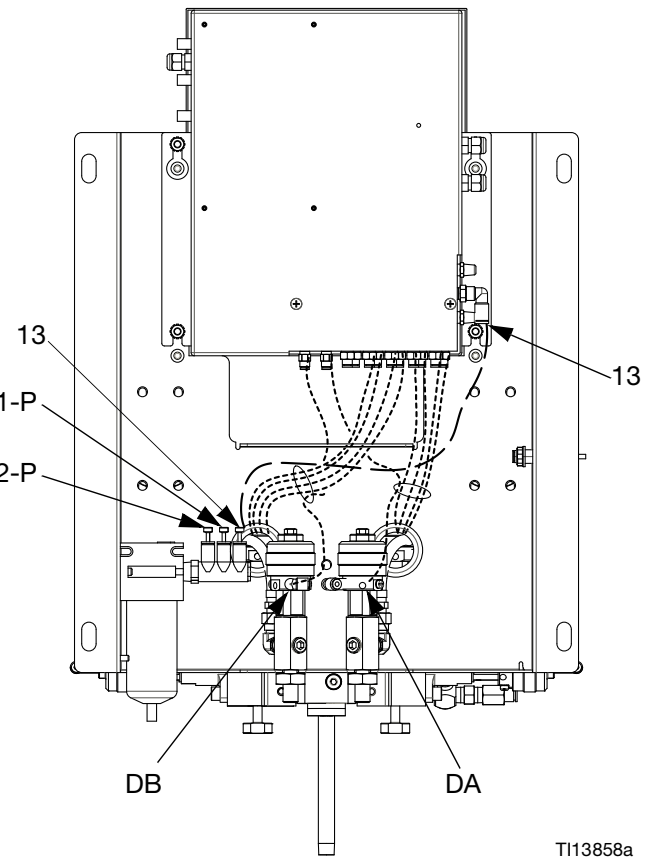


T113858a

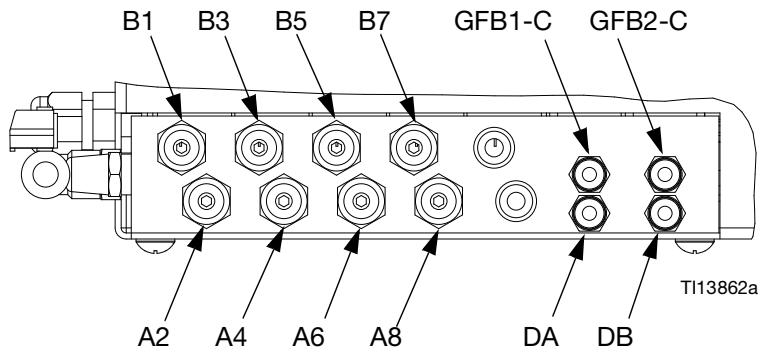


T113862a

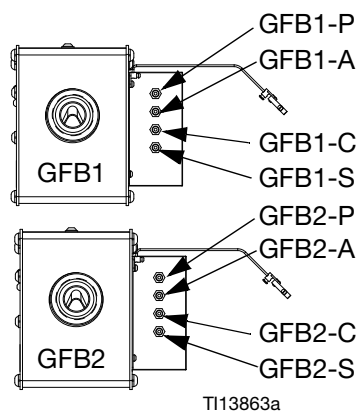

T113863a

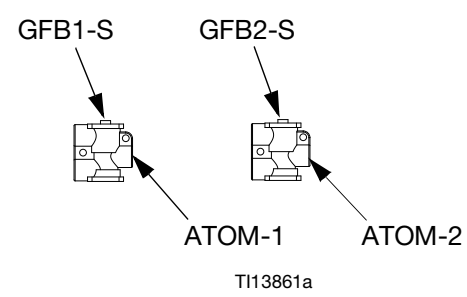

T113861a

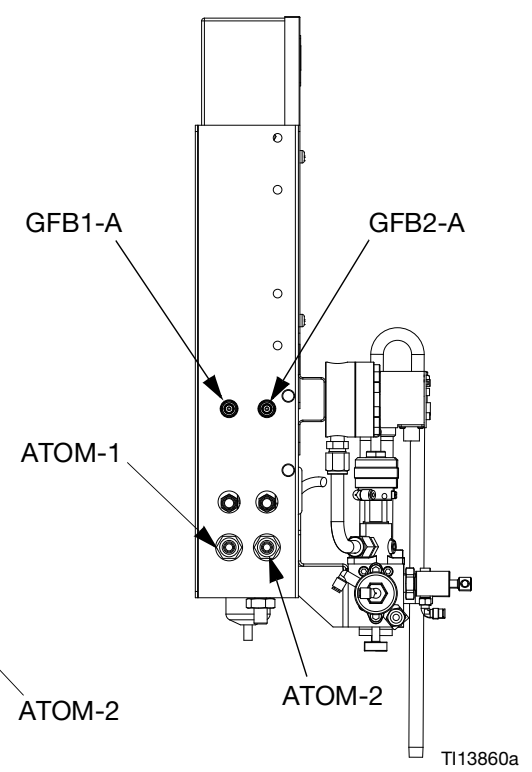


T113860a

Table 8: Tubing Chart

| Color | Description | Starting Point | Ending Point | Tube OD in. (mm) | Tube Ref. No. |
|---------|--|---|--------------|------------------|---|
| Green | Dose A On | A2 | A2 | 5/32 (4) | 336 |
| Green | Dose B On | A4 | A4 | 5/32 (4) | 336 |
| Green | Purge A On | A6 | A6 | 5/32 (4) | 336 |
| Green | Purge B On | A8 | A8 | 5/32 (4) | 336 |
| Green | Dump A | DA | DA | 5/32 (4) | Included in optional Dump Valve Kit 15V821 |
| Green | Dump B | DB | DB | 5/32 (4) | |
| Red | Dose A Off | B1 | B1 | 5/32 (4) | 337 |
| Red | Dose B Off | B3 | B3 | 5/32 (4) | 337 |
| Red | Purge A Off | B5 | B5 | 5/32 (4) | 337 |
| Red | Purge B Off | B7 | B7 | 5/32 (4) | 337 |
| Natural | Solenoid Air Supply | 13 | 13 | 1/4 (6) | 334 |
| Natural | Gun Flush Box 1 Pressure Switch Signal | GFB1-A | GFB1-A | 5/32 (4) | Included in optional Gun Flush Box Kit 15V826 |
| Natural | Gun Flush Box 2 Pressure Switch Air | GFB2-A | GFB2-A | 5/32 (4) | |
| Natural | Gun Flush Box 1 Trigger Air | GFB1-C | GFB1-C | 5/32 (4) | |
| Natural | Gun Flush Box 2 Trigger Air | GFB2-C | GFB2-C | 5/32 (4) | |
| Natural | Gun Flush Box 1 Supply Air | GFB1-P | GFB1-P | 5/32 (4) | |
| Natural | Gun Flush Box 2 Supply Air | GFB2-P | GFB2-P | 5/32 (4) | |
| Natural | Gun Flush Box 1 Safety Interlock | GFB1-S | GFB1-S | 5/32 (4) | |
| Natural | Gun Flush Box 2 Safety Interlock | GFB2-S | GFB2-S | 5/32 (4) | |
| Natural | Gun 1 Atomizing Air | ATOM-1 | ATOM-1 | 1/4 (6) | User supplied. Connects air flow switch to gun air shutoff valve. |
| Natural | Gun 2 Atomizing Air | ATOM-2 | ATOM-2 | 1/4 (6) | |
| Natural | Purge Air Supply | Use as a separate line connected directly to the main shop air line. Do not connect to the unit's main air supply or to the air manifold (335). | AT | 1/4 (6) | 338 |

Service

Before Servicing




- To avoid electric shock, turn off EasyKey power before servicing.
- Servicing EasyKey exposes you to high voltage. Shut off power at main circuit breaker before opening enclosure.
- All electrical wiring must be done by a qualified electrician and comply with all local codes and regulations.
- Do not substitute or modify system components as this may impair intrinsic safety.
- Read **Warnings**, page 7.

NOTICE

To avoid damaging circuit board when servicing, wear Part No. 112190 grounding strap on wrist and ground appropriately.

1. Flush system and follow **Pressure Relief Procedure**, page 12, if service time may exceed pot life time and before servicing fluid components.
2. Close main air shutoff valve on air supply line and on ProMix 2KS.

3. Shut off ProMix 2KS power (0 position). FIG. 12.
4. If servicing EasyKey Display, also shut off power at main circuit breaker.

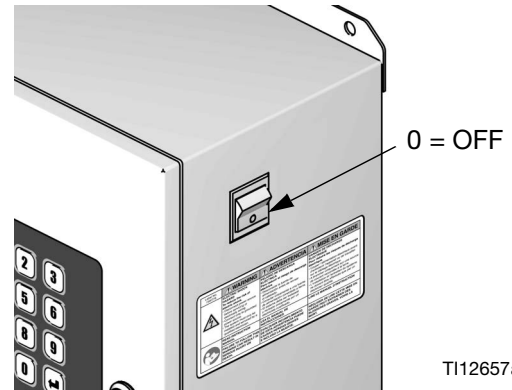

T112657a

FIG. 12: Power Off

After Servicing


After servicing the system, be sure to follow the **Start Up** checklist and procedure in the ProMix 2KS Operation manual.

Servicing EasyKey

Updating Software

To update software, upload new software from your PC using the basic web interface. See manual 313386.


Replacing Display Board or Graphic Display



NOTICE

To avoid damaging circuit board when servicing, wear Part No. 112190 grounding strap on wrist and ground appropriately.


1. Follow **Before Servicing**, page 36.
2. Unlock and open EasyKey door with its key.
3. Note position of all external connections (J4, J5, J6, J7, J8, J9, J10) to display board, then unplug the connectors. See FIG. 7 on page 20.
4. Remove 4 screws (210e) and the display board assembly (210b, 210c). FIG. 13.
5. Disconnect graphic display power cable (J1) from the display board (210c).
6. Separate graphic display (210b) from display board (210c) [connector J2 on back of board].
7. To assemble the new parts, align connector J2 on the display board (210c) with the socket on the graphic display (210b). Press them together. See FIG. 13.
8. Reconnect the graphic display power cable (J1) to the display board (210c).
9. Mount display board assembly with screws (210e).
10. Plug all connectors into display board (210c). FIG. 13. Confirm that the cables do not pinch when opening or closing the door.
11. Locate the battery on the board (see FIG. 7 on page 20). Pull the strip to remove the protective isolator and activate the battery.
12. Close and lock EasyKey door with key.
13. Turn EasyKey power on to test display board.

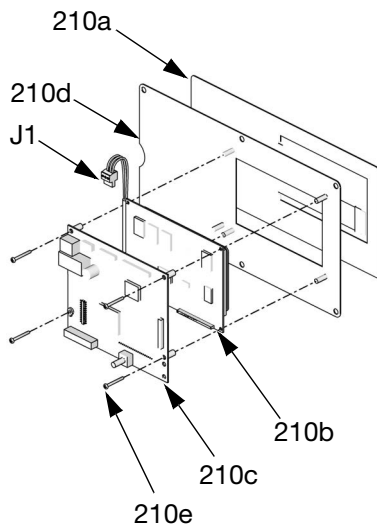

T112554a


FIG. 13: Display Interface

Replacing Power Supply




1. Follow **Before Servicing**, page 36.
2. Unlock and open EasyKey door with its key.
3. Note position of power supply input and output wires. See **EasyKey Electrical Schematic**, page 31. Disconnect wires from power supply (214f). See FIG. 14.
4. Remove power supply from din rail.
5. Install new power supply (214f). Reconnect input and output wires in positions noted in step 3.
6. Close and lock EasyKey door with key.
7. Turn on power at main circuit breaker.
8. Turn EasyKey power on to test operation.

Replacing Line Filter




1. Follow **Before Servicing**, page 36.
2. Unlock and open EasyKey door with its key.
3. Note position of line filter input and output wires. See **EasyKey Electrical Schematic**, page 31. Disconnect wires and remove line filter (214l) from bracket (214m). See FIG. 14.
4. Install new line filter (214l). Reconnect wires in positions noted in step 3.
5. Close and lock EasyKey door with key.
6. Turn on power at main circuit breaker.
7. Turn EasyKey power on to test operation.

Replacing Power Switch




1. Follow **Before Servicing**, page 36.
2. Unlock and open EasyKey door with its key.
3. Note position of power switch wires. See **EasyKey Electrical Schematic**, page 31. Disconnect wires and remove switch (202, FIG. 14).
4. Install new power switch (202). Reconnect wires in positions noted in step 3.
5. Close and lock EasyKey door with key.
6. Turn on power at main circuit breaker.
7. Turn EasyKey power on to test operation.

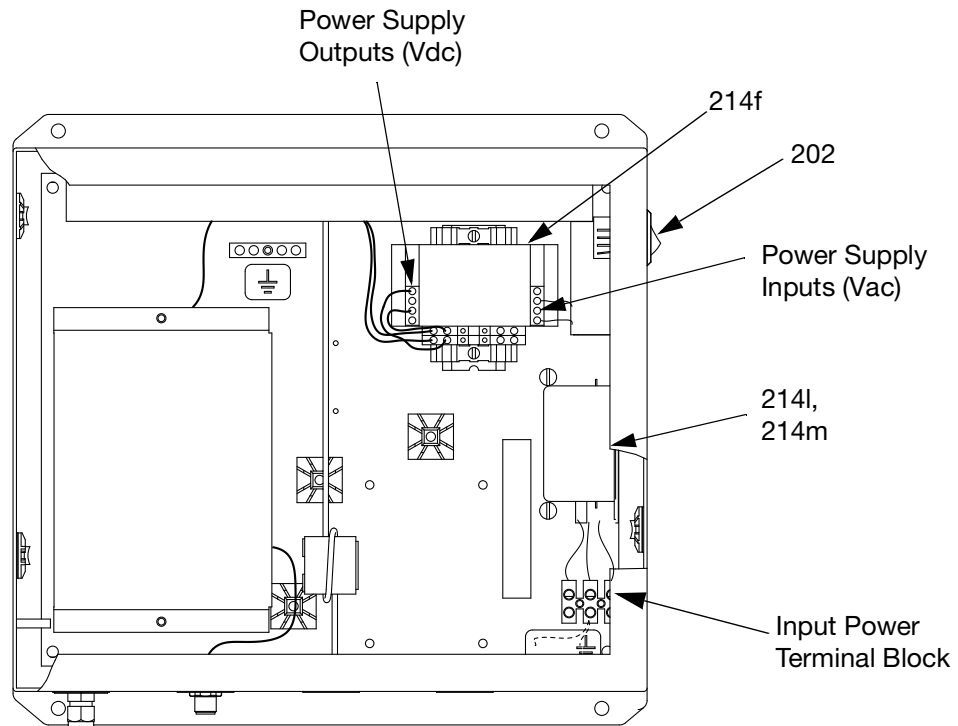

T112578b

FIG. 14: Power Supply

Replacing Barrier Board




NOTICE

To avoid damaging circuit board when servicing, wear Part No. 112190 grounding strap on wrist and ground appropriately.

1. Follow **Before Servicing**, page 36.
2. Unlock and open EasyKey door with its key.
3. Disconnect the cables and connectors from J1, J4, and J5. FIG. 16.
4. Using the security tool provided (Part No. 122239), remove 2 screws (214k) and the cover (214b). See FIG. 15.
5. Noting their location, remove 5 screws (214g, 214h) from the barrier board (214a). Do not remove the screw noted in FIG. 16. Remove board.
6. Apply thermal compound to the heatsink (Z) on the back of the new barrier board (214a). See FIG. 16.
7. Install the new barrier board with the 5 screws (214g, 214h).

8. Install the cover (214b) with 2 screws (214k), using the security tool.
9. Connect cables to J1, J4, and J5.
10. Close and lock EasyKey door with key.
11. Turn on power at main circuit breaker.
12. Turn EasyKey power on to test operation.

Replacing Barrier Board Fuses



| Fuse | Part No. | Description |
|--------|----------|--|
| F1, F2 | 114788 | Power In Fuses; 2 amp, time lag |
| F3, F4 | 15D979 | Power Out Fuses; 0.4 amp, quick acting |

1. Follow **Replacing Barrier Board**, steps 1-4.
2. Remove the fuse (F1, F2, F3, or F4) from its fuse holder. FIG. 16.
3. Snap new fuse into holder.
4. Follow **Replacing Barrier Board**, steps 8-12.



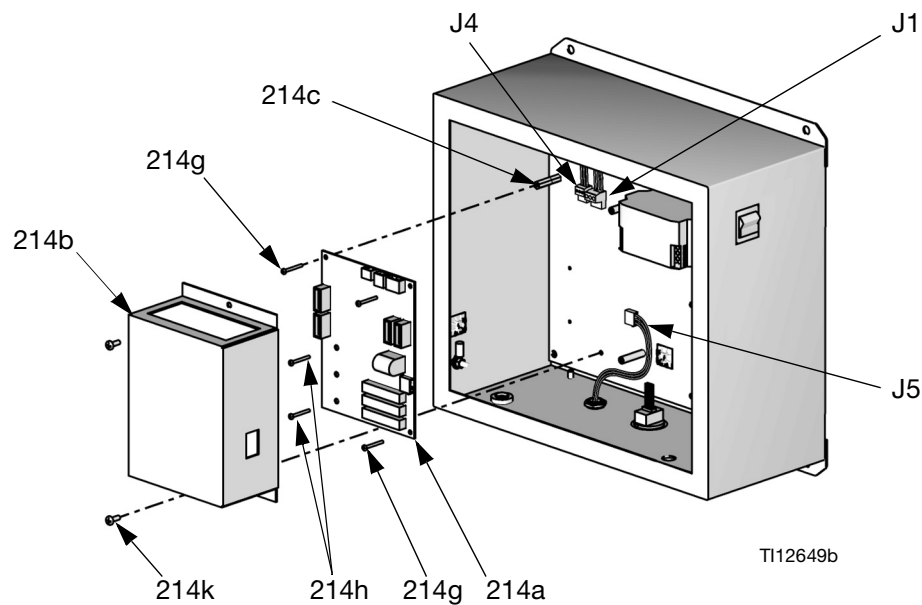


FIG. 15: Replacing Barrier Board

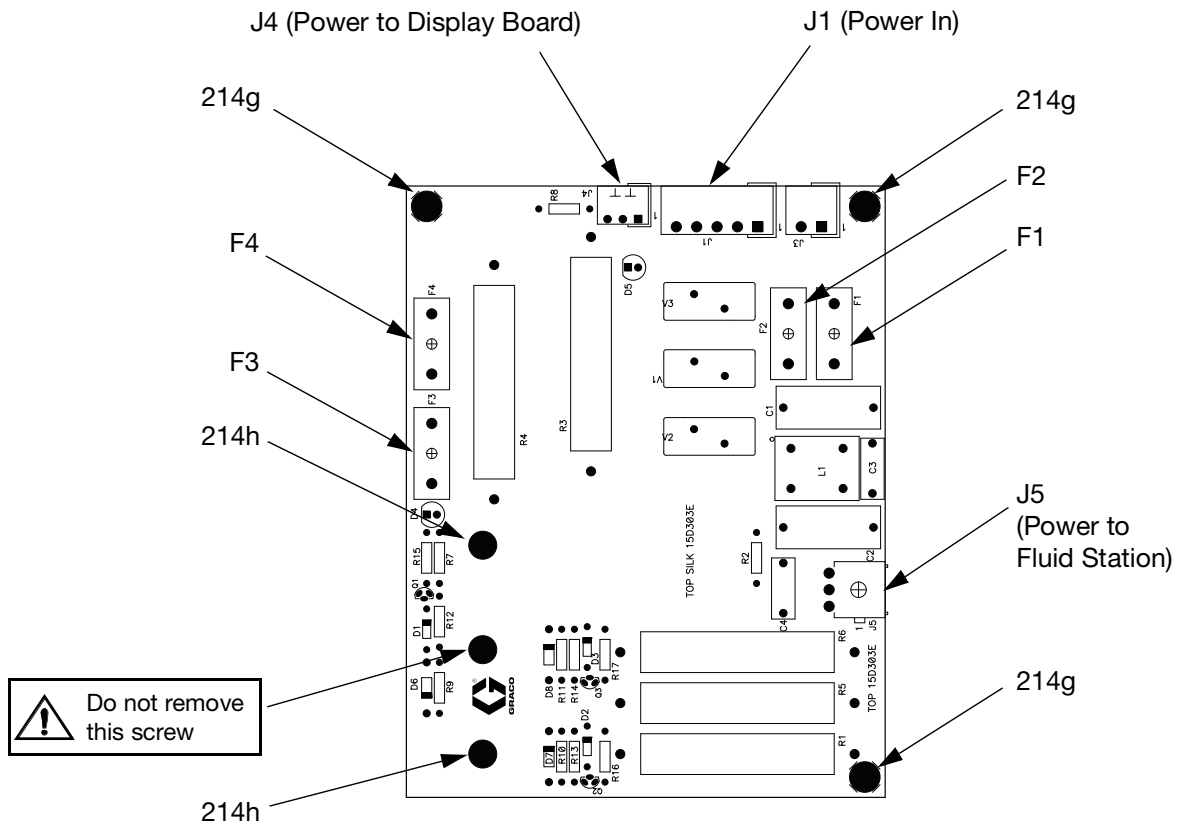


Front of Barrier Board, showing Fuses and Connectors

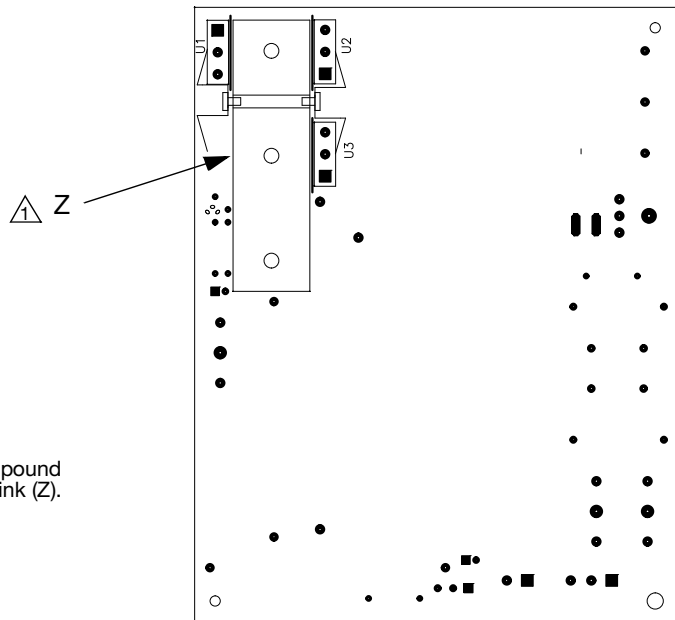

Back of Barrier Board, showing Heatsink (Z)

FIG. 16: Barrier Board Connectors and Fuses

Replacing Air Filter Element

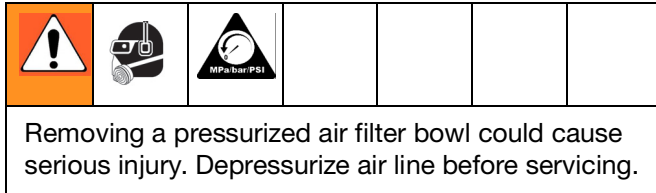

Check the 5 micron air manifold filter daily and replace element (317a, Part No. 15D909) as needed.

1. Close main air shutoff valve on air supply line and on unit. Depressurize air line.
2. Remove filter cover (A). See FIG. 17.
3. Unscrew filter bowl (B).
4. Remove and replace element (317a).
5. Screw filter bowl (B) on securely. Install cover (A).


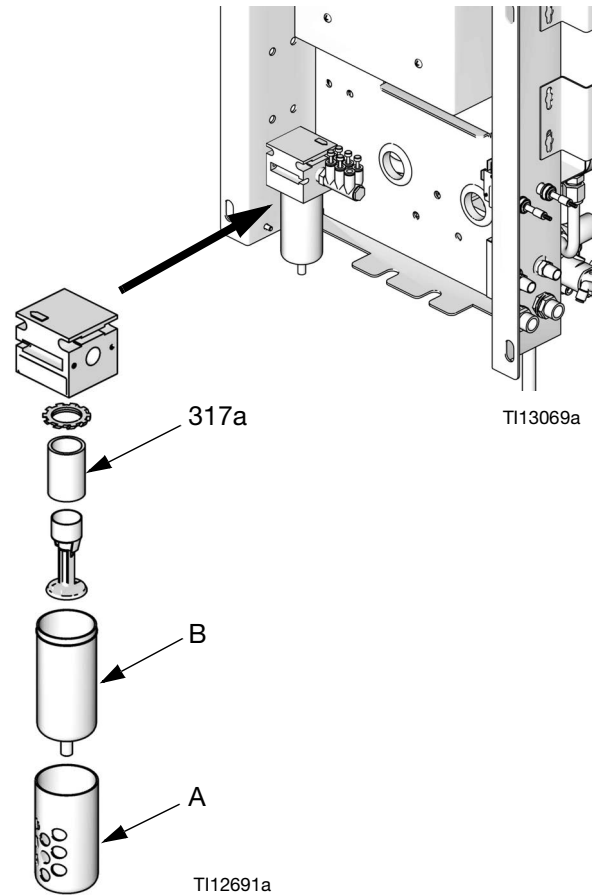


FIG. 17: Replacing Air Filter Element


Wall Mount Fluid Station

Preparation



1. Follow **Before Servicing**, page 36.
2. Loosen the 4 screws (307), then remove the Wall Mount Fluid Station cover (322). FIG. 20.

Servicing Air Flow Switch



1. Follow **Preparation**, above.
2. See FIG. 18. Disconnect the air flow switch (AFS) wires from J1 pins 1-4 on the Control Board. Disconnect the air lines. Remove the air flow switch and hardware from the side of the fluid station.
3. Install a new air flow switch. Connect the wires to J1 pins 1-4. Reconnect the air lines.



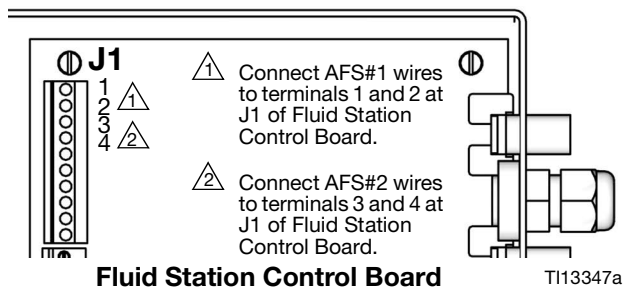


FIG. 18: Servicing Air Flow Switch

Servicing GFB Pressure Switch

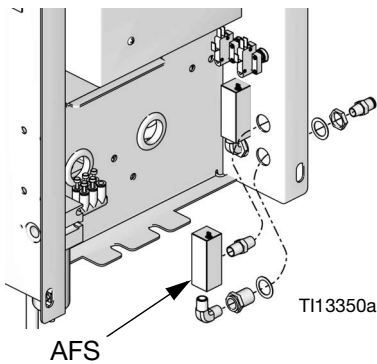

1. Follow **Preparation**, page 42.
2. See FIG. 19. Disconnect the GFB pressure switch (PS) wires from J1 pins 7-10 on the Control Board. Disconnect the air line. Remove the switch and hardware from the side of the fluid station.
3. Install a new GFB pressure switch. Connect the wires to J1 pins 7-10. Reconnect the air line.
4. To repair the gun flush box, see manual 312784.




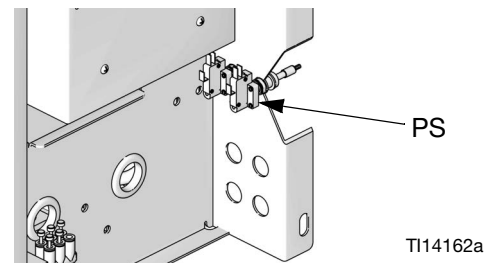


FIG. 19: Servicing GFB Pressure Switch

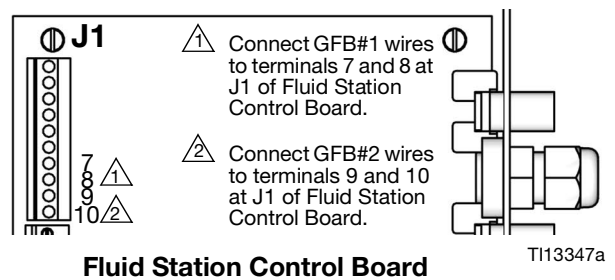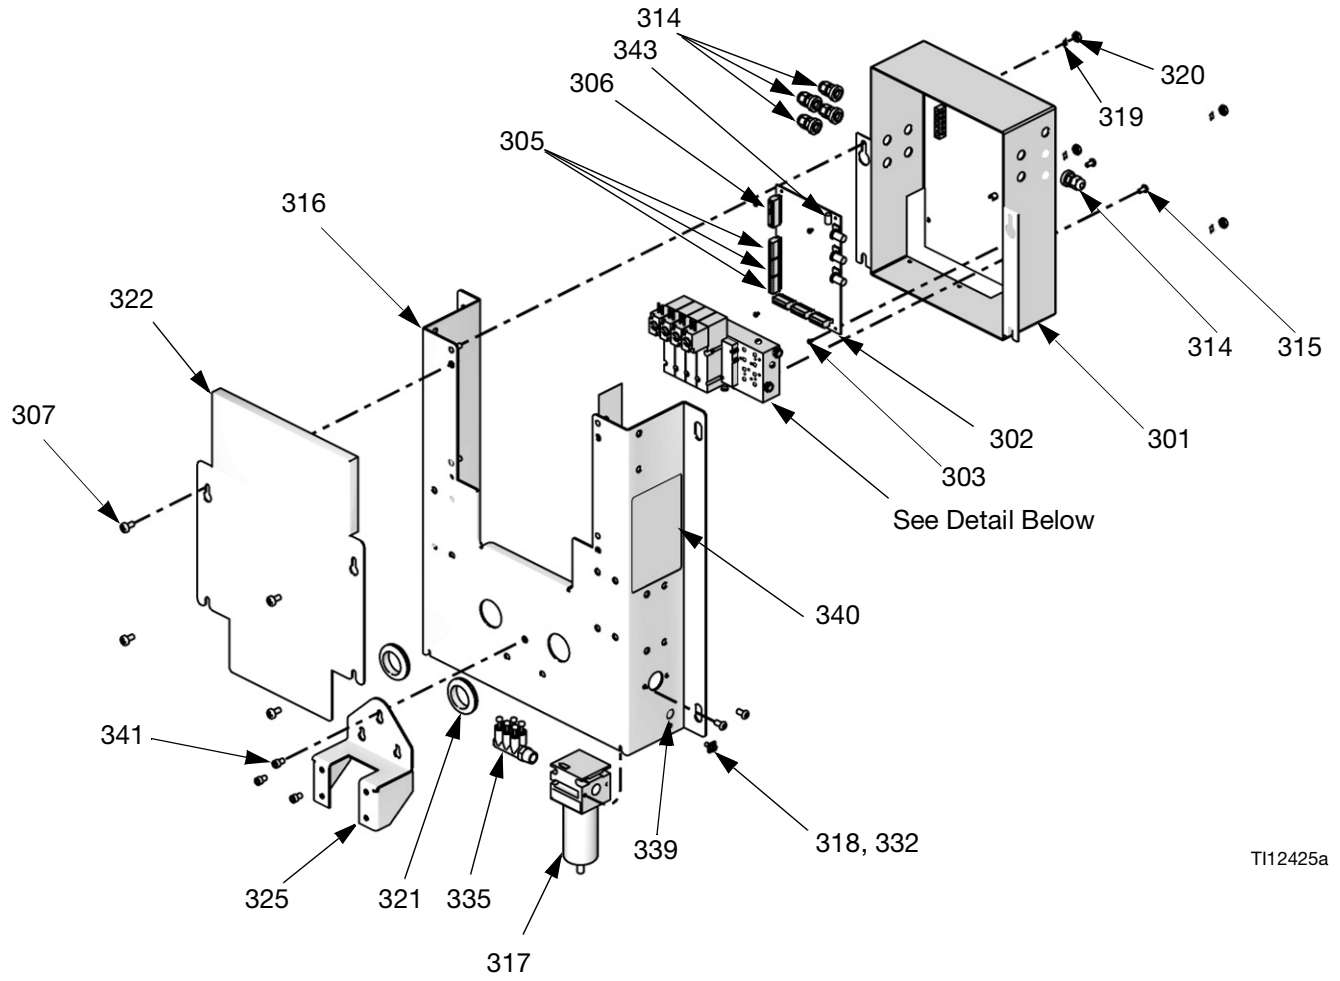


TI12425a

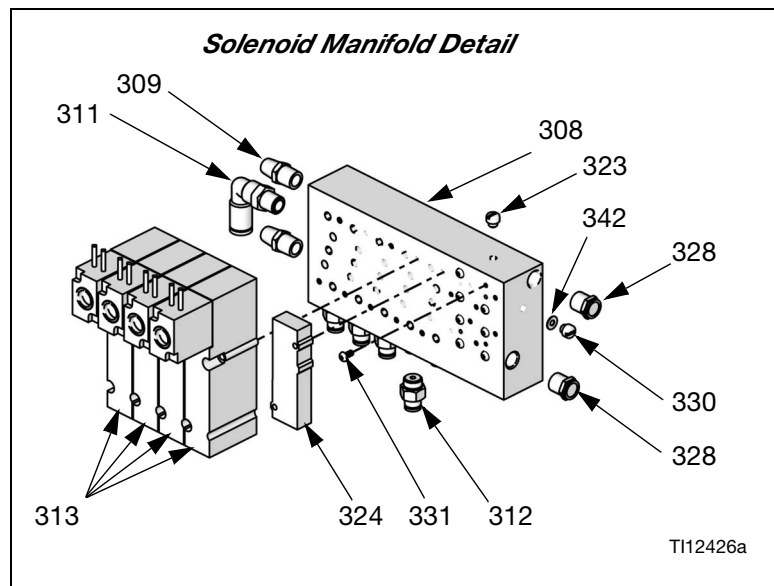

TI12426a

FIG. 20: Wall Mount Fluid Station

Replacing Control Board



NOTICE

To avoid damaging circuit board when servicing, wear Part No. 112190 grounding strap on wrist and ground appropriately.

1. Follow **Preparation**, page 42.
2. Disconnect fiber optic wires (J4, J6) and all cables (J1, J3, J5, J7, J8, J9, J12, J13, J14, J15) from control board (302). FIG. 21.
3. Remove 4 screws (303). Remove connector jam nuts on the outside of the enclosure (301). Remove control board (302). FIG. 20.
4. Install new control board (302) with 4 screws (303).
5. Connect cables to control board (302). FIG. 21. Insert fiber optic cable connectors into board connectors (J4, J6), matching blue with blue, black with black, and hand-tighten connectors. Do not pinch or kink the fiber optic cables; the cables require a 2 in. (51 mm) bend radius.
6. Replace the cover (322).
7. Turn EasyKey power on to test operation.

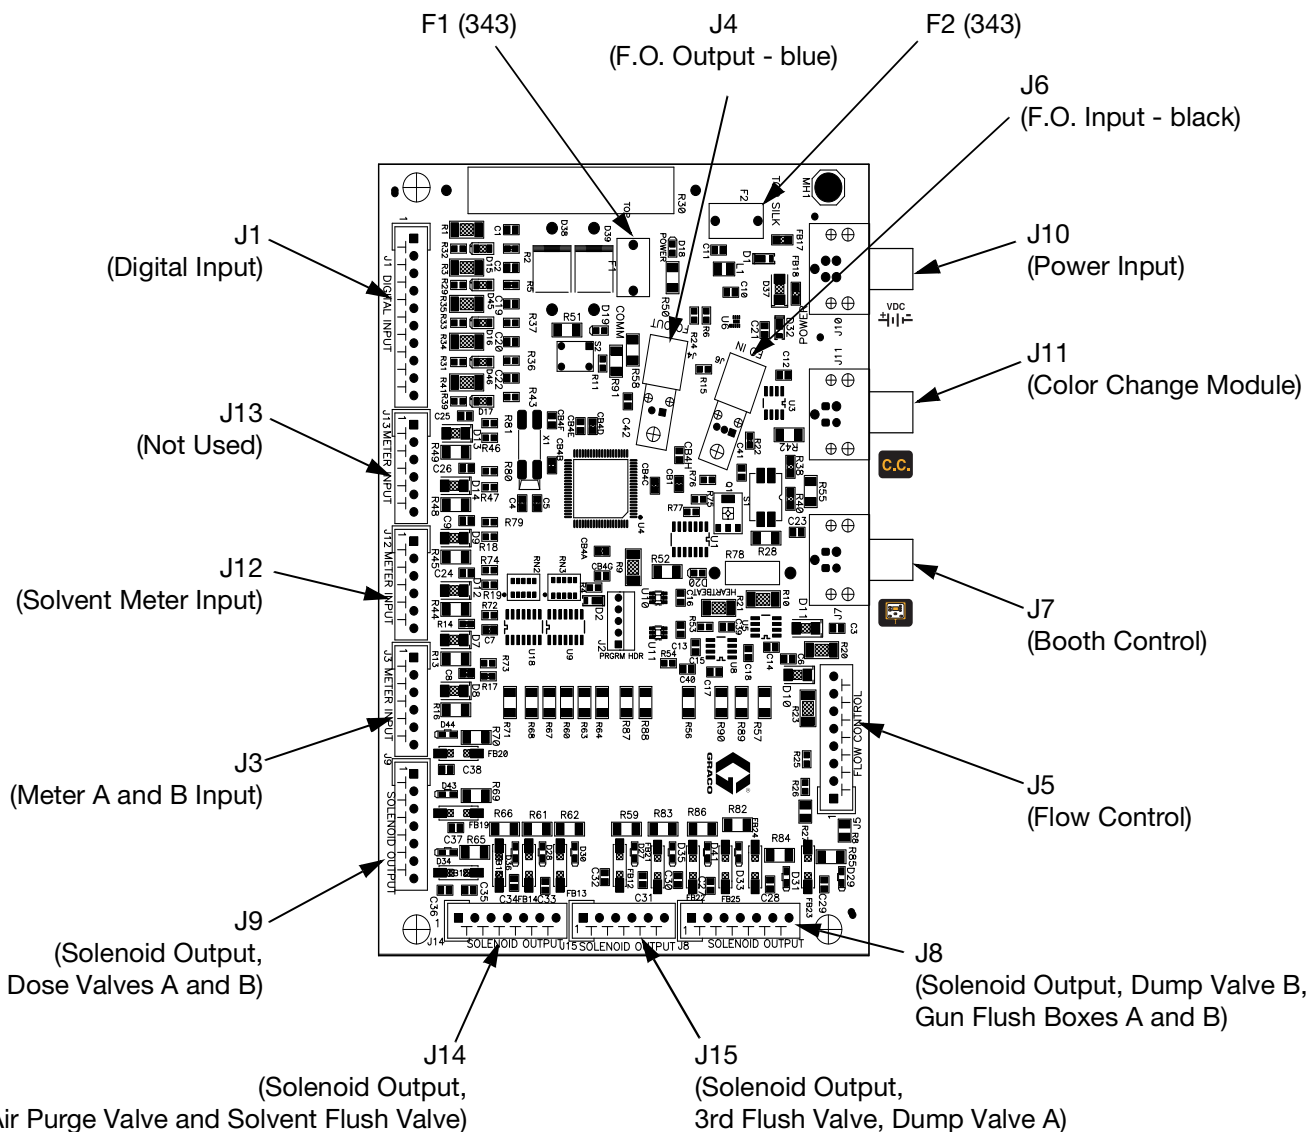


FIG. 21: 255765 Fluid Station Control Board

Replacing Solenoids

The Wall Mount Fluid Station has a minimum of 4 solenoids. If you have options installed, you have additional (optional) solenoids for each. See Table 9 and **Schematic Diagrams**, page 30.



To replace a single solenoid:

1. Follow **Preparation**, page 42, and shut off power at main circuit breaker.
2. Disconnect 2 solenoid wires (N) from control board (302). See FIG. 22 and **System Electrical Schematic**, page 33.
3. Unscrew 2 screws (P) and remove solenoid (313).
4. Install new solenoid (313).
5. Connect 2 wires (N) to control board (302). Solenoid wires are polarized (red +, black -). Refer to **System Electrical Schematic**, page 33.
6. Replace the cover (322).


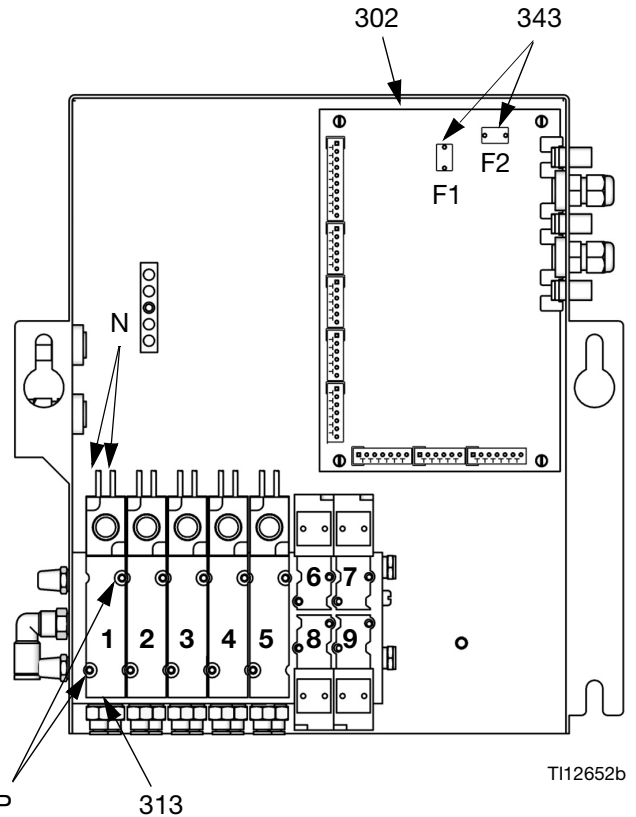


FIG. 22: Replacing Solenoids and Fuse

Replacing Control Board Fuses



Replacing a fuse (F1 or F2) with a non-Graco fuse voids the IS system safety approval.


| Fuse | Part No. | Description |
|--------|----------|----------------------------------|
| F1, F2 | 123690 | Fuse; 125 mA, intrinsically safe |

1. Follow **Preparation**, page 42.
2. Locate fuse F1 or F2 on the control board. See FIG. 22. Remove the screw and metal strap.
3. Pull the fuse away from the board.
4. Install the new fuse (343).
5. Replace the cover (322).

Table 9: Wall Panel Solenoids

| Solenoid | Actuates | Fuse |
|-----------------|---------------------|------|
| <i>Standard</i> | | |
| 1 | Dose Valve A | F1 |
| 2 | Dose Valve B | F1 |
| 3 | Air Purge Valve | F1 |
| 4 | Solvent Purge Valve | F1 |
| <i>Optional</i> | | |
| 5 | Third Flush Valve | F2 |
| 6 | Dump Valve A | F2 |
| 7 | Dump Valve B | F2 |
| 8 | Gun Flush Box 1 | F2 |
| 9 | Gun Flush Box 2 | F2 |

Servicing Flow Meters



Coriolis Meter

1. Follow **Before Servicing**, page 36.
2. To remove and service the Coriolis meter, see manual 313599.

G3000, G3000HR, or G3000A Meter

Removal

1. Follow **Before Servicing**, page 36.
2. Unscrew cable connector (CC) from meter (M). FIG. 23.
3. Unscrew four 1/4-20 screws (MS) holding the meter mounting plate (MP). FIG. 23.
4. Unscrew fluid line from meter inlet (P).
5. Unscrew meter (M) from dose valve connector (H). FIG. 23.
6. Service meter as instructed in the meter manual 308778.

Installation

1. Screw meter (M) securely onto the dose valve connector (H), using a wrench.

NOTE: To avoid leakage, secure the meter (M) to the dose valve connector (H) before connecting it to the fluid station.

2. Secure meter (M) and plate (MP) to fluid station with screws (MS).

NOTE: You must assemble the meter sensor to the meter body before connecting the cable to the sensor for the meter to function properly.

3. Connect meter cable (CC). See FIG. 23.
4. Connect fluid line (P).
5. Calibrate meter as instructed in ProMix Operation manual.


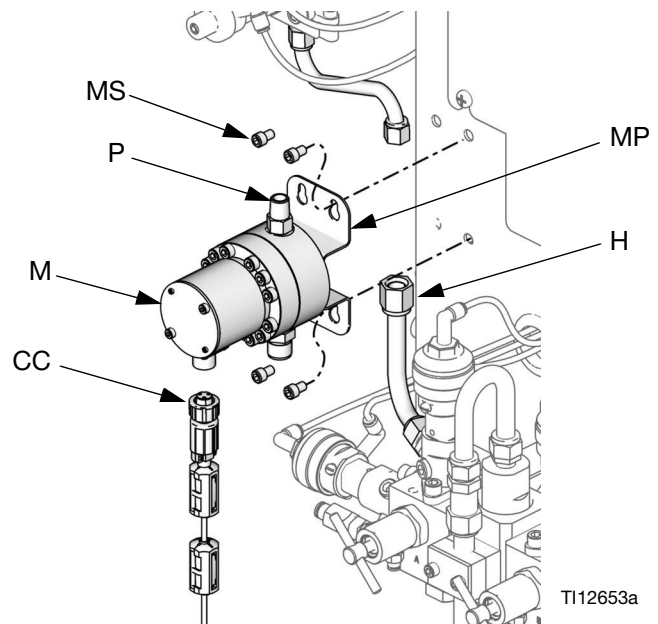


FIG. 23: G3000/G3000HR/G3000A Flow Meters

| Cable | Length |
|--------|-----------------|
| 17C743 | 5 ft (1.52 m) |
| 17C909 | 16 in. (406 mm) |

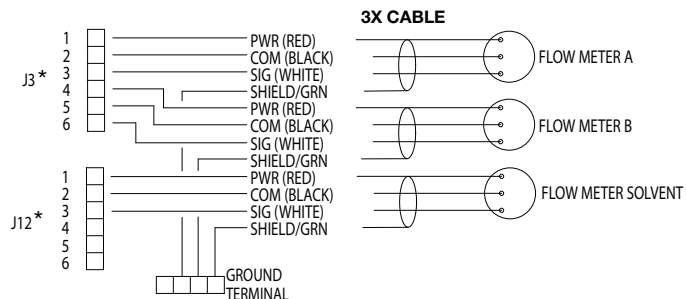

*Connectors on Fluid Station Control Board

FIG. 24: Meter Cable Schematic

Servicing Fluid Manifold




Removal

1. Follow **Servicing Flow Meters, Removal** steps 1-5, page 46.
2. Disconnect air and fluid lines from the manifold (4).
3. Holding onto the fluid manifold (4), loosen the three screws (341) holding the bracket (325) to the fluid station. Lift the fluid manifold (4) and pull it away from the panel. Service as instructed in the Fluid Mix Manifold manual 312781.

Installation

1. Secure the fluid manifold (4) and mounting plate (325) with three screws (341).
2. Install meters. See **Installation** steps 1-3, page 46.
3. Connect air and fluid lines.
4. Calibrate meters as instructed in ProMix Operation manual.

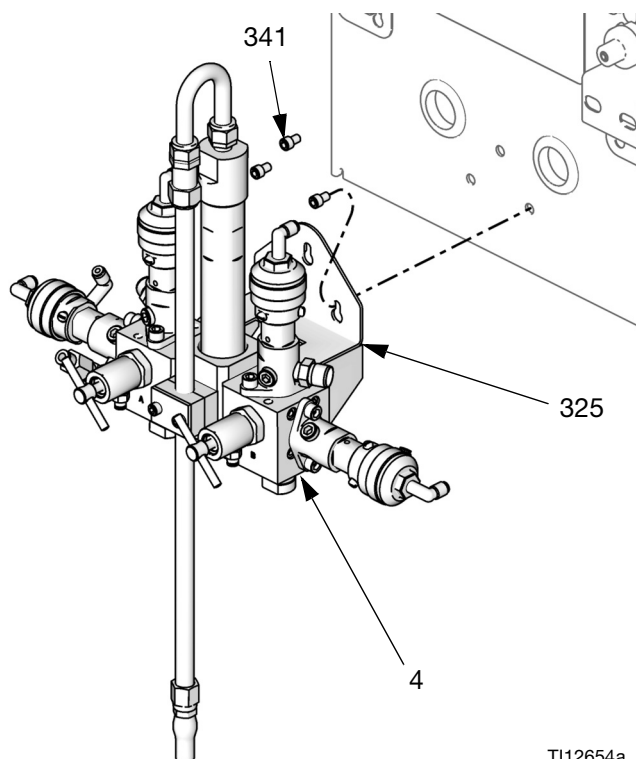

T112654a

FIG. 25: Fluid Manifold

Servicing Color Change Module, Color/Catalyst Valves, and Dump Valves



1. Follow **Before Servicing**, page 36.
2. See manual 312787 for the color change module.
3. See manual 312783 for the color/catalyst valve stacks.
4. See manual 312786 for the dump valve kits.
5. See manual 312782 to service an individual valve.

Parts


Configurator Key

The configured part number for your equipment is printed on the equipment identification labels. See the illustrations below for location of the identification labels. The part number includes one digit from each of the following six categories, depending on the configuration of your system. *The digits in this table do not correspond to ref. nos. in the parts lists or parts drawings.*

| Manual System | Control and Display | A and B Meter | Color Valves | Catalyst Valves | Applicator Handling |
|-----------------|------------------------------|---|---|--|--|
| M | D = EasyKey with LCD Display | 0 = No Meters 1 = G3000 (A and B) 2 = G3000HR (A and B) 3 = 1/8 in. Coriolis (A) and G3000 (B) 4 = G3000 (A) and 1/8 in. Coriolis (B) 5 = 1/8 in. Coriolis (A) and G3000HR (B) 6 = G3000HR (A) and 1/8 in. Coriolis (B) 7 = 1/8 in. Coriolis (A and B) | 0 = No Valves (single color) 1 = Two Valves (low pressure) 2 = Four Valves (low pressure) 3 = Seven Valves (low pressure) 4 = Twelve Valves (low pressure) 5 = Two Valves (high pressure) 6 = Four Valves (high pressure) | 0 = No Valves (single catalyst) 1 = Two Valves (low pressure) 2 = Four Valves (low pressure) 3 = Two Valves (high pressure) | 1 = One Air Flow Switch Kit 2 = Two Air Flow Switch Kits 3 = One Gun Flush Box Kit 4 = Two Gun Flush Box Kits |
| M (acid models) | D = EasyKey with LCD Display | 8 = G3000 (A) and G3000A (B) | 0 = No Valves (no color; need to order acid kit 26A096-26A100; see page 57) | 0 = No Valves (single catalyst) | 1 = One Air Flow Switch Kit 2 = Two Air Flow Switch Kits 3 = One Gun Flush Box Kit 4 = Two Gun Flush Box Kits |

ProMix 2KS Manual System


Part No. MD0001 to MD7634 and MD8001 to MD8004, includes EasyKey with LCD display

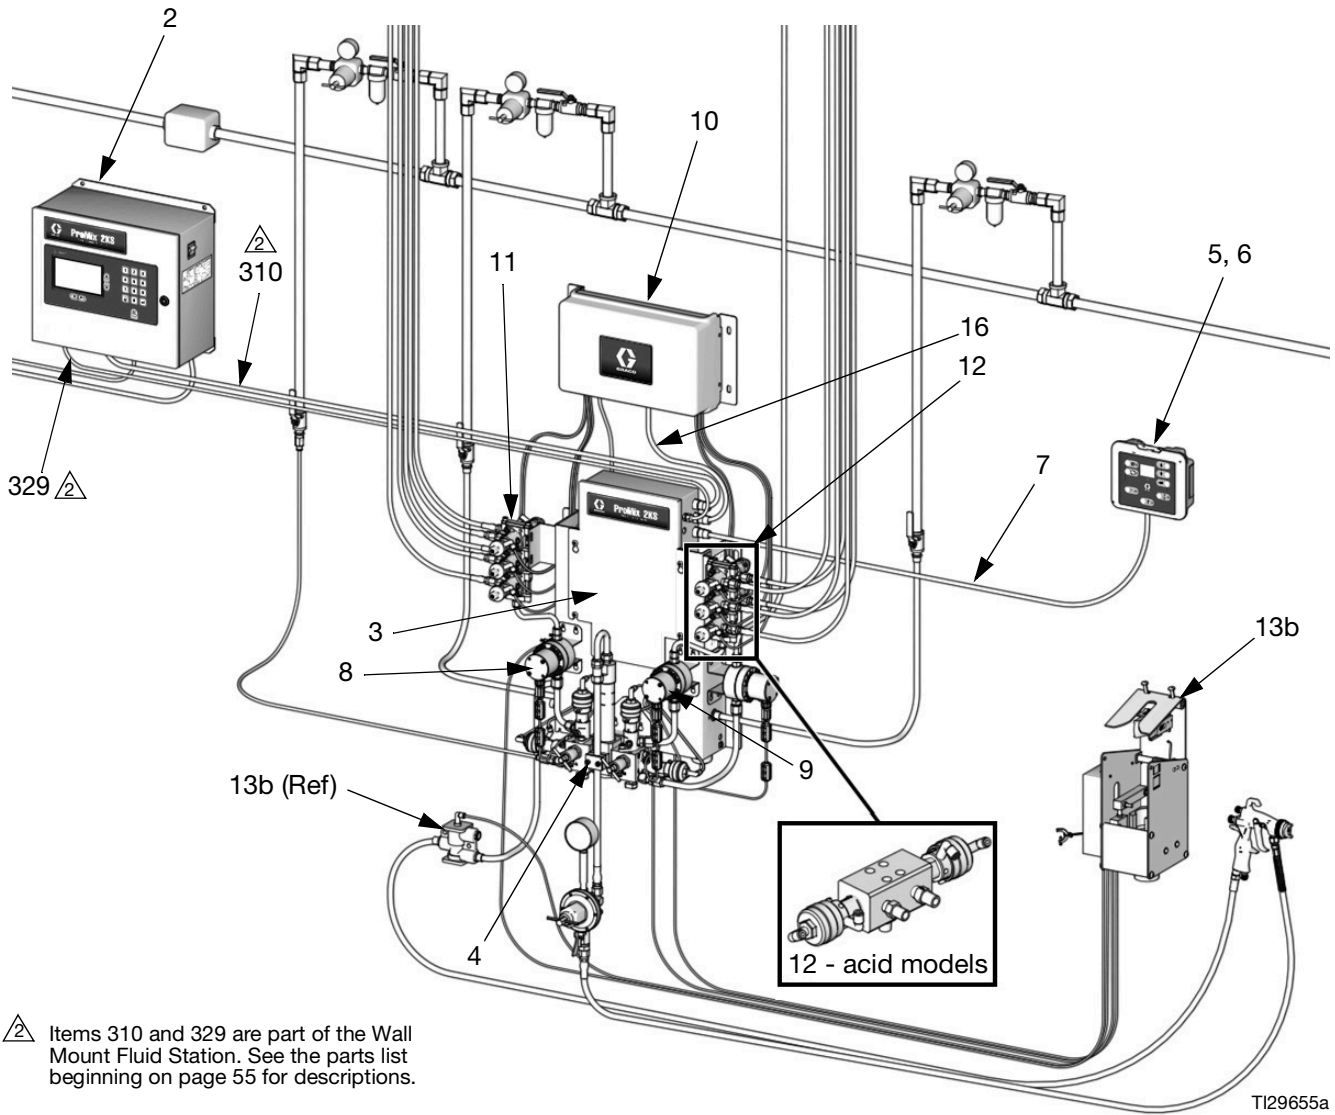

Items 310 and 329 are part of the Wall Mount Fluid Station. See the parts list beginning on page 55 for descriptions.

T129655a

Detail of Air Flow Switch and GFB Pressure Switch



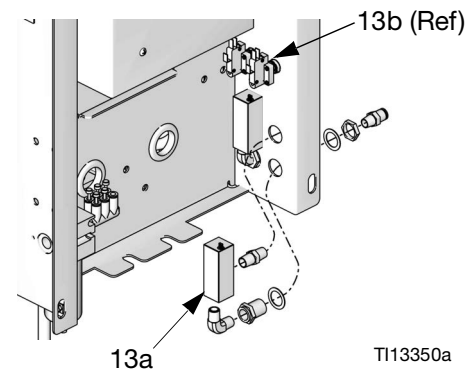


T113350a

| Ref. No. | Configured Digit (see page 48) or part usage | Part No. | Description | Qty |
|----------|--|-------------|---|-------------|
| 2 | D | 277869 | CONTROL/DISPLAY, EasyKey; see page 52 | 1 |
| 3 | standard part | see page 54 | PANEL, fluid | 1 |
| 4 | standard part | 289695 | MANIFOLD, mix; see manual 312781 | 1 |
| | standard part | 24Y548 | ACID MANIFOLD, mix; see manual 312781 | 1 |
| 5 | standard part | 15V350 | BOOTH CONTROL; includes items 6 and 7 | 1 |
| 6 | standard part | 277853 | BRACKET, mounting, booth control | 1 |
| 7 | standard part | 15U533 | CABLE, CAN, intrinsically safe; connects booth control to fluid station; 50 ft (15.25 m) | 1 |
| 8 | | | KIT, flow meter A | |
| | 0 | none | none | 0 |
| | 1 | 15V804 | KIT, G3000 flow meter; see manual 308778 | 1 |
| | 2 | 15V827 | KIT, G3000HR flow meter; see manual 308778 | 1 |
| | 3 | 15V806 | KIT, Coriolis flow meter; see manual 313599 | 1 |
| | 4 | 15V804 | KIT, G3000 flow meter; see manual 308778 | 1 |
| | 5 | 15V806 | KIT, Coriolis flow meter; see manual 313599 | 1 |
| | 6 | 15V827 | KIT, G3000HR flow meter; see manual 308778 | 1 |
| 9 | 7 | 15V806 | KIT, Coriolis flow meter; see manual 313599 | 1 |
| | | | KIT, flow meter B | |
| | 0 | none | none | 0 |
| | 1 | 15V804 | KIT, G3000 flow meter; see manual 308778 | 1 |
| | 2 | 15V827 | KIT, G3000HR flow meter; see manual 308778 | 1 |
| | 3 | 15V804 | KIT, G3000 flow meter; see manual 308778 | 1 |
| | 4 | 15V806 | KIT, Coriolis flow meter; see manual 313599 | 1 |
| | 5 | 15V827 | KIT, G3000HR flow meter; see manual 308778 | 1 |
| 10 | 0 - 6 | see page 56 | MODULE, control, color/catalyst change; see page 56 | see page 56 |
| | -- | see page 57 | ACID MODULE, control, color/catalyst change; see page 57 | see page 57 |
| 11 | 0 - 6 | see page 56 | VALVE STACK, color change; see page 56 | see page 56 |
| | -- | see page 57 | ACID VALVE STACK, color change; see page 57 | see page 57 |
| 12 | 0 - 3 | see page 56 | VALVE STACK, catalyst change; see page 56 | see page 56 |
| | -- | see page 57 | ACID VALVE STACK, catalyst change; see page 57 | see page 57 |
| 13 | | | APPLICATOR HANDLING (AFS or GFB) | |
| 13a | 1 | 15T632 | KIT, air flow switch | 1 |
| | 2 | 15T632 | KIT, air flow switch | 2 |
| 13b | 3 | 15V826 | KIT, gun flush box; see manual 312784 | 1 |
| | 4 | 15V826 | KIT, gun flush box; see manual 312784 | 2 |
| 16 | used with color change only | 15U532 | CABLE, CAN, intrinsically safe; connects color change control module to fluid station; 3 ft (1 m) | 0 or 1 |

EasyKey Controls

277869 EasyKey, with Display

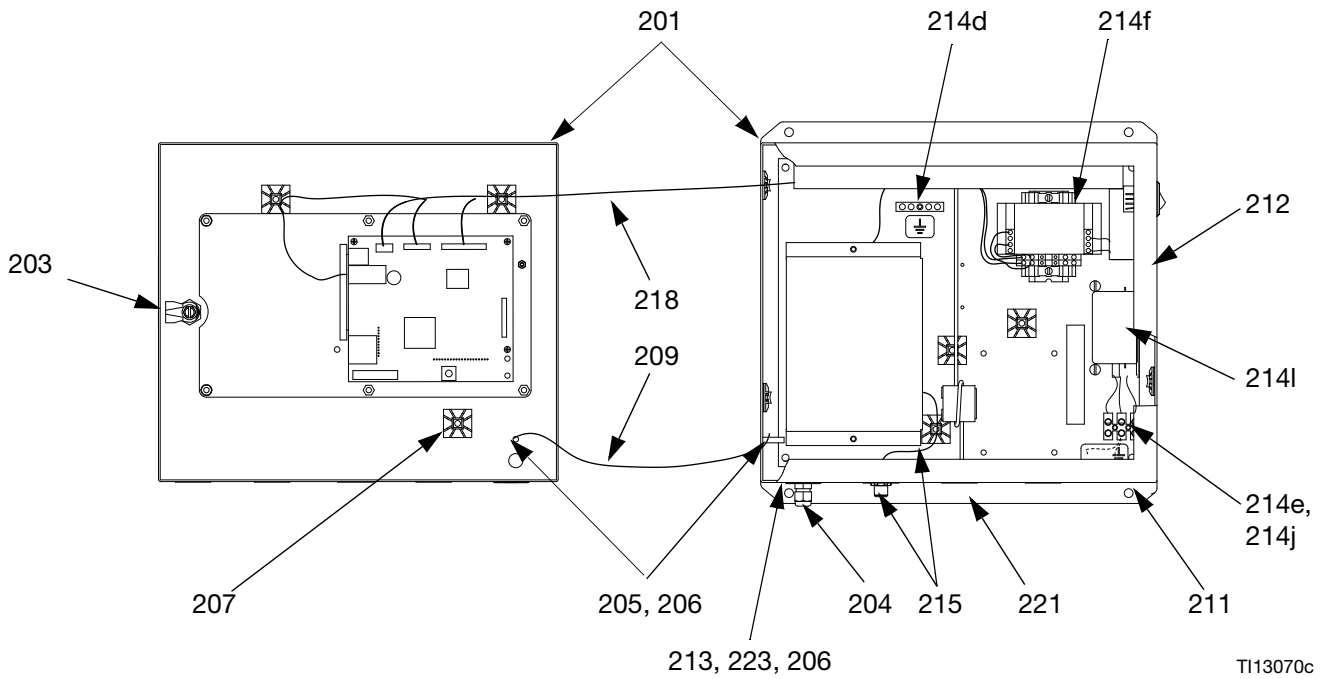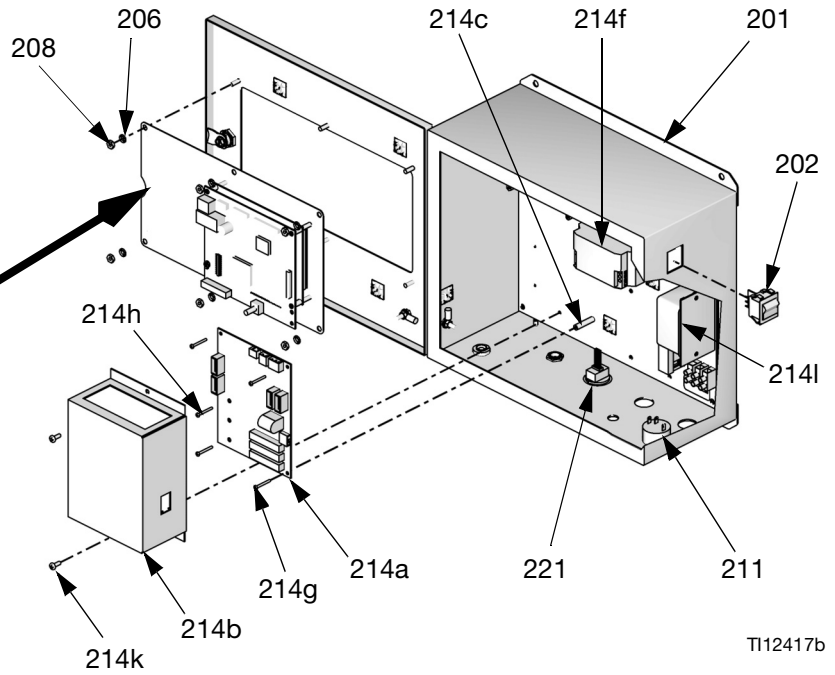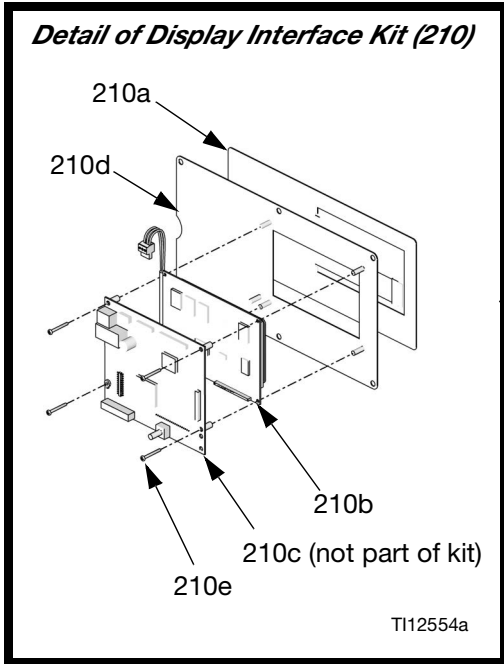

277869 EasyKey, with Display

| Ref. No. | Part No. | Description | Qty |
|----------|----------|---|-----|
| 201 | n/a | CONTROL BOX, with display | 1 |
| 202 | 116320 | SWITCH, power | 1 |
| 203 | n/a | LATCH; includes item 3a | 1 |
| 203a | 117818 | • KEY | 1 |
| 204 | 111987 | CONNECTOR, cord strain relief | 1 |
| 205 | 110911 | NUT, hex; M5 x 0.8 | 4 |
| 206 | 111307 | WASHER, lock, external tooth; M5 | 9 |
| 207 | n/a | HOLDER, tie | 8 |
| 208 | C19293 | NUT, hex | 6 |
| 209 | 194337 | WIRE, grounding, door | 1 |
| 210 | 15X779 | KIT, display, interface; includes items 210a, 210b, 210d, and 210e; does not include 210c | 1 |
| 210a | n/a | • MEMBRANE | 1 |
| 210b | n/a | • GRAPHIC, display | 1 |
| 210c | 255767 | • BOARD, EasyKey display (not part of kit) | 1 |
| 210d | n/a | • PLATE | 1 |
| 210e | n/a | • SCREW; 4-40 x 1 in. (25 mm) | 4 |
| 211 | 15D568 | ALARM | 1 |
| 212▲ | 15W776 | LABEL, warning | 1 |
| 213 | 223547 | GROUND WIRE; 25 ft (7.6 m) | 1 |
| 214 | n/a | PLATE, application; includes items 214a-214m | 1 |
| 214a | 255786 | • BOARD, barrier, IS; (includes fuses 15D979 and 114788, see page 40 for fuse location) | 1 |
| 214b | n/a | • COVER | 1 |
| 214c | 117526 | • SPACER | 3 |
| 214d | 119257 | • BAR, ground | 1 |
| 214e | 114095 | • BLOCK, terminal | 1 |
| 214f | 121314 | • POWER SUPPLY; 24 Vdc; 2A | 1 |
| 214g | n/a | • SCREW, machine, pan-hd; 6-32 x 3/8 in. (10 mm) | 3 |
| 214h | n/a | • SCREW, machine, pan-hd; 6-32 x 1-1/2 in. (38 mm) | 2 |
| 214j | n/a | • SCREW, machine, pan-hd; 8-32 x 3/4 in. (19 mm) | 2 |
| 214k | n/a | • SCREW, machine, pan-hd; 10-24 x 3/8 in. (10 mm) | 11 |

| Ref. No. | Part No. | Description | Qty |
|----------|----------|---|-----|
| 214l | 123823 | • FILTER, line, single-phase; 110/250 V; 3 A | 1 |
| 215 | 15V280 | HARNESS, connection | 1 |
| 216▲ | 15G569 | LABEL, EasyKey inputs | 1 |
| 218 | 15R642 | HARNESS, wire | 1 |
| 220 | n/a | SOFTWARE, application | 1 |
| 221 | 198165 | CONNECTOR, RJ45, with bulkhead fitting | 1 |
| 223 | 116343 | SCREW, ground; M5 x 0.8 | 1 |
| 224 | 15G869 | CABLE, ethernet, CAT5; 6 ft (1.8 m); to make web interface connection to a computer | 1 |

▲ Replacement Danger and Warning labels, tags, and cards are available at no cost.

Parts labeled n/a are not available separately.

Available Cables

| CAN Cables | | |
|--------------------|---------------|----------------------------------|
| Part No. | Length ft (m) | Usage |
| 15U531 | 2 (0.61) | Option |
| 15U532 | 3 (0.92) | Standard color change |
| 15V205 | 6 (1.83) | Option |
| 15V206 | 10 (3.05) | Option |
| 15V207 | 15 (4.57) | Option |
| 15V208 | 25 (7.62) | Option |
| 15U533 | 50 (15.25) | Standard power and booth control |
| 15V213 | 100 (30.50) | Option |
| Fiber Optic Cables | | |
| Part No. | Length | Usage |
| 15D320 | 50 (15.25) | Standard |
| 15G710 | 100 (30.50) | Option |

Wall Mount Fluid Station

NOTE: Parts are shown on page 54, unless noted.

| Ref. No. | Part No. | Description | Qty | Ref. No. | Part No. | Description | Qty |
|----------|----------|---|-----|--|----------|--|-----|
| | | | | 328 | 121072 | MUFFLER | 2 |
| 301 | 256529 | ENCLOSURE | 1 | 329 | 15D320 | CABLE, fiber-optic, twin; 50 ft (15.25 m); see page 50 for location | 1 |
| 302 | 255765 | BOARD, circuit | 1 | | | | |
| 303 | n/a | SCREW, machine, pan hd; 4-40 x 3/16 in. (5 mm) | 4 | 330 | 104644 | PLUG, screw; 10-32 x 5/32 in. (4 mm) | 2 |
| 304 | 119257 | CONNECTOR, bar, ground | 1 | 331 | 121628 | SCREW, machine, self-sealing; 4-40 x 1/4 in. (6 mm) | 8 |
| 305 | 119162 | CONNECTOR, plug, 6-position | 6 | 332 | 223547 | WIRE, ground; 25 ft (7.6 m) | 1 |
| 306 | 116773 | CONNECTOR, plug, 10-position | 1 | 334 | n/a | TUBE, nylon; to connect air manifold (335) to elbow (311) at solenoid manifold (308); 1/4 in. (6 mm) OD; 2.5 ft (0.76 m) | A/R |
| 307 | 113783 | SCREW, machine, pan hd; 1/4-20 x 1/2 in. (13 mm) | 4 | 335 | 15U679 | MANIFOLD, air; 3/8 npt(m) x six 1/4 in. (6 mm) OD tube ports | 1 |
| 308 | 15R668 | MANIFOLD, solenoid, 5 station | 1 | 336 | n/a | TUBE, nylon, green; for control air to turn valves on; 5/32 in. (4 mm) OD; four 2 ft (0.6 m) lengths | A/R |
| 309 | C06061 | MUFFLER | 2 | 337 | n/a | TUBE, nylon, red; for control air to turn valves off; 5/32 in. (4 mm) OD; four 2 ft (0.6 m) lengths | A/R |
| 310 | 15U533 | CABLE, CAN, intrinsically safe; 50 ft (15.25 m); see page 50 for location | 1 | 338 | 16J457 | TUBE, nylon; for purge air supply; 1/4 in. (6 mm) OD; 25 ft (7.6 m); includes caution label 626413 | 1 |
| 311 | 112781 | ELBOW, swivel, 90°; 1/8 npt(m) x 1/4 in. (6 mm) OD tube | 1 | 339▲ | 186620 | LABEL, symbol, ground | 1 |
| 312 | 114263 | FITTING, tube; 1/8 npt(m) x 5/32 in. (4 mm) OD tube | 8 | 340▲ | 15W775 | LABEL, warning | 1 |
| 313 | 121374 | VALVE, solenoid, intrinsically safe; 12 Vdc | 4 | 341 | C19798 | SCREW, cap, socket-hd; 1/4-20 x 3/8 in. (10 mm) | 3 |
| 314 | 111987 | CONNECTOR, cord strain relief | 5 | 342 | 104640 | GASKET | 3 |
| 315 | 114669 | SCREW, machine, phillips pan hd; M5 x 0.8; 10 mm | 2 | 343◆ | 123690 | FUSE; 125 mA | 2 |
| 316 | n/a | PLATE, mounting | 1 | ▲ Replacement Danger and Warning labels, tags, and cards are available at no cost. | | | |
| 317 | 114124 | FILTER, air; 3/8 npt; includes 317a | 1 | ◆ Replacing the fuse with a non-Graco fuse voids the IS system safety approval. | | | |
| 317a | 15D909 | • ELEMENT, filter; 5 micron | 1 | Parts labeled n/a are not available separately. | | | |
| 318 | 116343 | SCREW, ground | 1 | | | | |
| 319 | 100985 | WASHER, lock, external tooth; 1/4 | 4 | | | | |
| 320 | 101345 | NUT, hex, jam; 1/4-20 | 4 | | | | |
| 321 | 120685 | GROMMET | 2 | | | | |
| 322 | 15U507 | COVER, enclosure | 1 | | | | |
| 323 | 100139 | PLUG, pipe; 1/8 npt | 2 | | | | |
| 324 | 552183 | PLATE, blanking | 1 | | | | |
| 325 | 15U510 | BRACKET, valve mount | 1 | | | | |
| 327 | n/a | COVER, fluid station | 1 | | | | |

Color Change Accessory Kits

Low Pressure Color Change Kits

| Kit Part No. | Kit Description | Control Module (10; see 312787) | Color Change Valve Stack (11; see 312783) | Catalyst Change Valve Stack (12; see 312783) |
|--------------|---------------------|---------------------------------|---|--|
| 256581 | 2 color | 277752 | 15V812 | none |
| 256582 | 4 color | 277753 | 15V813 | none |
| 256583 | 7 color | 277754 | 15V814 | none |
| 256584 | 12 color | 277755 | 15V815 | none |
| 256585 | 2 color/2 catalyst | 277756 | 15V812 | 15V812 |
| 256586 | 4 color/2 catalyst | 277757 | 15V813 | 15V812 |
| 256587 | 4 color/4 catalyst | 277771 | 15V813 | 15V813 |
| 256588 | 7 color/2 catalyst | 277758 | 15V814 | 15V812 |
| 256589 | 7 color/4 catalyst | 277772 | 15V814 | 15V813 |
| 256590 | 12 color/2 catalyst | 277759 | 15V815 | 15V812 |
| 256591 | 12 color/4 catalyst | 277773 | 15V815 | 15V813 |
| 256592 | 13-18 color | 278113 | 256293 | none |
| 256593 | 13-24 color | 278114 | 15V815 | none |
| 256594 | 13-30 color | 277773 | 256305 | none |
| 256595 | 1 catalyst/1 flush | 278095 | none | 256994 |

High Pressure Color Change Kits (non-acid systems)

| Kit Part No. | Description | Control Module (10; see 312787) | Color Change Valve Stack (11; see 312783) | Catalyst Change Valve Stack (12; see 312783) |
|--------------|---------------------|---------------------------------|---|--|
| 256596 | 2 color | 277752 | 15V816 | none |
| 256597 | 4 color | 277753 | 15V817 | none |
| 256598 | 7 color | 277754 | 256343 | none |
| 256599 | 12 color | 277755 | 256348 | none |
| 256600 | 2 color/2 catalyst | 277756 | 15V816 | 15V816 |
| 256601 | 4 color/2 catalyst | 277757 | 15V817 | 15V816 |
| 256602 | 4 color/4 catalyst | 277771 | 15V817 | 15V817 |
| 256603 | 7 color/2 catalyst | 277758 | 256343 | 15V816 |
| 256604 | 7 color/4 catalyst | 277772 | 256343 | 15V817 |
| 256605 | 12 color/2 catalyst | 277759 | 256348 | 15V816 |
| 256606 | 12 color/4 catalyst | 277773 | 256348 | 15V817 |
| 256607 | 13-18 color | 278113 | 256342 | none |
| 256608 | 13-24 color | 278114 | 256348 | none |
| 256609 | 13-30 color | 277773 | 256354 | none |
| 256610 | 1 catalyst/1 flush | 278095 | none | 256995 |

High Pressure Color Change Kits (acid systems)

| Kit Part No. | Description | Control Module (10; see 312787) | Color Change Valve Stack (11; see 312783) | Acid Dump Valve Kit (see 312786) |
|---------------------|----------------------------|--|--|---|
| 26A096 | no color change/1 catalyst | 278095 | none | 17L060 |
| 26A097 | 2 color/1 catalyst | 277879 | 15V816 | 17L060 |
| 26A098 | 4 color/1 catalyst | 277880 | 15V817 | 17L060 |
| 26A099 | 7 color/1 catalyst | 277881 | 256343 | 17L060 |
| 26A100 | 12 color/1 catalyst | 277882 | 256348 | 17L060 |

Technical Data

| | |
|---|--|
| Maximum fluid working pressure | <i>Base system:</i> 4000 psi (27.58 MPa, 275.8 bar) <i>Low pressure color change:</i> 300 psi (2.07 MPa, 20.6 bar) <i>High pressure color change:</i> 3000 psi (21 MPa, 210 bar) <i>Coriolis meter:</i> 2300 psi (15.86 MPa, 158.6 bar) |
| Maximum working air pressure | 100 psi (0.7 MPa, 7 bar) |
| Air supply | 75 - 100 psi (0.5 - 0.7 MPa, 5.2 - 7 bar) |
| Air filtration for air logic and purge air (Graco-supplied). | 5 micron (minimum) filtration required; clean and dry air |
| Air filtration for atomizing air (user-supplied) | 30 micron (minimum) filtration required; clean and dry air |
| Mixing ratio range. | 0.1:1- 30:1* |
| On-ratio accuracy. | up to \pm 1%, user selectable |
| Fluids handled | one or two component: <ul style="list-style-type: none"> • solvent and waterborne paints • polyurethanes • epoxies • acid catalyzed varnishes • moisture sensitive isocyanates |
| Viscosity range of fluid | 20- 5000 cps* |
| Fluid filtration (user-supplied). | 100 mesh minimum |
| Fluid flow rate range* | |
| G3000, G250, G3000A Meter | 75 - 3800 cc/min. (0.02-1.00 gal./min.) |
| G3000HR, G250HR Meter | 38 - 1900 cc/min. (0.01-0.50 gal./min.) |
| Coriolis Meter. | 20 - 3800 cc/min. (0.005-1.00 gal./min.) |
| S3000 Solvent Meter (accessory) | 38 - 1900 cc/min. (0.01-0.50 gal./min.) |
| Fluid inlet sizes | |
| Flow Meter | 1/4 npt(f) |
| Dose Valve/Color Valve Adapters | 1/4 npt(f) |
| Fluid outlet size (static mixer). | 1/4 npt(f) |
| External Power Supply Requirements | 85 - 250 Vac, 50/60 Hz, 2 amps maximum draw 15 amp maximum circuit breaker required 8 to 14 AWG power supply wire gauge |
| Operating temperature range | 41- 122° F (5-50° C) |
| Environmental Conditions Rating. | indoor use, pollution degree (2), installation category II |
| Noise Level | |
| Sound pressure level | below 70 dBA |
| Sound power level | below 85 dBA |
| Wetted parts. | 303, 304 SST, Tungsten carbide (with nickel binder), perfluoroelastomer; PTFE |
| Wetted materials on acid models (MD8001 - MD8004). | 316, 17-4 SST; PEEK, perfluoroelastomer; PTFE |

* Dependent on programmed K-factor and application. The maximum allowable flow meter pulse frequency is 425 Hz (pulses/sec). For more detailed information on viscosities, flow rates, or mixing ratios, consult your Graco distributor.

See individual component manuals for additional technical data.

Graco Standard Warranty

Graco warrants all equipment referenced in this document which is manufactured by Graco and bearing its name to be free from defects in material and workmanship on the date of sale to the original purchaser for use. With the exception of any special, extended, or limited warranty published by Graco, Graco will, for a period of twelve months from the date of sale, repair or replace any part of the equipment determined by Graco to be defective. This warranty applies only when the equipment is installed, operated and maintained in accordance with Graco's written recommendations.

This warranty does not cover, and Graco shall not be liable for general wear and tear, or any malfunction, damage or wear caused by faulty installation, misapplication, abrasion, corrosion, inadequate or improper maintenance, negligence, accident, tampering, or substitution of non-Graco component parts. Nor shall Graco be liable for malfunction, damage or wear caused by the incompatibility of Graco equipment with structures, accessories, equipment or materials not supplied by Graco, or the improper design, manufacture, installation, operation or maintenance of structures, accessories, equipment or materials not supplied by Graco.

This warranty is conditioned upon the prepaid return of the equipment claimed to be defective to an authorized Graco distributor for verification of the claimed defect. If the claimed defect is verified, Graco will repair or replace free of charge any defective parts. The equipment will be returned to the original purchaser transportation prepaid. If inspection of the equipment does not disclose any defect in material or workmanship, repairs will be made at a reasonable charge, which charges may include the costs of parts, labor, and transportation.

THIS WARRANTY IS EXCLUSIVE, AND IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.

Graco's sole obligation and buyer's sole remedy for any breach of warranty shall be as set forth above. The buyer agrees that no other remedy (including, but not limited to, incidental or consequential damages for lost profits, lost sales, injury to person or property, or any other incidental or consequential loss) shall be available. Any action for breach of warranty must be brought within two (2) years of the date of sale.

GRACO MAKES NO WARRANTY, AND DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IN CONNECTION WITH ACCESSORIES, EQUIPMENT, MATERIALS OR COMPONENTS SOLD BUT NOT MANUFACTURED BY GRACO. These items sold, but not manufactured by Graco (such as electric motors, switches, hose, etc.), are subject to the warranty, if any, of their manufacturer. Graco will provide purchaser with reasonable assistance in making any claim for breach of these warranties.

In no event will Graco be liable for indirect, incidental, special or consequential damages resulting from Graco supplying equipment hereunder, or the furnishing, performance, or use of any products or other goods sold hereto, whether due to a breach of contract, breach of warranty, the negligence of Graco, or otherwise.

FOR GRACO CANADA CUSTOMERS

The Parties acknowledge that they have required that the present document, as well as all documents, notices and legal proceedings entered into, given or instituted pursuant hereto or relating directly or indirectly hereto, be drawn up in English. Les parties reconnaissent avoir convenu que la rédaction du présente document sera en Anglais, ainsi que tous documents, avis et procédures judiciaires exécutés, donnés ou intentés, à la suite de ou en rapport, directement ou indirectement, avec les procédures concernées.

Graco Information

For the latest information about Graco products, visit www.graco.com.

For patent information, see www.graco.com/patents.

TO PLACE AN ORDER, contact your Graco distributor or call to identify the nearest distributor.

Toll Free Phone Number: 1-800-328-0211

All written and visual data contained in this document reflects the latest product information available at the time of publication. Graco reserves the right to make changes at any time without notice.

Original instructions. This manual contains English. MM 312777

Graco Headquarters: Minneapolis

International Offices: Belgium, China, Japan, Korea

GRACO INC. AND SUBSIDIARIES • P.O. BOX 1441 • MINNEAPOLIS MN 55440-1441 • USA
Copyright 2008, Graco Inc. All Graco manufacturing locations are registered to ISO 9001.

www.graco.com

Revision J, February 2025